

HARDWIRING

Controllers are shipped with pre-wired AC power cord, Blowdown Solenoid & Inhibitor plugs.

Remove the Blowdown Solenoid plug from terminals **White1** & **Bs-Black** to hardwire a motorized ball valve.

