

!!! IMPORTANT – PLEASE READ !!!

ProMinent® SYSTEMS

SITE DELIVERY AND STORAGE CHECKLIST

- 1. Check packing list for completeness and note any missing items immediately.**
- 2. The skid may have been jarred during shipping. Inspect equipment and shipping container for damage before accepting delivery. Make note on the carrier's bill-of-lading the extent of the damage, if any, and notify the carrier. Save the shipping container until your system is started up.**
- 3. Store equipment on firm level surface in original packing container. Do not store equipment where it may be exposed to extreme temperatures, precipitation, humidity, or dust. Avoid direct sunlight that could overheat and damage equipment.**

WARNING – PUMPS MAY BE FILLED WITH OIL WHICH COULD LEAK IF TILTED

Ambient Conditions for storage and transport:

Temperature:	14°F to 120°F
Air humidity:	max. 95% relative humidity, non-condensing

Please call if you have questions.

**ProMinent Fluid Controls, Inc.
RIDC Park West
136 Industry Drive
Pittsburgh, PA 15275-1014
Phone: (412) 787-2484
Fax: (412) 787-0704**