

!!! IMPORTANT – PLEASE READ !!!

ProMinent® SYSTEMS

PRE-INSTALLATION CHECKLIST

- 1. Mount equipment on hard flat level surface. Stainless steel or FRP angle may be used to fasten skids down.**
- 2. Do not install equipment in areas of extreme heat, cold, dust or humidity. Avoid areas where objects or fluids can drop from overhead.**
- 3. Install piping so connections properly meet skid termination points. Do not “stretch” field installed piping to meet skid termination points. Stressed plastic piping will fail!**
- 4. Check the tightness on all unions. Hand tighten only - no tools. Unions incorporate an o-ring seal. Ensure that the o-ring is seated properly before tightening.**
- 5. Check the piping for breakage. The skid may have been jarred during shipping.**
- 6. Allow provisions for draining the system piping. Skid components will require maintenance. Ensure that chemicals can be evacuated from skid piping and components.**
- 7. Do not down-size piping to or from system. Piping should be at least equal in diameter to piping on skid and one or two sizes larger for long runs.**
- 8. Install suction line strainer if one was not included with your packaged system**
- 9. Avoid getting dirt in piping during installation. Plug ends of piping with rags if construction activities are underway. All debris must be flushed from piping before system start-up.**
- 10. Check electrical connections to be sure proper voltage is supplied to unit.**

Please call if you have questions.

**ProMinent Fluid Controls, Inc.
RIDC Park West
136 Industry Drive
Pittsburgh, PA 15275-1014
Phone: (412) 787-2484
Fax: (412) 787-0704**