

November 2000-1

ProMinent Fluid Controls Service Bulletin

GALA and Beta Pump Relay Retrofitting and Wiring

Part Numbers



Part Number 1002526-Alarm/fault relay (Option 1, N/C changeover relay)

Part Number 1002528-Alarm/fault and pacing relay (Option 4, As option 1 + pacing relay, one input each)



NOTE: Options 3 and 5 must be reprogramed at ProMinent.

Installation

- ☑ DISCONNECT POWER FROM THE PUMP.
- ☑ Flush the liquid end of the pump.
- ☑ Place the pump relay punchout side up on a solid surface.
- ☑ Using a punch and hammer, knock out the relay punchout (a).

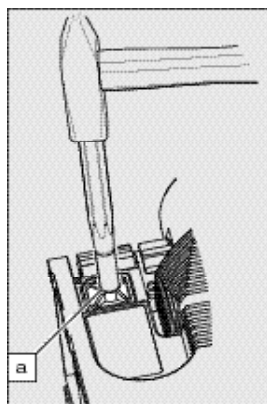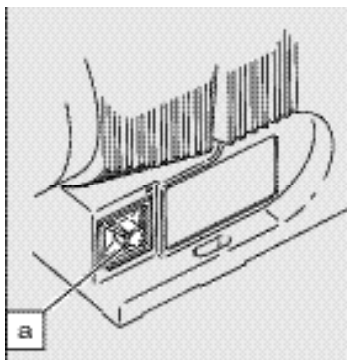


- ☑ Remove the punchout from the pump.
- ☑ Remove any sharp edges from the opening with a file.
- ☑ Inspect the backside of the relay connector flange to insure the seal is positioned against the flange.
- ☑ Hold the relay component in your right hand by the corners with the screw holes in.
- ☑ Hold the upper corner of the lower edge of the relay component against the guide rail of the pump

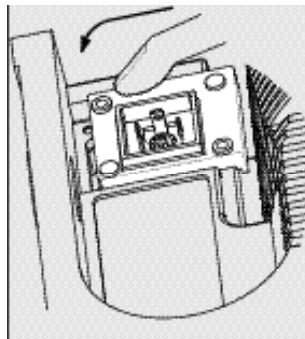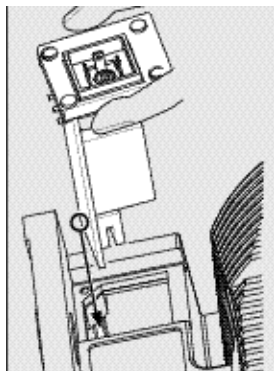

base.

- ☑ Inspect the backside of the relay component flange to ensure the seal is positioned correctly.
- ☑ Push the relay component into the opening until the component reaches the pump contact.
- ☑ Check to ensure the relay component does not move back and forth.
- ☑ Position the relay component in the opening.
- ☑ Screw the cover on the pump housing.
- ☑ Fit the seal into the frame of the cable receptacle.
- ☑ Screw on the relay cable (b).
- ☑ The alarm/fault relay is normally closed and the pacing relay is normally open.

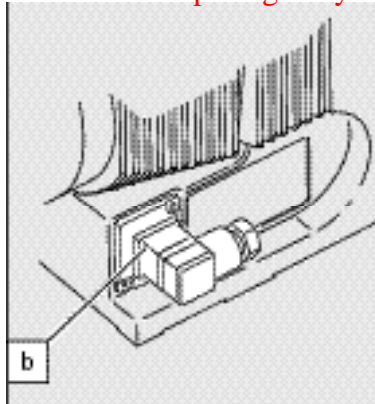

Wiring

Alarm/Fault indicating option

CSA approved cable

White
Red
Black

Contact

NO (normally open)
NC (normally closed)
C (common)

3-wire cable

White
Green
Brown

Alarm/Fault indicating and pacing relay option

Contact

NO (normally open)
C (common)

4-wire cable

Yellow
Green

Relay

Alarm/fault indicating relay
Alarm/fault indicating relay

NO (normally open)
C (common)

White
Brown

Pacing relay
Pacing relay