







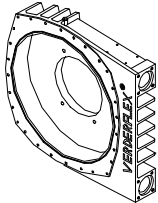



VERDERFLEX

VF10 Spare Components

Ref	Description	Part No.	No-Off
2	Casing	129.0092	1
			
59	Front Cover O-ring	129.0075	1
			
	(158mmØ x 3mm approx)		
49	Clear Front Cover Optional Metal Cover	129.0039.P 129.0039.M	1
54	Low Pressure Rotor High Pressure Rotor	129.1117.3 129.1117	1
			
50	Taper Lock Bush Type 1610 (25mm Bore) Type 1610 (30mm Bore)	129.1265 129.0063	1 1
			
36	Hose	See below	1
			
	NR (black) NBR (black) EPDM (black) CSM (black) NBR (white)	129.0001 129.0512 129.0010 129.2010 129.0521	
15	Drive Gasket	129.0479	1
			
21/22	VF10/15 Filler Tube & Cap	129.0759	1
			
26/30	Port Flange O Ring (Inner) Hosetail Port Flange O Ring(Inner)	129.1398.F 129.1398.H	10 / Pack
32	Port Flange O Ring Pack (Outer)	129.1430	10 / Pack

Ref Description Part No. No-Off

Flange Sealing Kits – Containing:

32	Port Flange O-ring (outer) (44 x 3.5)		2
			
26/30	Port Flange O-ring (inner) (12 x 3.0)		2
			
20	Sealing Ring		2
			
	129.1031.F - (To Suit Flanged Port Flanges)	or	
	129.1031.H - (To Suit Hosetail Port Flanges)		

Port Flange Assembly

	Flange	Hosetail
24	Flanged PN16 Flanged ANSI 150lb	129.0884 MS or SS 129.1334 MS or SS
29	Flanged JIS Hosetail Tri Clamp	129.1021 MS or SS 129.0892 MS or SS 129.1282.SS

Inserts

	Flange	Hosetail
25	Flanged St. St. Flanged Polyprop. Flanged PVDF	129.1408.SF 129.1408.PF 129.1408.VF
31	Hosetail St.St.	129.1408.SH

Verderlube - VF10 Standard Quantity



½ litre Verderlube
½ litre Verdersil

129.1418
129.1372

VF10 Fastener Kits (See Detail Next Page) Rated: P=Plated, SS=Stainless

VF10 Std.Mounting Frame Fastener Kit	129.0900.1P
VF10 Port Flange Ass'y Fastener Kit	129.0900.3P
VF10 Casing Ass'y Fastener Kit	129.0900.4P
VF10 Long Couple Mounting Frame Fastener Kit	129.0900.5P

VERDERFLEX

VF10 Fastener Kit Breakdown

VF10 Mounting Frame Assembly Fastener Kit – 129.0900.1P

Ref	Part	Torque	Use	Quantity
10	M6 Washer		Mounting Frame to Pump Case	4
11	M6 x 16 Bolt	6Nm (4.3ft/lb)	Mounting Frame to Pump Case	4

VF10 Port Flange Assembly Fastener Kit – 129.0900.3P

Ref	Part	Torque	Use	Quantity
28	M6 Washer		Port Flange To Pump Case	8
27	M6 X 30 Bolt	8Nm (5.8ft/lb)	Port Flange To Pump Case	8

VF10 Casing Assembly Fastener Kit – 129.0900.4P

Ref	Part	Torque	Use	Quantity
17	M6 X 40 Bolt	6Nm (4.3ft/lb)	Drive To Gearbox Connection	4
16	M6 Washer		Drive To Gearbox Connection	8
18	M6 Nylon Insert Nut		Drive To Gearbox Connection	4
40	M6 X 16 Bolt	3Nm (2.2ft/lb)	Front Cover To Pump Case	12
39	Nylon Washer		Front Cover To Pump Case	12
34	3/8" BSP Plug	22Nm (15.9ft/lb)	Drain Plug	2
35	M16 Nylon Washer		Drain Plug	2


VF10 Mounting Frame Assembly Fastener Kit – 129.0900.5P

Ref	Part	Torque	Use	Quantity
10	M6 Washer		Mounting Frame to Pump Case	4
11	M6 x 16 Bolt	6Nm (4.3ft/lb)	Mounting Frame to Pump Case	4
06	M8 x 25 Bolt	10Nm (7.2ft/lb)	Long Coupled Only – Baseplate	4
08	M8 Nylon Insert Nut		Long Coupled Only – Baseplate	4
07	M8 Washer		Long Coupled Only – Baseplate	8
	M8 x 24 Dowel Pin		Long Coupled Only – Baseplate	8

VERDERFLEX

VF10 Spare Components

Ref	Description	Part No.	No-Off
-----	-------------	----------	--------

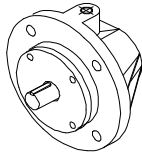

19b	Bearing Housing Assembly	129.0780	1
	Bearing House O Ring Kit	129.1440	1 Pack of 2
	Bearing House Lip Seal Kit	129.1450	1 Pack of 2
	Bearing House Bearing Kit	129.1460	1 Pack of 2
	Bearing House Shaft Key Kit	129.1470	1
	Bearing House Shaft	129.0554	1
	Seal Plate	129.0566	1
33	Close Coupled Mounting Frame Mild Steel	129.1314.MC	1
	Close Coupled Mounting Frame Stainless Steel	129.1314.SC	1
9/13	Long Coupled Mounting Frame Mild Steel	129.1314.ML	1