

# Operating Instructions

## DULCOMETER® D1C

Part 2: Adjustment and Operation,  
Measured variable chlorite

D1C2-CIT-001-GB



Type D



Type W

D1C A

Please enter the identity code of your device here.

**Please completely read through operating instructions! · Do not discard!  
The warranty shall be invalidated by damage caused by operating errors!**



---

## 2 Contents / General User Information

---

|   | Page |
|---|------|
| 1 Device Identification / Identity Code ..... | 2    |
| 2 General User Information .....              | 3    |
| 3 Device Overview / Controls .....            | 4    |
| 4 Functional Description .....                | 5    |
| 5 Display Symbols .....                       | 6    |
| 6 Operation .....                             | 7    |
| 7 Restricted Operating Menu .....             | 8    |
| Overview .....                                | 8    |
| Description .....                             | 9    |
| 8 Complete Operating Menu .....               | 12   |
| Overview .....                                | 12   |
| Description .....                             | 13   |
| 9 Troubleshooting .....                       | 24   |

### General User Information


These operating instructions describe the technical data and function of the series DULCOMETER® D1C controller, provide detailed safety information and are divided into clear steps.







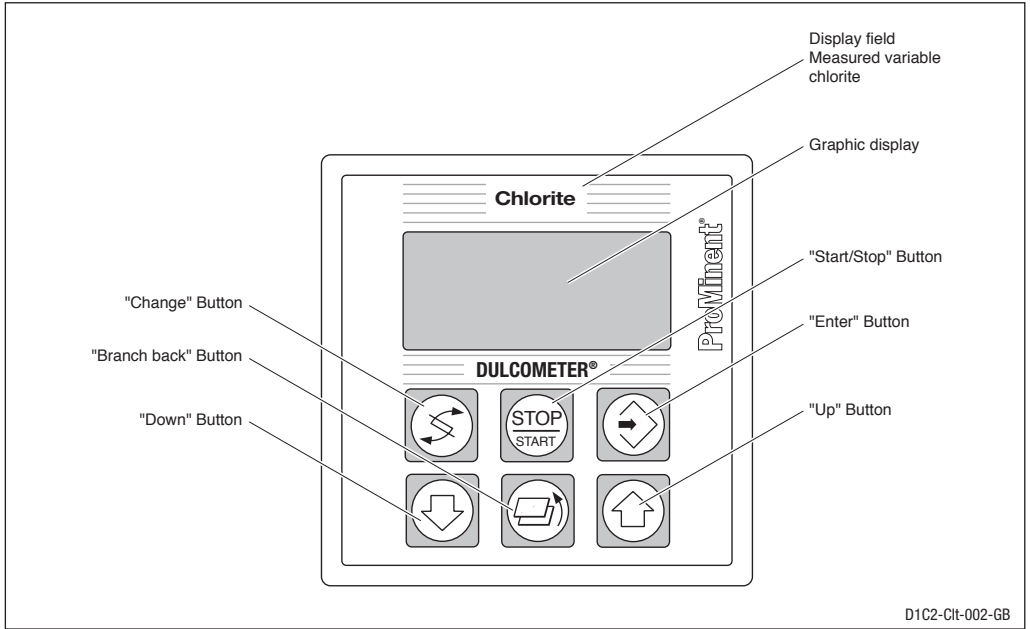

#### **IMPORTANT**

- ***Please observe the parts of these operating instructions applicable to your particular version! This is indicated in the Section “Device Identification / Identity Code”!***
- ***Correct measuring and dosing is only possible in the case of impeccable operation of the probe. The probe has to be calibrated / checked regularly!***

### 3 Device Overview / Controls



|  |   |
|--|---|
|    | <p><b>CHANGE Button</b></p> <p>To change over within a menu level and to change from one variable to another within a menu point.</p> |
|  | <p><b>START/STOP Button</b></p> <p>Start/stop of control and metering function.</p>   |
|  | <p><b>ENTER Button</b></p> <p>To accept, confirm or save a displayed value or status. For alarm acknowledgement.</p>                  |

|   |  |
|---|--|
|    | <p><b>UP Button</b></p> <p>To increase a displayed numerical value and to change variables (flashing display).</p>   |
|  | <p><b>BRANCH BACK Button</b></p> <p>Back to permanent display or to start of relevant setting menu.</p>              |
|  | <p><b>DOWN Button</b></p> <p>To decrease a displayed numerical value and to change variables (flashing display).</p> |

---

## 4 Functional Description

---

### NOTE

*Please refer to the description of the complete operating menu in Section 8 for a detailed description of the individual characteristics of the DULCOMETER® D1C controller!*

### 4.1 Operating Menu

The D1C controller permits settings to be made in two different menus. All values are preset and can be changed in the **complete operating menu**.

The controller is delivered with a **restricted operating menu** so that the D1C controller can be used effectively in many applications from the very onset. If adaptations prove to be necessary, all relevant parameters can then be accessed by switching over to the complete operating menu (see "General settings").

### 4.2 Access Code

Access to the setting menu can be prevented by setting up an access code. The D1C controller is supplied with the access code 5000 which permits free access to the setting menu. The calibration menu remains freely accessible even when access to the setting menu is blocked by the code.

### 4.3 Control

The D1C can operate as a proportional controller or as a PID controller - dependent on the device version (see identity code) and the setting.

The controlled variable is recalculated once a second. Control procedures which require rapid correction of setpoint deviations (less than approx. 30 seconds) cannot be processed with this controller. The cycle times must be taken into consideration when activating solenoid valves (pulse length) in the same way as their running times when activating servomotors (3-point).

Via the control input pause, the control function (selection of controlled variable) can be switched off. The calculation of the controlled variable starts again after cessation of "pause".

### 4.4 Feed Forward Control

The D1C controller can process a signal of a feed forward control. Depending on the device version (see identity code) and the setting, this signal can be obtained in any form of a 0–20 mA or 4–20 mA signal or as a digital contact signal with the maximum frequencies 10 Hz or 500 Hz.

During start-up, the zero point has to be checked. The multiplicative feed forward control is not designed for switching off permanently the actuating variable (signal ≈ 0).

This signal can be used, for example, for flow-proportional metering (multiplicative effect) or feed forward-dependent basic load metering (additive effect). The result of control variable calculation from the proportional or PID control is multiplied by or added to the feed forward signal. A multiplicative feed forward variable at the level of the set rated value carries over the calculated control variable unchanged into the controlled variable:

$$\text{Controlled variable} = \text{Feed forward variable} / \text{rated value} \times \text{calculated control variable}$$

An additive feed forward variable at the level of the rated value results in maximum controlled variable:

$$\text{Controlled variable (max. 100 \%)} = \text{Feed forward variable} / \text{rated value} \times \text{max. controlled variable} + \text{calculated control variable}$$

### 4.5 Error Messages


Error messages and information are indicated on the bottom line in the permanent display 1. Errors to be acknowledged (acknowledgement switches off the alarm relay) are indicated by the "E". Errors/notes which still apply after acknowledgement are indicated alternately. During correction variable processing (temperature for correction of pH-value), the value is indicated in the same line as the error/note. Faults which are rectified of their own accord due to changed operating situations are removed from the permanent display without the need for acknowledgement.

## 5 Display Symbols

The display of the DULCOMETER® D1C controller uses the following symbols:

| Description                                 | Comment  | Symbol |
|---|--|--------|
| Limit value transgression<br>Relay 1, upper | Symbol<br>left   | ↑      |
| Relay 1, lower                              | Symbol<br>left   | ↓      |
| Relay 2, upper                              | Symbol<br>right  | ↑      |
| Relay 2, lower                              | Symbol<br>right  | ↓      |
| Metering pump 1 (chlorite)<br>Control off   | Symbol<br>left   | ■      |
| Control on                                  | Symbol<br>left   | □      |
| Metering pump 2 (De-Clt)<br>Control off     | Symbol<br>right  | ■      |
| Control on                                  | Symbol<br>right  | □      |
| Solenoid valve 1 (chlorite)<br>Control off  | Symbol<br>left   | ▲      |
| Control on                                  | Symbol<br>left   | △      |
| Solenoid valve 2 (De-Clt)<br>Control off    | Symbol<br>right  | ▲      |
| Control on                                  | Symbol<br>right  | △      |
| Servomotor<br>Control, open relay           |  | ▲    △ |
| Control, close relay                        |  | △    ▲ |
| Without control                             |  | ▲    ▲ |
| Position feedback                           | Thickness of bar<br>increases from left to right<br>during opening | ▬      |
| Stop button pressed                         |  | O      |
| Manual metering                             |  | M      |
| Fault                                       |  | ε      |

## 6 Operation

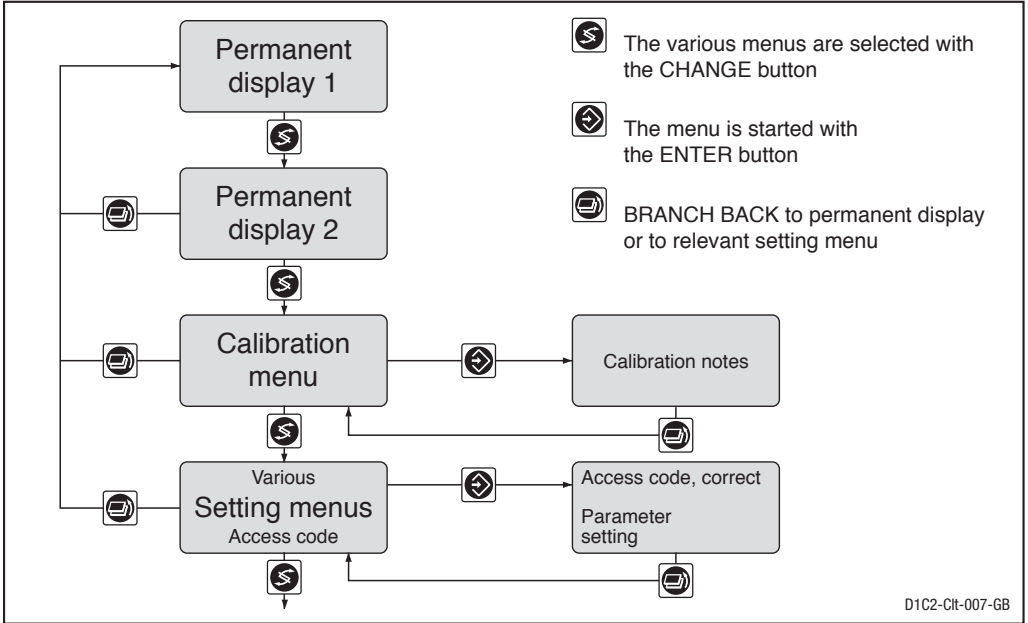


### NOTE

**Access to the setting menus can be barred with the access code!**

**The number and scope of setting menus is dependent on the device version!**


**If the access code is selected correctly in a setting menu, then the following setting menus are also accessible!**

**If within a period of 10 minutes no button is pushed, the unit automatically branches back from the calibrating menu or a setting menu to the permanent display 1.**

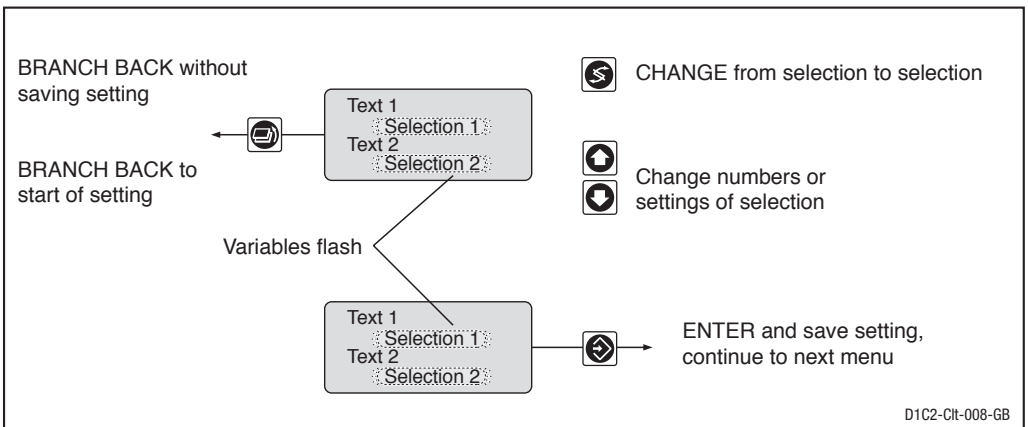


# 7 Restricted Operating Menu / Overview

The restricted operating menu permits simple operation of the most important parameters. The following overview shows the settings which can be selected:

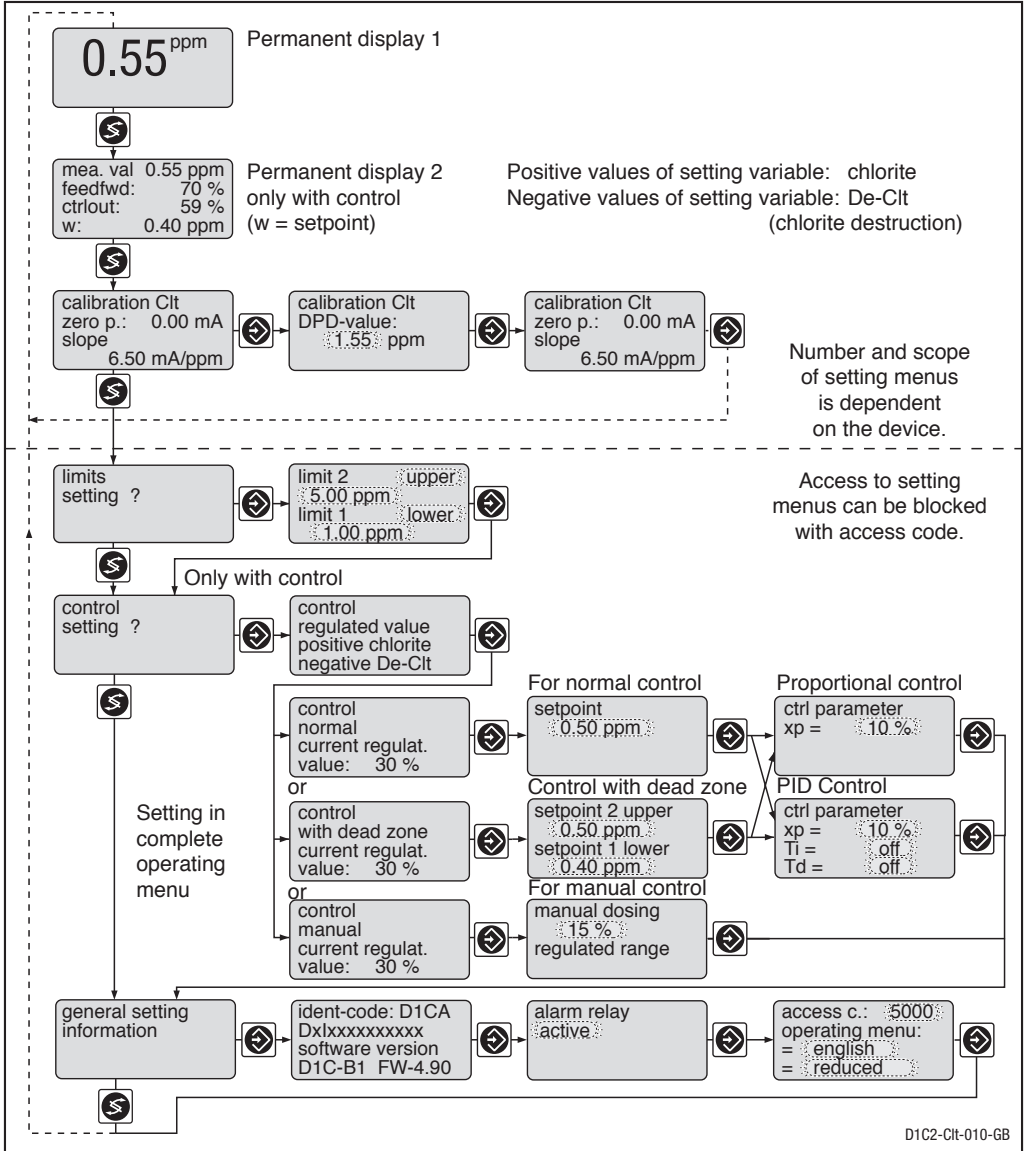



# Restricted Operating Menu / Description

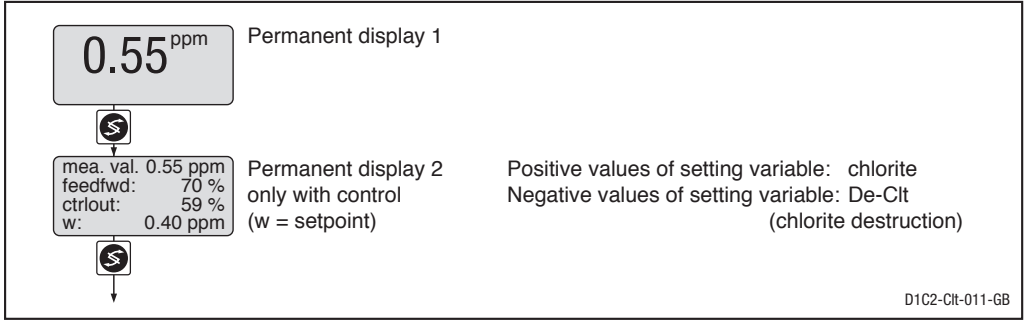


## Calibrating the Chlorite Probe

During calibration, the control function persists. The standard signal of the output (measured value) remains unchanged. The measured value registered during the start of the calibration is proposed as the DPD value; this value is adjustable (arrow keys!). Calibration is only possible if the DPD value is  $\geq 2\%$  of the measuring range. On successful completion of calibration, all error checks which refer to the measured value are restarted.



### ATTENTION

**The measuring range of the probe must agree with the set measuring range (factory setting: 0–2 ppm). The measuring range must be reset prior to calibration (refer to page 15).**

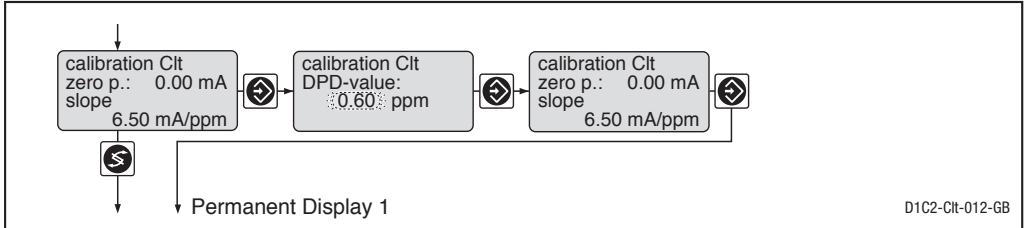


|                | Initial value | Possible values |             |             | Remarks                             |
|----------------|---------------|-----------------|-------------|-------------|-------------------------------------|
|                |               | Increment       | Lower value | Upper value |                                     |
| Measured value |               | 0.01 ppm        | -0.20 ppm   | 2.20 ppm    | for measurement range up to 2 ppm   |
|                |               | 0.001 ppm       | -0.050 ppm  | 0.550 ppm   | for measurement range up to 0.5 ppm |

| Error message   | Condition  | Effect          |
|---|--|-----------------|
| Calibration Clt not possible!<br>Probe slope too low  | ClO <sub>2</sub> slope too low<br>( $<25\%$ of norm slope)   | Calibrate again |
| Calibration Clt not possible!<br>Probe slope too high | ClO <sub>2</sub> slope too high<br>( $>300\%$ of norm slope) | Calibrate again |
| DPD value too low<br>DPD > x.xx ppm                   | DPD $<2\%$ measuring range                                   |                 |


# Restricted Operating Menu / Description

## Limits

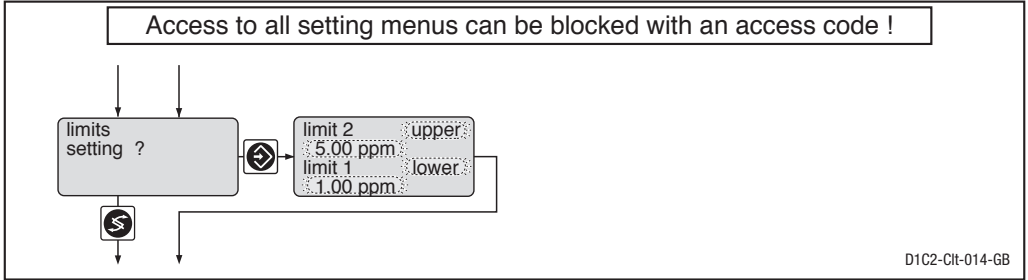

|                             | Initial value                            | Possible values          |             |             | Remarks   |
|-----------------------------|--|--------------------------|-------------|-------------|---|
|                             |  | Increment                | Lower value | Upper value |   |
| Type of limit transgression | Limit 1: lower<br>Limit 2: upper         | upper<br>lower<br>off *) |             |             | Limit transgression when exceeding or dropping below value *) only with limit relays for CLT 1-mA-0.5 ppm |
| Limit value                 | Limit 1: 0.025 ppm<br>Limit 2: 0.375 ppm | 0.001 ppm                | -0.05 ppm   | 0.550 ppm   |   |
|                             | Limit 1: 0.10 ppm<br>Limit 2: 1.50 ppm   | 0.01 ppm                 | -0.20 ppm   | 2.20 ppm    | for CLT 1-mA-2 ppm  |


## Control

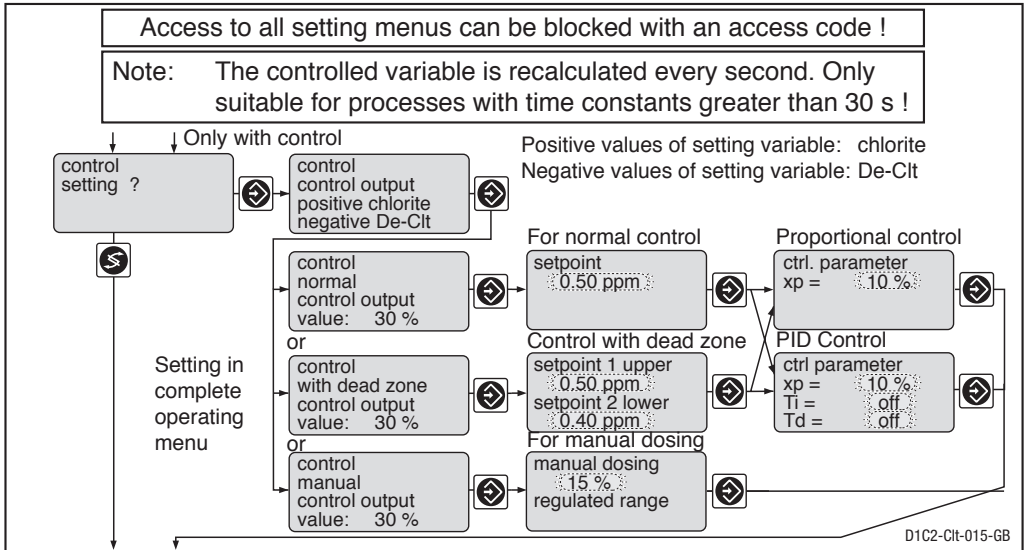

# Restricted Operating Menu / Description

|                      | Initial value | Possible values |                                |                                | Remarks   |
|----------------------|---------------|-----------------|--------------------------------|--------------------------------|---|
|                      |               | Increment       | Lower value                    | Upper value                    |   |
| Setpoint             | 0.50 ppm      | 0.01 ppm        | lower limit<br>measuring range | upper limit<br>measuring range | 2 setpoints necessary<br>for control with dead zone.<br>Setpoint 1 > setpoint 2 |
| Control parameter xp | 10 %          | 1 %             | 1 %                            | 500 %                          | xp referred to measuring range  |
| Control parameter Ti | off           | 1 s             | 1 s                            | 9999 s                         | Function off = 0 s  |
| Control parameter Td | off           | 1 s             | 1 s                            | 2500 s                         | Function off = 0 s  |
| Manual metering      | 0 %           | 1 %             | -100 %                         | +100 %                         |   |


## General Settings

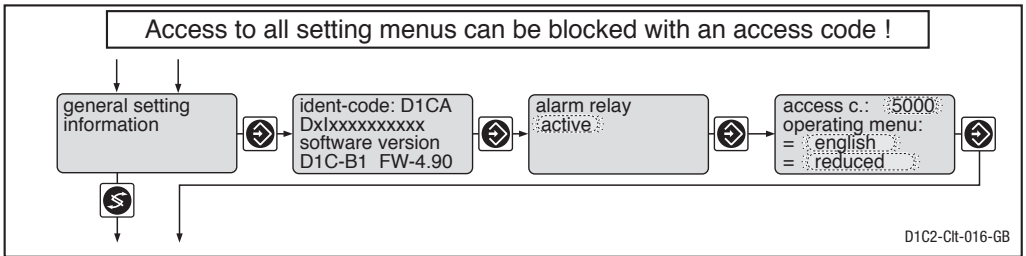


|                | Initial value           | Possible values  |             |             | Remarks |
|----------------|-------------------------|--|-------------|-------------|---------|
|                |                         | Increment  | Lower value | Upper value |         |
| Alarm relay    | active                  | active<br>not active   |             |             |         |
| Access code    | 5000                    | 1  | 1           | 9999        |         |
| Language       | as per identity<br>code | German<br>English<br>French<br>Italian<br>Dutch<br>Spanish<br>Portuguese<br>Czech<br>Japanese<br>(as per identity<br>code) |             |             |         |
| Operating menu | restricted              | restricted<br>complete   |             |             |         |

# 8 Complete Operating Menu / Overview

All parameters of the controller can be set in the complete operating menu (access see previous page). The following overview shows the settings which can be selected:

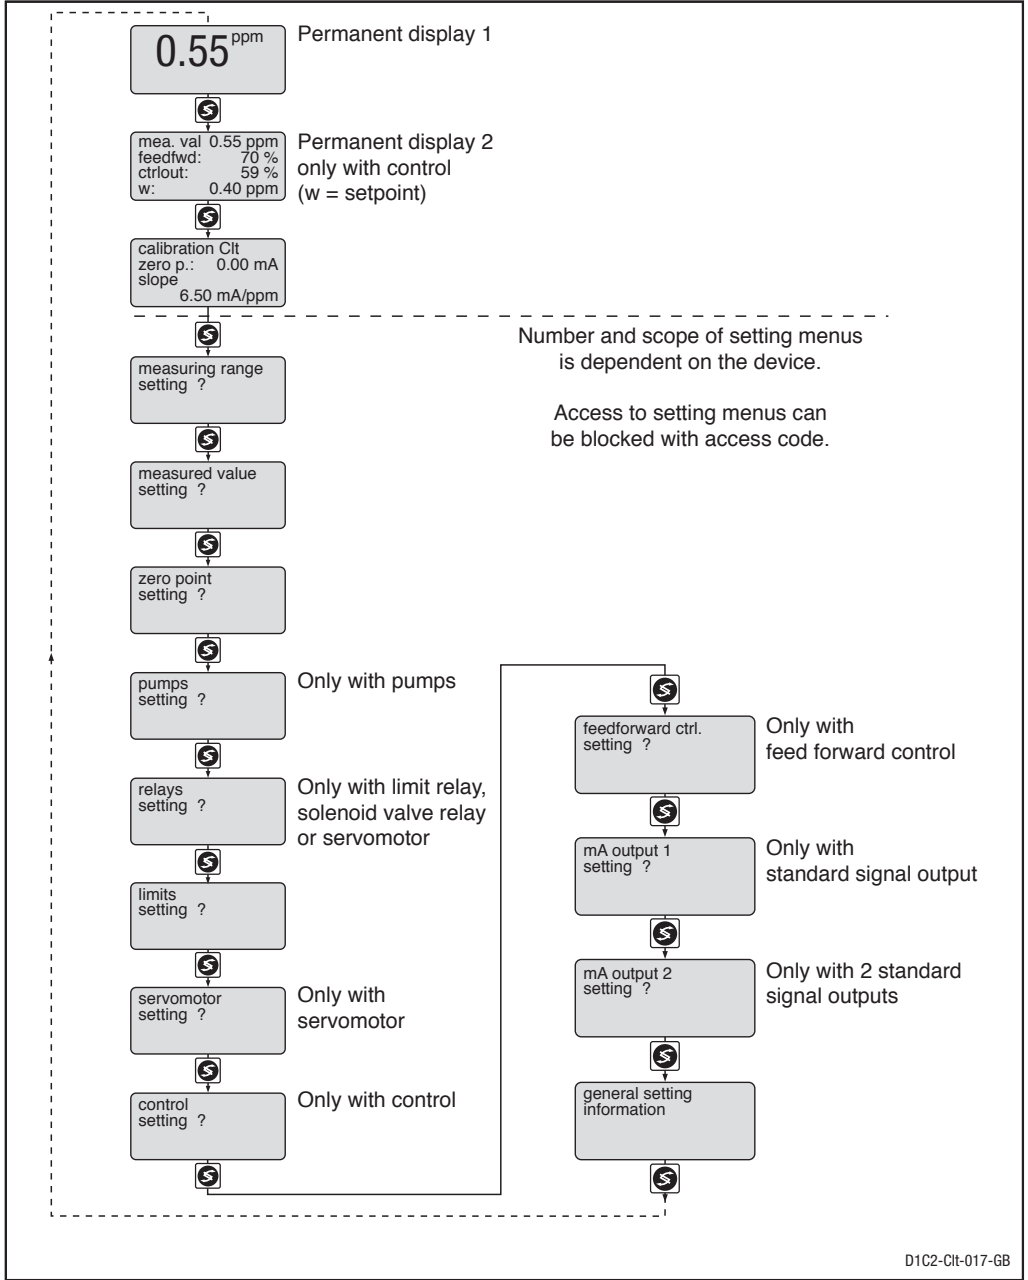

# Complete Operating Menu / Description

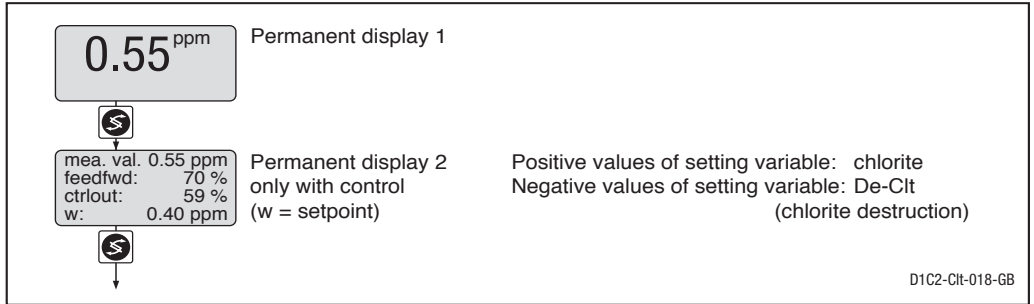

## Calibrating the Chlorite Probe (zero point and slope)


The control function is retained during the calibration procedure. The standard signal of the output (measured value) is not changed. The measured value frozen at the start of calibration is offered as the DPD value; this value is adjustable (arrow keys!). Calibration is only possible when the DPD value is  $\geq 2\%$  of the measurement range. Once calibration has been successfully completed, all fault tracing procedures which refer to the measured value are restarted.

Zero point calibration must be carried out under real conditions in water free of chlorite. Calibration is normally only necessary when measuring at the lower limit of the measuring range.



### ATTENTION

**The measuring range of the probe must agree with the set measuring range (factory setting: 0-2 ppm). The measuring range must be reset prior to calibration (refer to page 15).**

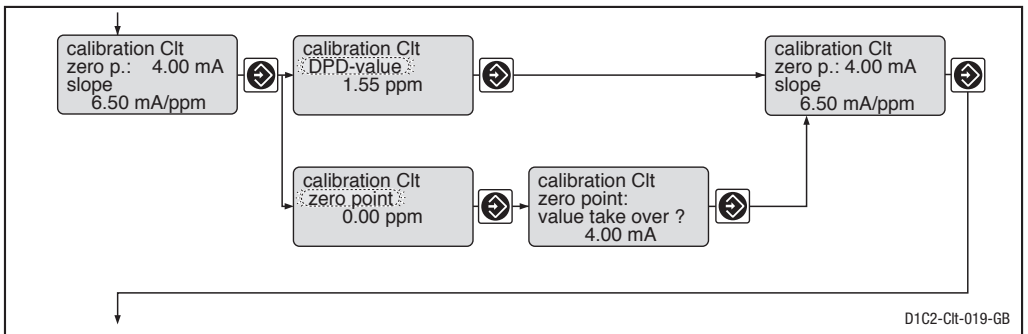


|  | Initial value  | Possible values |             |             | Remarks                             |
|--|----------------|-----------------|-------------|-------------|-------------------------------------|
|  |                | Increment       | Lower value | Upper value |                                     |
|  | Measured value | 0.01 ppm        | -0.20 ppm   | 2.20 ppm    | for measurement range up to 2 ppm   |
|  |                | 0.001 ppm       | -0.050 ppm  | 0.550 ppm   | for measurement range up to 0.5 ppm |

# Complete Operating Menu / Description

| Error message   | Condition   | Effect  |
|---|---|---|
| Calibration Clt not possible!<br>Probe slope too low  | ClO <sub>2</sub> slope too low<br>(<25 % of norm slope)   | Calibrate again   |
| Calibration Clt not possible!<br>Probe slope too high | ClO <sub>2</sub> slope too high<br>(>300 % of norm slope) | Calibrate again   |
| DPD value too low<br>DPD > x.xx ppm                   | DPD <2 % of<br>measuring range                            |   |
| Zero point too low<br>Zero point too high             | < 3 mA<br>> 5 mA at 2 ppm<br>> 6 mA at 0.5 ppm            | Check probe/cable<br>Repeat calibration in<br>chlorite-free water |


## Measuring Range

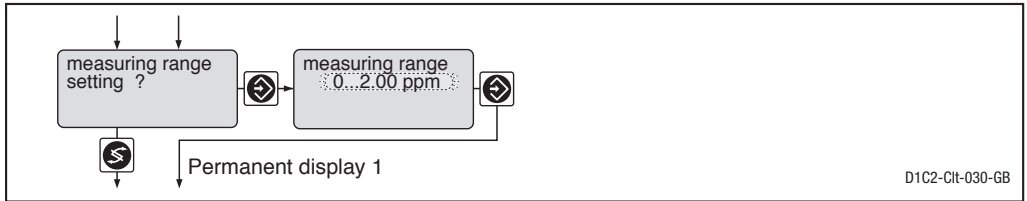

|                 | Initial value | Possible values          |             | Remarks |
|-----------------|---------------|--------------------------|-------------|---------|
|                 |               | Increment                | Lower value |         |
| Measuring range | 0...2 ppm     | 0...0.5 ppm<br>0...2 ppm |             |         |

**IMPORTANT**  
 *If the area allocation is changed, the chlorite must be re-calibrated and all the menu settings must be checked!*

## Measured Value

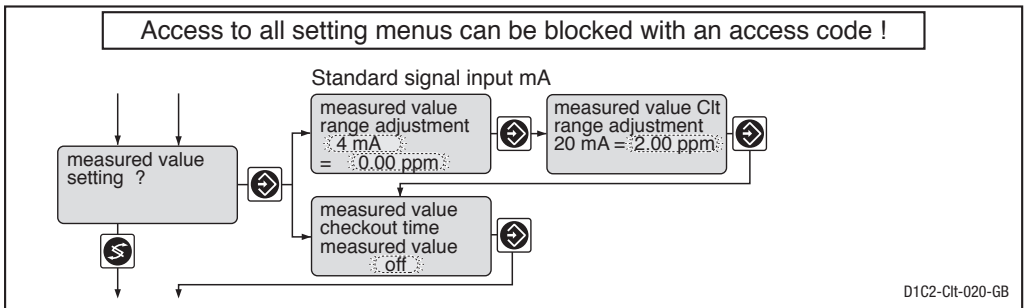


**IMPORTANT**  
 *If the area allocation is changed, the chlorite must be re-calibrated and all the menu settings must be checked!*

# Complete Operating Menu / Description


|   | Initial value      | Possible values       |                        | Upper value           | Remarks  |
|---|--------------------|-----------------------|------------------------|-----------------------|--|
|   |                    | Increment             | Lower value            |                       |  |
| Standard signal input<br>lower signal limit | 4 mA               | 0 mA<br>4 mA          |                        |                       |  |
| Allocated measured<br>value lower           | 0 ppm<br>0 ppm     | 0.01 ppm<br>0.001 ppm | -0.20 ppm<br>-0.05 ppm | 2.20 ppm<br>0.550 ppm | for CLT1-mA-2 ppm<br>for CLT1-mA-0.5 ppm   |
| upper                                       | 2.0 ppm<br>2.0 ppm | 0.01 ppm<br>0.001 ppm | -0.20 ppm<br>-0.05 ppm | 2.20 ppm<br>0.550 ppm | for CLT1-mA-2 ppm<br>for CLT1-mA-0.5 ppm   |
| Checkout time                               | off                | 1 s                   | 1 s                    | 9999 s                | Constant measurement signal<br>results in message and alarm.<br>Function off = 0 s |

## Zero point

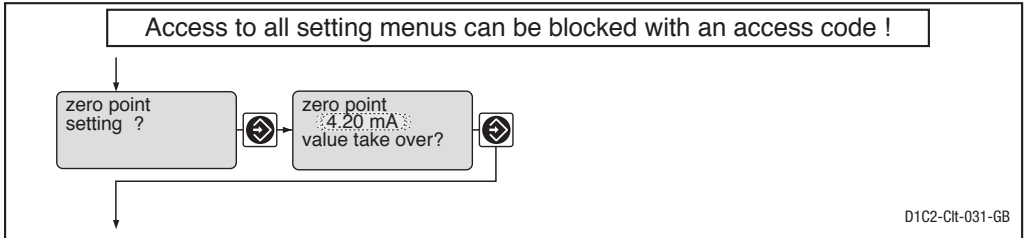

|  | Initial value | Possible values |             | Upper value | Remarks |
|--|---------------|-----------------|-------------|-------------|---------|
|  |               | Increment       | Lower value |             |         |
| Zero point setting<br>CLT 1-mA-0.5 ppm | 4.80 mA       | 0.01 mA         | 3.80 mA     | 6.00 mA     |         |
| CLT 1-mA-2 ppm                         | 4.20 mA       |                 |             | 5.00 mA     |         |


## Pumps

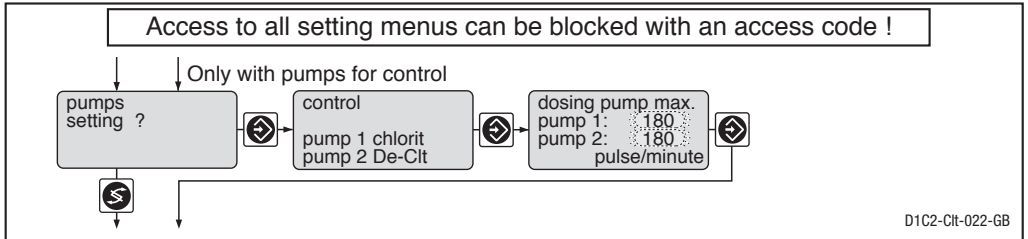

|  | Initial value | Possible values |             | Upper value | Remarks             |
|--|---------------|-----------------|-------------|-------------|---------------------|
|  |               | Increment       | Lower value |             |                     |
| Max. stroke/minute of<br>pumps 1 and 2 | 180           | 1               | 1           | 500         | off = 0 strokes/min |

# Complete Operating Menu / Description


## Relay for power control

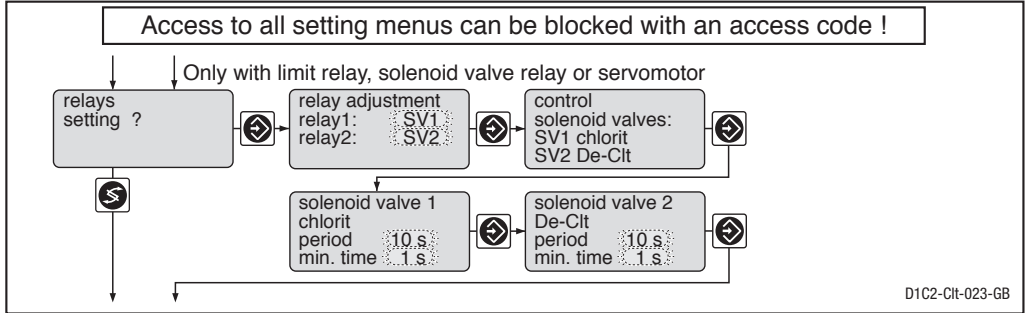

|                  | Initial value        | Possible values   |             |             | Remarks   |
|------------------|----------------------|---|-------------|-------------|---|
|                  |                      | Increment   | Lower value | Upper value |   |
| Relay adjustment | as per identity code |   |             |             |   |
| Relay 1          |                      | Solenoid valve 1<br>Limit value 1*<br>Actuator 1<br>off |             |             | *For "limit value", the relays remain active, even in the event of a fault. |
| Relay 2          |                      | Solenoid valve 2<br>Limit value 2*<br>Actuator 2<br>off |             |             |   |
| Cycle            | 10 s                 | 1 s   | 10 s        | 9999 s      |   |
| min. time        | 1 s                  | 1 s   | 1 s         | Cycle/2     |   |




# Complete Operating Menu / Description

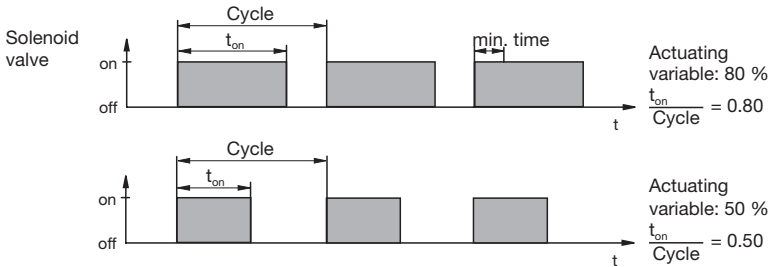


The switching time of the DULCOMETER® D1C (solenoid valve) depends on the actuating variable and the "min. time" (smallest permitted operating factor of the connected device). The actuating variable determines the ratio  $t_{on}/\text{cycle}$  and thus the switching times (see fig. above). The "min. time" influences the switching times in two situations:

a) theoretical switching time < min. time:

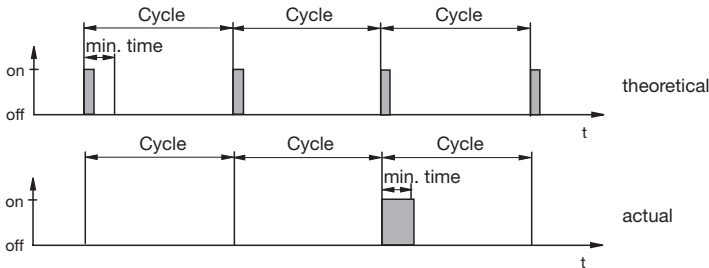

The DULCOMETER® D1C does not switch for a certain number of cycles until the sum of the theoretical switching times exceeds the "min. time". Then the DULCOMETER® D1C switches for the duration of this total time.


b) theoretical switching time > (cycle - min. time) and calculated switching time < cycle

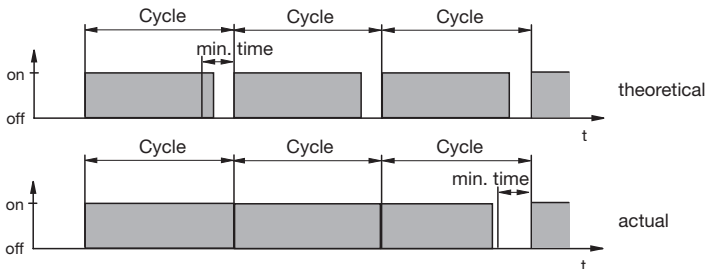

The DULCOMETER® D1C does not deactivate for a certain number of cycles until the differences between cycle and theoretical switching time exceed the "min. time".

# Complete Operating Menu / Description

## Limit values

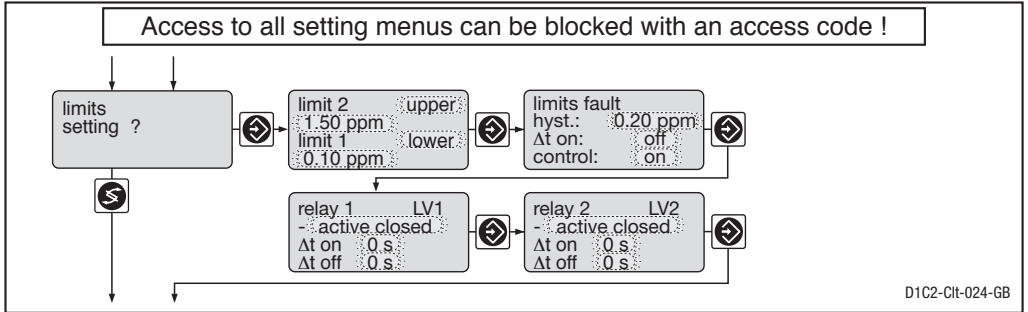

|                             | Initial value                            | Possible values          |             |             | Remarks  |
|-----------------------------|--|--------------------------|-------------|-------------|--|
|                             |  | Increment                | Lower value | Upper value |  |
| Type of limit transgression | Limit 1: lower<br>Limit 2: upper         | upper<br>lower<br>off *) |             |             | Limit transgression when exceeding or dropping below value *) only with limit relay for CLT 1-mA-0.5 ppm |
| Limit value                 | Limit 1: 0.025 ppm<br>Limit 2: 0.375 ppm | 0.001 ppm                | -0.05 ppm   | 0.550 ppm   |  |
| Limit value                 | Limit 1: 0.10 ppm<br>Limit 2: 1.50 ppm   | 0.01 ppm                 | -0.20 ppm   | 2.20 ppm    | for CLT 1-mA-2 ppm   |
| Switch-on delay Δt on       | 0 s                                      | 1 s                      | 0 s         | 9999 s      |  |
| Switch-off delay Δt off     | 0 s                                      | 1 s                      | 0 s         | 9999 s      |  |
| Hysteresis limits           | 0.010 ppm                                | 0.001 ppm                | 0 ppm       | 0.550 ppm   | Effective in direction of "cancelling limit transgression"   |
|                             | 0.04 ppm                                 | 0.01 ppm                 | 0 ppm       | 2.20 ppm    |  |
| Checkout time limits        | off                                      | 1 s                      | 1 s         | 9999 s      | Results in message and alarm.<br>off = 0 s:<br>Function switched off,<br>no message, no alarm            |

# Complete Operating Menu / Description


## Servomotor

Activation of the servomotor must be carried out with the same meticulous care as taken when calibrating a measuring probe. The **operating range** is defined by the total resistance range of the feedback potentiometer. The maximum limit of the range actually used is set by defining the **control range**.



### CAUTION


To ensure correct operation, the activation time of the actuator used should not be less than 25 seconds for the control range from 0...100 %!

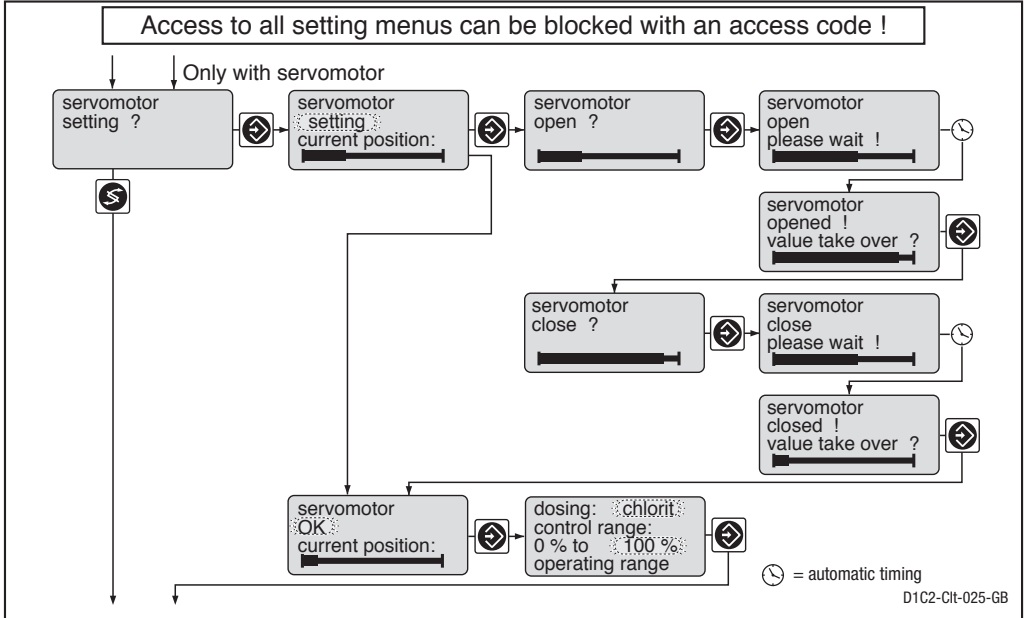

|                   | Initial value | Possible values      |      | Lower value | Upper value | Remarks                    |
|-------------------|---------------|----------------------|------|-------------|-------------|----------------------------|
|                   |               | Increment            |      |             |             |                            |
| Servomotor        | Setting       | Setting<br>ok<br>off |      |             |             |                            |
| Control direction | Chlorite      | Chlorite<br>De-Clit  |      |             |             |                            |
| Control range     | 100 %         | 1 %                  | 10 % | 100 %       |             | in % of<br>operating range |

# Complete Operating Menu / Description

## Control

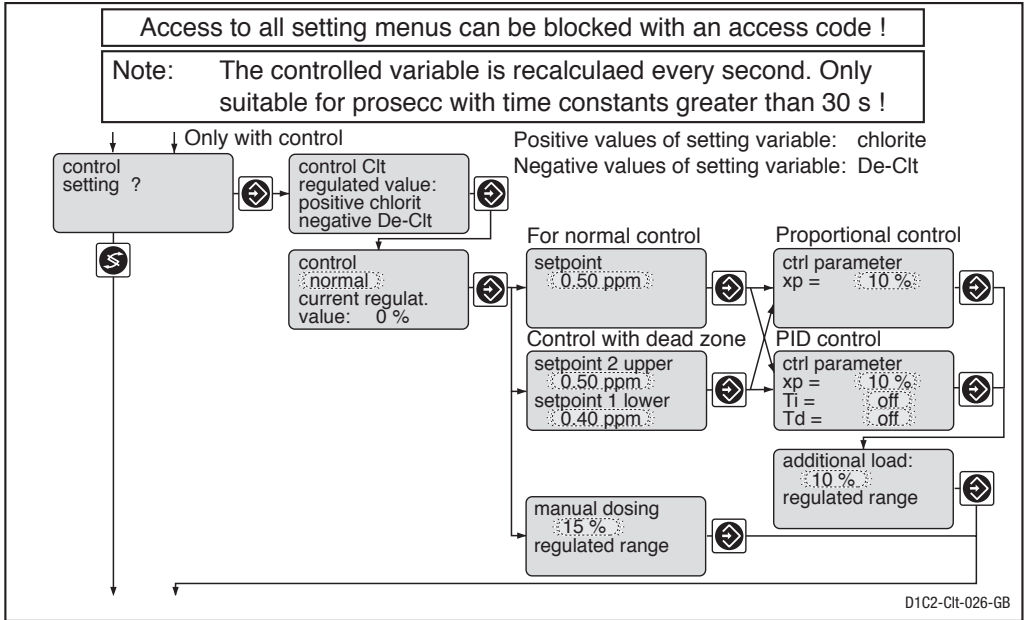

|                       | Initial value         | Possible values                    |                         |                       | Remarks  |
|-----------------------|-----------------------|------------------------------------|-------------------------|-----------------------|--|
|                       |                       | Increment                          | Lower value             | Upper value           |  |
| Control               | normal                | normal<br>with dead zone<br>manual |                         |                       | When controlling with dead zone, the regulated value is not used for measured values within the dead zone.<br>2 setpoints necessary for control with dead zone.<br>Setpoint 2 ≥ Setpoint 1 |
| Setpoint setting      | 0.100 ppm<br>0.20 ppm | 0.001 ppm<br>0.01 ppm              | -0.025 ppm<br>-0.10 ppm | 0.525 ppm<br>2.10 ppm |  |
| Control parameter xp  | 10 %                  | 1 %                                | 1 %                     | 500 %                 | xp referred to measuring range   |
| Control parameter Ti  | off                   | 1 s                                | 1 s                     | 9999 s                | Function off = 0 s   |
| Control parameter Td  | off                   | 1 s                                | 1 s                     | 2500 s                | Function off = 0 s   |
| Additional basic load | 0 %                   | 1 %                                | -100 %                  | +100 %                |  |
| Manual metering       | 0 %                   | 1 %                                | -100 %                  | +100 %                |  |

Abbreviations for control variables:


$x_p$ : 100 %/Kp (inverse proportional coefficient)

$T_i$ : Integration time of I-controller [s]

$T_d$ : Differential time of D-controller [s]


# Complete Operating Menu / Description

## Feed forward control

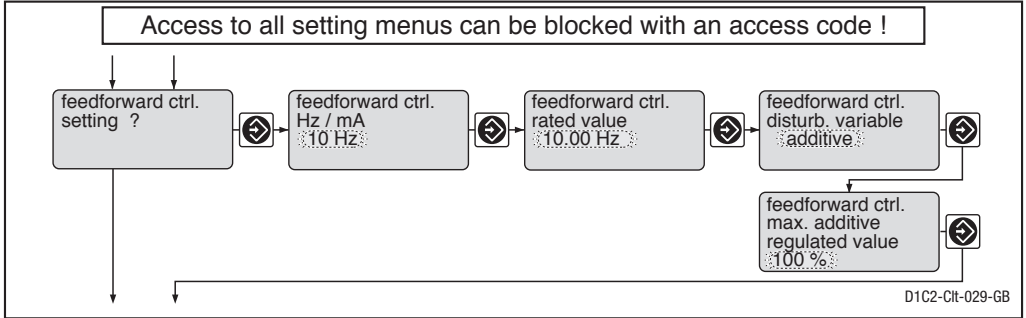


|                                  | Initial value                  | Possible values            |                          |                          | Remarks  |
|----------------------------------|--------------------------------|----------------------------|--------------------------|--------------------------|--|
|                                  |                                | Increment                  | Lower value              | Upper value              |  |
| Feed forward control (Flow)      | as per identity code           | None<br>10 Hz<br>500 Hz    |                          |                          | Signal processing:<br>Signal <0.02 Hz = No flow<br>Signal <0.2 Hz = No flow<br>Signal <0.2 mA = No flow<br>Signal <4.2 mA = No flow<br><br>Depended on signal type.<br>Maximum limitation of range used. |
| Feed forward control rated value | at standard signal:<br>4–20 mA | 0...20 mA<br>4...20 mA     |                          |                          |  |
|                                  | 10 Hz<br>500 Hz<br>20 mA       | 0.01 Hz<br>1 Hz<br>0.1 mA  | 0.1 Hz<br>1 Hz<br>0/4 mA | 10 Hz<br>500 Hz<br>20 mA |  |
| Feed forward control effect      | multiplicative                 | multiplicative<br>additive |                          |                          |  |
| Max. add. regulated value        | 100 %                          | 1 %                        | -500 %                   | +500 %                   |  |

## Standard Signal Output 1

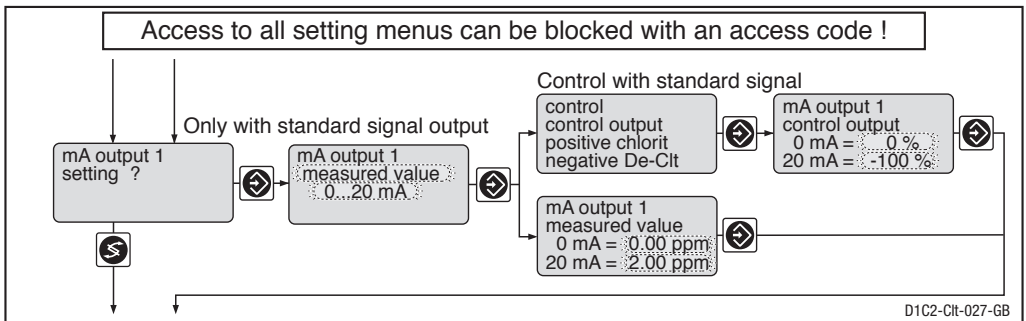


# Complete Operating Menu / Description

## Standard Signal Output 2

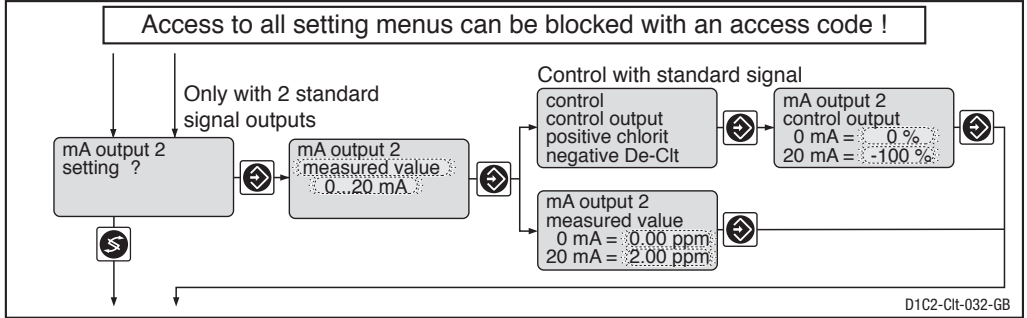

|                           | Initial value                 | Possible values                  |                        |                       | Remarks                                  |
|---------------------------|-------------------------------|----------------------------------|------------------------|-----------------------|--|
|                           |                               | Increment                        | Lower value            | Upper value           |  |
| Variable allocation       | as per identity code          | Measured value<br>Control output |                        |                       | If control is present                    |
| Output range              | 0...20 mA                     | 0...20 mA<br>4...20 mA           |                        |                       |  |
| Range measured value      | 0...1.00 ppm<br>0...0.500 ppm | 0.01 ppm<br>0.001 ppm            | -0.20 ppm<br>-0.05 ppm | 2.20 ppm<br>0.550 ppm | for CLT1-mA-2 ppm<br>for CLT1-mA-0.5 ppm |
| Range controlled variable | -100 %...0 %                  | 1 %                              | -100 %                 | +100 %                | Minimum range 1 %                        |

## General setting

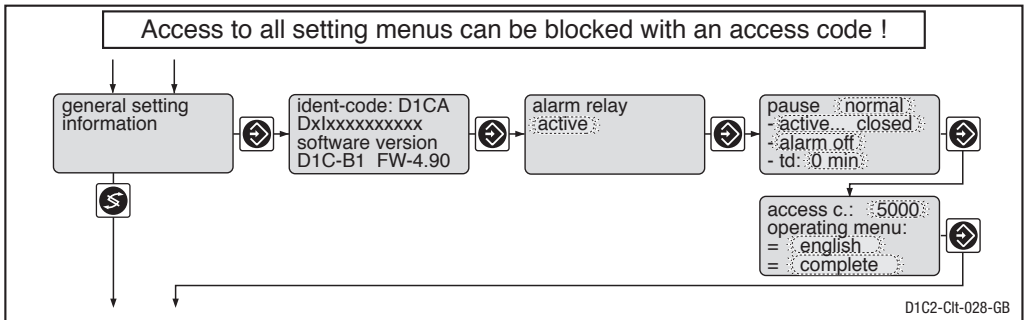

|                     | Initial value | Possible values              |             |             | Remarks |
|---------------------|---------------|------------------------------|-------------|-------------|---------|
|                     |               | Increment                    | Lower value | Upper value |         |
| Alarm relay         | active        | active<br>not active         |             |             |         |
| Pause               | normal        | normal<br>hold               |             |             |         |
| Control input pause | active closed | active closed<br>active open |             |             |         |

## Complete Operating Menu / Description

|                | Initial value        | Possible values   |             | Remarks |  |
|----------------|----------------------|---|-------------|---------|--|
|                |                      | Increment   | Lower value |         | Upper value                                    |
| Pause alarm    | alarm off            | alarm off<br>alarm on   |             |         | Alarm relay can be activated by pause contact. |
| td             | 0 min                | 1 min   | 0 min       | 60 min  |  |
| Access code    | 5000                 | 1   | 1           | 9999    |  |
| Language       | as per identity code | German<br>English<br>French<br>Italian<br>Dutch<br>Spanish<br>Portuguese<br>Czech<br>Japanese<br>(as per identity code) |             |         |  |
| Operating menu | complete             | restricted<br>complete  |             |         |  |

### Standard Pause

If the pause-switch is off, the DULCOMETER® D1C sets the operating outputs to “0” for as long as the pause-switch is off or for a set time-delay  $t_d$  (if  $t_d$  is set to  $> 0$  min). Whilst the pause-switch is off, the D1C establishes the P-proportion in the background.

With PID-control (Identity code characteristics “control characteristic” = 2): the I-proportion is stored when the pause is switched off (I-proportion then usually only present if  $T_i > 0$  has been selected in the “Control setting?” setting menu).

Exception: the standard signal outputs mA for the measured value or correction value are not affected by the pause.

After pause is activated the operating outputs remain at “0” for the length of the time-delay  $t_d$ . The time-delay  $t_d$  must be set up in such a way that, in this time e.g. sample water (process-specific current concentration) flows to the sensor.

With PID-control (Identity code characteristics “control characteristic” = 2): The control variable output resulting from the pause and the expiry of the time-delay  $t_d$  is reconciled jointly with the current P-component and (if  $T_i$  is set  $> 0$ ) with the stored I-component.

### Pause Hold

If the pause-switch is off, the DULCOMETER® D1C freezes the operating output at the most recent value for as long as the pause-switch is off or for a set time-delay  $t_d$  (if  $t_d$  is set to  $> 0$  min). Whilst the pause-switch is off, the D1C establishes the P-proportion in the background.

With PID-control (Identity code characteristics “control characteristic” = 2):

Even the mA standard signal outputs for measured value or correction value are frozen.

After pause is activated the operating outputs remain frozen for the length of the time delay  $t_d$ . The time delay  $t_d$  must be set up in such a way that, in this time e.g. sample water (process-specific current concentration) flows to the sensor.

With PID-control (Identity code characteristics “control characteristic” = 2): The control variable output resulting from the pause and the expiry of the time-delay  $t_d$  is reconciled jointly with the current P-proportion and (if  $T_i$  is set  $> 0$ ) with the newly established I-proportion.

# 9 Troubleshooting

| Fault  | Fault text  | Symbol | Effect on metering | Effect on control | Alarm with acknowledgement | Remarks   | Remedy  |
|--|---|--------|--------------------|-------------------|----------------------------|---|---|
| <b>Measured value</b><br>Checkout time measured value exceeded                         | <i>Check C/I probe</i>                                    | €      | Basic load         | Stop              | Yes                        | Function defeatable   | Check function of probe                                     |
| Signal exceeded/drops below value  | <i>C/I input &lt; 3 mA</i><br><i>C/I input &gt; 23 mA</i> | €      | Basic load         | Stop              | Yes                        | Signal <3.0 ±0.2 mA or >23 ±0.2 mA                                | Check probe, transducer and cable connection                |
| Calibration probe with error   | <i>Check C/I calibration</i>                              | €      | Basic load         | Stop              | No                         | Metering continues in case of error with unsteady measured values | Check probe, replace if necessary, recalibrate if necessary |
| <b>Feed forward control</b><br>Signal drops below value multiplicative Signal exceeded | <i>feedfwd. &lt; 4 mA</i><br><i>feedfwd. &gt; 23 mA</i>   | €      | Basic load         |                   | Yes                        | Signal <4.0 ±0.2 mA or >23 ±0.2 mA<br>Value last valid is used    | Check probe, transducer and cable connection                |
| <b>Limit transgression</b><br>after checkout time limit value                          | <i>C/I limit value 1</i><br><i>C/I limit value 2</i>      | €      | Basic load         |                   | Yes                        | Function defeatable   | Define cause, reset values if necessary                     |
| <b>Servomotor</b><br>Position not reached  | <i>Servomotor defective</i>                               | €      |                    |                   | Yes                        | Servomotor closes   | Check servomotor  |
| <b>Electronics error</b>   | <i>System error</i>                                       | €      | Stop               | Stop              | Yes                        | Electronic data defective   | Call in service   |

| Operation   | Note text  | Symbol | Effect      |                                 | Alarm with acknowledgement | Remarks   | Remedy  |
|---|--|--------|-------------|---------------------------------|----------------------------|---|---|
|   |  |        | on metering | on control                      |                            |   |   |
| <b>Pause contact</b>  | <i>Pause</i>   | €      | Stop        | Stop                            | No                         | No further fault check  | -   |
|   | <i>Pause/Hold</i>  | €      |             | PI-part frozen                  |                            |   |   |
| <b>Stop button</b>  | <i>Stop</i>  | €      | Stop        | Stop                            | No                         | Relay drops out   | -   |
| <b>During calibration probe</b>   |  |        | Basic load  | Stop in complete operating menu | No                         | No error processing of measured variable  | -   |
| Probe slope too low   | <i>Slope C/I low</i>   | €      | Basic load  | Stop                            | No                         | 25% > probe of slope > 300% norm slope  | Check probe, replace if necessary   |
| Probe slope too high  | <i>Slope C/I high</i>  | €      | Basic load  | Stop                            | No                         | < 2 % from meas. range  | Check probe/cable   |
| DPD-value <2 % measuring range  | <i>DPD too low</i>   |        |             |                                 |                            |   | Repeat calibration in chloride-free water   |
| Zero point  | <i>Zero point low</i><br><i>Zero point high</i>                              | €      | Basic load  | Stop                            | No                         | Signal < 3 mA<br>Signal > 5 mA<br>(for CLT1-mA-2 ppm)<br>Signal > 6 mA<br>(for CLT1-mA-0.5 ppm) |   |
| <b>During servomotor setting</b><br>Position feed back wrong<br>Upper position <40 % max. value<br>Lower position >30 % range | <i>Direction check</i><br><i>Final value small</i><br><i>Final value big</i> |        |             |                                 |                            | Without correct adjustment the last valid values are still used                                 | Check connection of relay, potentiometer<br>Adjust the operation region of the servomotor correctly |

©2003 ProMinent Dosieretechnik GmbH · 69123 Heidelberg · Germany

Operating Instructions DULCOMETER® D1C, Part 2/I, Issue 03/05

Subject to modifications · Printed in Germany

ProMinent Dosieretechnik GmbH · Im Schuhmachergewann 5-11 · 69123 Heidelberg · Germany

Phone: +49 (6221) 842-0 · Fax: 842-419

info@prominent.com · www.prominent.com