

# multiFLEX M10 and M5 User Manual





# CONTENTS

## Safety

|                                      |               |
|--------------------------------------|---------------|
| <b>1. STANDARD OPERATIONS</b>        | <b>4</b>      |
| 1.1 What's Happening Now             |               |
| 1.2 Checking & Clearing Alarms       |               |
| 1.3 Checking & Changing Setpoints    |               |
| 1.4 Calibrating Sensors              |               |
| 1.5 Changing Biocide Timing          |               |
| 1.6 Adjusting % Feeds                |               |
| 1.7 Userid - Passwords               |               |
| <br><b>2. ADDITIONAL OPERATIONS</b>  | <br><b>16</b> |
| 2.1 Setting Biocide Prebleed-Lockout |               |
| 2.2 Adjusting Boiler Blowdown Timing |               |
| 2.3 Sensor Diagnostics               |               |
| 2.4 Control Diagnostics              |               |
| 2.5 System Diagnostics               |               |
| <br><b>3. START UP PROCEDURE</b>     | <br><b>28</b> |
| 3.1 Read this first!                 |               |
| 3.2 Connect Sensors                  |               |
| 3.3 Connect Pumps, Valves, Solenoids |               |
| 3.4 Verify controls                  |               |
| 3.5 Setting Sensor Alarms            |               |
| 3.6 Setting Output Alarms            |               |
| 3.7 Verify Interlocks                |               |
| 3.8 Verify Blocking Relays           |               |
| 3.9 Selecting Special Controls       |               |
| 3.10 Modifying Variable Cycles       |               |
| 3.11 Modifying Feed Verification     |               |
| 3.12 Modifying Time & Date           |               |
| <br><b>4. ADDITIONAL INFORMATION</b> | <br><b>46</b> |
| 4.1 Spare Parts                      |               |
| 4.2 Technical Support                |               |
| 4.3 Specifications                   |               |
| 4.4 Keypad Navigator                 |               |
| 4.5 Revision Log                     |               |


# Safety




## Electrical Shock Hazard

**CAUTION:** The operator of this instrument is advised that if the equipment is used in a manner not specified in this manual, the protection provided by the equipment may be impaired.

Opening the controller enclosure with the controller plugged in, exposes the user to AC line voltages on the lower of the two controller circuit boards.

Ground the controller AC power to the ground screw labeled  and located on the bottom, right of the aluminum backplate.

External, 120VAC plug boxes are provided with controllers installed in North

America External plug boxes are grounded to the ground screw labeled  located on the bottom, center of the aluminum backplate.



### USER WARNING : CAUTION

Water Treatment Controllers operate steam and water valves and may pump hazardous, corrosive and toxic chemicals. Opening the controller enclosure exposes user to the risk of electrical shock at power line voltages.

Understand fully the implications of the control setpoints, interlocks and alarms that you select. Harm to personnel and damage to equipment may result from mis-application.

Unplug or turn OFF the AC power to the controller if you have any concerns regarding safety or incorrect controller operation and notify supervisory staff.

### YOUR CONTROLLER

Controllers are supplied in many different configurations.

The **HELP** section in the back of this manual contains the information for terminating the sensors supplied with your specific controller.

The **HELP** section in the back of this manual depicts the installation plumbing header showing the sensor set supplied with your specific controller.

## 1.1 What's Happening Now

Power UP, first display, current date  
Key ENTER for System menu

Key DOWN & enter to clear all alarms  
And to view detail on Sensor 'D', Relay '2' and  
'Sys'tem Alarms

Sensors and the relays they control are grouped

Key ENTER on sensor for sensor 'O' menu  
& ENTER on the relay '1' relay menu

Sensor 'E' menu: Diagnostics | Alarms | Calibrate |  
Configure

Relay '2' menu: Diagnostics | Configure |  
Alarms | Timed Events | Setup

The display line with the ENTER arrow  
Displays Relay '9' menu on ENTER

Sampling timing is adjusted by keying ENTER, DOWN  
to Configure & ENTER

Sensor display current value  
Relays shown ON/OFF state and run time if ON

Water meters show volume from midnight

Flowswitch 'T' is ON and has been on for 560.2  
minutes from midnight

Biocide B pump is controlled by Relay #8  
and is now OFF:

System: 2003-10-03 ←  
S/N: M0389001  
Alarms: 16:38:11 ↓  
D G 2 Sys



Tower Make-up ↑0  
12800 Gal  
Inhibitor Feed ←1  
OFF:



Tower Conduct'y ←E  
1246 uS  
Tower 1 Bleed ↓2  
ON: 18.6min



Blr 2 Conduct'y ↑F  
5240 uS  
B2 B'down Valve ←9  
ON: 0.4min



Corrosion Rate ←D  
1.45 mpy  
Tower Bleed meter ↓Q  
34000 Gal



Flowswitch 1 ↑T  
ON: 560.2min  
Biocide B ←8  
OFF:



## 1.2 Checking & Clearing Alarms 1 of 3

### CHECK ALARMS

Power UP, first display

System: 2003-10-03 ↑  
S/N: M0389001  
Alarms: 16:38:11 ←  
C K 3



Key DOWN to Alarms & ENTER  
to view detail on Sensors 'C', 'K' & Relay '3'  
& to clear alarms

Alarms:  
Clear Alarms  
Alarms ←



Key DOWN to view active alarms  
& ENTER

Alarms:  
Alarms.....  
No Active Alarms

Display on no active alarms

OR

Scroll down to view all active alarms

Alarms:  
Alarms.....  
pH Sensor  
Alarmed High ↓



Name of alarming Sensor  
Alarm type: pH Sensor value above High alarm for a  
user set time.

Alarms:  
Alarms.....  
Water Meter 0  
Alarmed Low ↕



Name of alarming Water Meter  
Alarm type: Low alarm checked at midnight  
High meter alarm trip immediately

Alarms:  
Alarms.....  
Acid Pump  
Limited, ON timer ↑



Name of Output control alarming  
Alarm type: Feed limit timer turns OFF Pump  
Day Timer may be set to limit on time/day

## CLEAR ALARMS

Power UP, first display

Key ENTER  
to view detail on Sensors 'C' , 'K' & Relay '3'  
& to clear alarms

Key ENTER to Clear Alarms

Clear Alarms:  
Resets only all active alarms

If you wish to end biocide events.  
Prebleeds or lockouts.  
OR restart special controls:  
Clear the target relay alarm.  
See page 3 of 3.

Information only display  
EXIT key escapes

Internet HELP reference for more detail  
Refer to Technical Support.

System: 2003-10-03 ↑  
S/N: M0389001  
Alarms: 16:38:11 ←  
C K 3



Alarms:  
Clear Alarms ←  
Alarms



Alarms:  
Clear Alarms.....  
Clear All Alarms  
YES ←



Alarms  
Alarms Cleared  
Key 0 to Exit  
iNet HELP# 0700



## RESET RELAY USING CLEAR ALARMS

Key UP or DOWN to the output relay  
& key ENTER

Any relay can be reset

This example is a Biocide pump with 16.6 minutes  
of ON time remaining

Key DOWN to Alarms & ENTER

Key DOWN to 'Reset Alarm & Time & ENTER  
Relay 4 will turn OFF

Biocide feeds and prebleeds will end  
If this relay is timing a biocide lockout, it will end

Special controls like Bleed & Feed, % Time  
or Boiler Captured Sample controls will restart.

After you key ENTER you see the value of the relay  
feed limit timer.


Key EXIT twice  
& you'll see that Relay 4 is now OFF

Relays don't need to be ON to be reset  
You may wish to restart special control  
Or end the lockout of a bleed relay


```
Biocide A          4
ON:owes  16.6
Biocide B          5
OFF: No Control
```



```
Biocide A          4
Diagnostics        4
Configure
Alarms             4
```

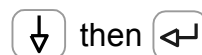

```
Biocide A          4
Alarms.....
Reset Alarm & Time
YES
```



```
Biocide A          4
Alarms .....
Minutes/Actuation
120.0 minutes
```



```
Biocide A          4
OFF: No Control
Biocide B          5
OFF: No Control
```



## 1.3 Checking & Changing Setpoints

Key UP or DOWN to the output relay  
& key ENTER

Relays follow the controlling sensor

Key DOWN to Configure & ENTER

Key DOWN to 'Turn ON' & ENTER  
Select 'Measure Volume' for water meter controls.  
Current setpoint is 1000uS

Use the UP & DOWN keys to adjust the setpoint  
RIGHT moves the cursor across the screen

EXIT abandons adjusting the setpoint

You can adjust ON or OFF setpoints or both


Key ENTER to adjust or UP – DOWN to view current  
settings

Turn OFF > Turn ON not allowed with a Rising  
Setpoint control


Tower Conduct'vty ↑E  
986 uS  
Bleed Valve ←2  
OFF: Setpoints



Bleed Valve 2  
Diagnostics  
Configure ←  
Alarms ↓




Bleed Valve 2  
Configure.....  
Turn ON  
1000 uS ←↕



Editing Value  
Turn ON .....  
1150 uS ↕→  
←Executes, 0 Exits



Bleed Valve 2  
Configure.....  
Turn OFF  
980 uS ←↕



Editing Value  
Turn OFF.....  
1130 uS ↕→  
←Executes, 0 Exits



## 1.4 Calibrating Sensors 1 of 2

### SENSORS


Key ENTER at selected sensor

```
Tower Conduct'vty  E
                  986 uS
Bleed Valve        ↑2
OFF: Setpoints
```




Key DOWN to Calibrate & ENTER

```
Tower Conduct'vty  E
Diagnostics         ↑
Alarms
Calibrate           ←
```



Key ENTER to change sensor value  
OR  
DOWN & ENTER to Reset to Factory option

```
Tower Conduct'vty  E
Calibrate.....
Enter Current Value
          986 uS      ←↕
```




Use the UP & DOWN keys to adjust the value  
RIGHT moves the cursor across the screen

```
Editing Value:
Enter Current Valu..
          996 uS      ↕→
← Executes, 0 Exits
```



If the calibration succeeds,  
you'll return to the sensor value display

```
Tower Conduct'vty  E
Calibrate.....
Sensor fault
Override warning ←↕
```



Key ENTER then UP or DOWN to override

```
Tower Conduct'vty  E
Calibrate.....
Reset to Factory
NO                ←↕
```



If you key DOWN, you'll have the  
Reset to Factory option

Key ENTER then UP or DOWN to Reset

## CONTACT HEAD & TURBINE METERS

Key ENTER at selected water meter

Key DOWN to Calibrate & ENTER

Key ENTER to change value  
OR  
DOWN & ENTER to Reset to Factory option

Use the UP & DOWN keys to adjust the value  
RIGHT moves the cursor across the screen

EXIT abandons calibrating

If the calibration succeeds,  
you'll return to the sensor value display

Turbine and Paddlewheel meters  
use pulses/unit volume as calibration value


If you key DOWN, you'll have the  
Reset to Factory option

Key ENTER then UP or DOWN to Reset  
Setting Volume per Contact OR 'K' Factor to 100


Make-up meter 23400 gal  
Inhibitor Pump OFF: Setpoints



Make-up meter 0  
Diagnostics  
Alarms  
Calibrate



Make-up meter 0  
Calibrate.....  
Volume per Contact  
100 gal




Editing Value:  
Volume per Contact..  
200 gal  
Executes, Exits



Editing Value:  
'K' Factor.....  
321.5 gal  
Executes, Exits



Make-up meter 0  
Calibrate.....  
Reset to Factory  
NO



## MODIFY EXISTING EVENT, REVIEW EVENTS

Key ENTER at selected chemical pump  
This one's powered by Relay No.5

Key DOWN to Timed Events & ENTER

This Biodispersant has 8 existing events  
See Page 2 for Add an Event

If there are '0' events then the Edit an Event  
option does not exist

ENTER to select the Event you wish to edit

Key UP DOWN to Select one of 28 events  
OR  
Review existing timed events

Day = 1 to 28 for 4 week feed cycles  
Day = 1 to 7 on weekly feed cycles


Key RIGHT to select the field you wish to modify

Key UP DOWN to modify the field  
ENTER to update.

Biocide A                      ↑4  
ON: 36.5 min  
Biodispersant                  ←5  
OFF: Setpoints



Biodispersant                  5  
Configure                      ↑  
Alarms  
Timed Events                  ←



Biodispersant                  5  
Timed Events.....  
Add an Event  
YES      Events, 8              ←↕



Biodispersant                  5  
Timed Events.....  
Edit an Event  
YES                              ←↕



Select one:  
Day Start   ON min...  
12   04:30   45  
← Executes, 0 Exits



Edit an Event:  
Day Start   ON min...  
12   06:15   119  
← Executes, 0 Exits



## ADD AN EVENT OR EVENTS

Key ENTER at selected chemical pump

Key DOWN to Timed Events & ENTER

Key RIGHT to select the field you wish to modify

Key UP DOWN to modify the field  
ENTER to update.

Key UP DOWN to select ONCE | WEEKLY  
| ALTERNATE WEEKS

7 Day Cycles select one of ONCE | DAILY  
| ALTERNATE DAYS

1 Day Cycles select one of ONCE | HOURLY  
| ALTERNATE HOURS

In this example, we added weekly events  
Increasing the total events from 8 to 12.


Keying UP DOWN @ Add an Event  
Displays the Delete all Events option

Key ENTER to remove all events


```
Biodispersant      5
Timed Events.....
Add an Event
YES    Events,8    ⏪⏩
```



```
Add an Event:
Day Start  ON min...
 6  14:30  15
⏪ Executes, 0 Exits
```



```
Select one:
Event frequency.....
Once
⏪ Executes, 0 Exits
```



```
Biodispersant      5
Timed Events.....
Add an Event
YES    Events,12   ⏪⏩
```

```
Biodispersant      5
Timed Events.....
Delete all Events
YES                ⏪⏩
```

## 1.6 Adjusting % Feeds 1 of 2

### ADJUST BASE FEED


Key UP or DOWN to the pump control  
& key ENTER

Tower 1 Inhibitor ←6  
ON: 6.2 min  
Tower 2 Inhibitor ↑8  
OFF: No Control




Key DOWN to Configure & ENTER

Tower 1 Inhibitor 6  
Diagnostics  
Configure ←  
Alarms ↓



Key DOWN to Special Control & ENTER

Tower 1 Inhibitor 6  
Configure .....  
Special Control  
Percentage Time ←↕



Key enter to View or change existing control

Percentage Time turns ON for user set %  
every 5 minutes

Tower 1 Inhibitor 6  
Special Control.....  
Percentage Time ↕  
← Executes, 0 Exits



Key ENTER to view adjust current %

Tower 1 Inhibitor 6  
Percentage Time.....  
% ON Time  
28% ←



Percentage Time is set to 28%  
Pump runs for 84 seconds every 5 minutes

Key ENTER to modify

Editing Value:  
% ON Time.....  
31% ↕→  
← Executes, 0 Exits



Key UP DOWN & RIGHT to modify  
then key ENTER

31% is 93 sec. every 5 minutes

## ADJUST % BLEED FEEDS

Key UP or DOWN to the pump control  
& key ENTER

Key DOWN to Configure & ENTER

Key DOWN to Special Control & ENTER

Key enter to View or change existing control

Key DOWN if you wish to switch from  
BLEED & FEED  
to  
BLEED THEN FEED

Key DOWN to % of Time & ENTER

Percentage Time is set to 54%  
Pump runs for 162 seconds every 5 minutes

Key ENTER to modify


Key UP DOWN & RIGHT to modify  
then key ENTER

49% is 147 sec. every 5 minutes


Tower 1 Inhibitor ↑6  
ON: 6.2 min  
Tower 2 Inhibitor ←8  
OFF: No Control



Tower 2 Inhibitor 8  
Diagnostics  
Configure ←  
Alarms ↓



Tower 1 Inhibitor 6  
Configure .....  
Special Control  
Bleed & Feed ←↕



Tower 1 Inhibitor 6  
Special Control.....  
Bleed & Feed ↕  
← Executes, 0 Exits



Tower 1 Inhibitor 6  
Bleed & Feed.....  
% of Time  
54 % ←↓



Editing Value:  
% of Time.....  
49% ↕→  
← Executes, 0 Exits



## 1.7 Userid – Passwords

### IGNORE IF PASSWORDS NOT 'ON' IN YOUR CONTROLLER

'YES' appears if passwords are ON  
Your present USERID also displays.

If 'YES' Key ENTER  
& key in your password.

Key an incorrect password to log off.  
Auto-logoff occurs 30 minutes after the last keystroke.

If you keyed a correct password,  
you'll see this display

If your password is incorrect,  
you'll still be the 'public' user

If you require the ADMIN password,  
you'll see this display when you are already  
logged in under another userid

If you are any user but 'public'  
& you key DOWN @ 'Login Required'  
you can adjust your password

Keep your password simple  
If you are using the keypad

System:  
Passwords.....  
Login Required  
YES,public



Editing Value:  
Key Password.....  
G  
← Executes, ① Exits



System:  
Time & Date  
LAN Setup  
Passwords

System:  
Passwords.....  
Login Required  
YES, public

System:  
Passwords.....  
New Password  
YES



System:  
New Password  
XK  
← Executes, ① Exits





## 2.1 Setting Biocide Prebleed-Lockout 1 of 2

|  |  |
|--|--|
| Key UP or DOWN to the biocide pump control & key ENTER   | <div> Biocide A 3<br/> OFF: No Control<br/> Biocide B 4<br/> OFF: No Control </div>      |
| Key DOWN to Configure & ENTER  | <div> Biocide A 3<br/> Diagnostics<br/> Configure<br/> Alarms </div>                     |
| Key DOWN to Special Control & ENTER  | <div> Biocide A 3<br/> Configure .....<br/> Special Control<br/> Prebleed-Lockout </div> |
| If not set to Prebleed-Lockout, key UP DOWN  |  |
| Key ENTER to adjust Prebleed-Lockout parameters  |  |
| 'Bleed Relay' prebleeds before each biocide feed and is locked-out after each feed event             | <div> Biocide A 3<br/> Prebleed-Lockout----<br/> Bleed Relay<br/> Tower 1 Bleed </div>   |
| Key ENTER to modify  |  |
| 'Lockout Time' turns OFF the bleed relay during biocide kill time                                    | <div> Biocide A 3<br/> Prebleed-Lockout----<br/> Lockout Time<br/> 120.0 Minutes </div>  |
| Key ENTER to modify  |  |
| 'Prebleed Time' turns ON the bleed relay reducing the tower conductivity before a biocide feed event | <div> Biocide A 3<br/> Prebleed-Lockout----<br/> Prebleed time<br/> 30.0 minutes </div>  |
| Key ENTER to modify  |  |
|  | Continued on Page 2  |

## 2.1 Setting Biocide Prebleed-Lockout 2 of 2

You can 'Prebleed' until this sensor measures  
the conductivity that you set

Key ENTER to modify

This is the 'Prebleed' conductivity target

'Prebleed' ends at this conductivity  
OR at the end of 'Prebleed Time'

Key ENTER to modify

Set high to control on 'Prebleed Time' only

All Prebleed-Lockout parameters are modified  
by ENTER when the parameter is displayed

Key UP DOWN & RIGHT to modify  
then key ENTER

Bleed solenoid or valve now turns ON  
For 45 minutes before each feed event  
on Biocide A, powered by Relay No.3

```
Biocide A          3
Prebleed-Lockout---
Prebleed Sensor
Tower Conduct'ity
```



```
Biocide A          3
Prebleed-Lockout---
Prebleed Value
750.0 uS           ⬅️⬆️⬇️⬅️
```

**Typical: Modify Bleed time**

```
Biocide A          3
Prebleed-Lockout---
Prebleed time
30.0 minutes       ⬅️⬆️⬇️⬅️
```



```
Editing Value:
Prebleed Time.....
45.0 minutes        ⬆️⬇️⬅️⬆️
⬅️ Executes, 0 Exits
```



```
Biocide A          3
Prebleed-Lockout---
Prebleed time
45.0 minutes       ⬅️⬆️⬇️⬅️
```

## 2.2 Adjusting Boiler Blowdown Timing 1 of 2

Key UP or DOWN to the boiler blowdown control  
& key ENTER

This example is using Relay No.2

It's been ON for 1.2 minutes  
either Blowing down OR Sampling

Key DOWN to Configure & ENTER

Key DOWN to Special Control & ENTER

Key ENTER twice to view or adjust timing

'Sampling' opens the blowdown valve so the  
conductivity sensor gets a new sample.

Key ENTER to modify

'Measure' cools the sample at the conductivity sensor.  
At the end of 'Measure' conductivity is compared  
to the ON – OFF setpoints.

Key ENTER to modify


If the conductivity is above the TURN ON setpoint,  
the valve opens for the Blowdown Time

Key ENTER to modify

Boiler 1 Cond.      ↑ E  
2546 uS  
B1 Blowdown      ← 2  
ON: 1.2 minutes



B1 Blowdown      2  
Diagnostics  
Configure      ←  
Alarms      ↓



B1 Blowdown      2  
Configure .....  
Special Control  
Captured Sample      ←↕



B1 Blowdown      2  
Captured Sample-----  
Sampling Time  
30 seconds      ←↕



B1 Blowdown      2  
Captured Sample-----  
Measure Time  
60 seconds      ←↕



B1 Blowdown      2  
Captured Sample-----  
Blowdown Time  
60 seconds      ←↕



Continued on Page 2

## 2.2 Adjusting Boiler Blowdown Timing 2 of 2

If the measured conductivity is below the TURN OFF setpoint, the next Sample occurs after the 'Re-Sample delay'

If the measured conductivity is above the TURN OFF setpoint, Blowdown Time's are followed by Measure Times as the boiler conductivity falls.

Key ENTER to modify

If your installation does not include  
a Fail-to-Sample sensor  
'none' will be displayed

Key UP DOWN to Blowdown Time & ENTER

Key ENTER to adjust timing

Key UP DOWN & RIGHT to modify  
then key ENTER

## We've increased the Blowdown Time from 60 to 90 seconds

Sampling Time, Measure Time and Re-sample delay are adjusted using the same key sequence

```
B1 Blowdown                2
Captured Sample-----
Re-sample delay
    45 minutes
```



```
B1 Blowdown                2
Captured Sample-----
Fail-to-Sample
B1 Fail-to-Sample
```

### Typical: Modify Blowdown time

```
B1 Blowdown                2
Captured Sample-----
Blowdown Time
    60 seconds
```



```
Editing Value:
Blowdown Time.....
    90.0 seconds  ↕→
← Executes, 0 Exits
```



then 

```
B1 Blowdown                2
Captured Sample-----
Blowdown Time
    90 seconds
```

Key UP or DOWN to the desired sensor  
& key ENTER

This example is a cooling tower conductivity sensor  
Connected to input 'E'

Key ENTER at Diagnostics

Each I/O type has it's own set of Diagnostics

Sensors have driver cards  
Water Meters and contact sets connect directly to  
top-center terminal blocks

'Operational' sensors are not Alarmed  
This example is a sensor operating outside  
of the HIGH or LOW alarms

Current displayed value of the sensor  
and sensor units

An increasing Gain indicates a fouled sensor  
Gain Multiplier changes with sensor calibration

Tower Conduct'vty ←E  
986 uS  
Bleed Valve ↑2  
OFF: Setpoints



Tower Conduct'vty E  
Diagnostics ←  
Alarms  
Calibrate ↓



Tower Conduct'vty E  
Diagnostics.....  
Input Card Type  
Conductivity ↓



Tower Conduct'vty E  
Diagnostics.....  
Current State  
Alarmed ⇅



Tower Conduct'vty E  
Diagnostics.....  
Displayed Value  
968.4 uS ⇅



Tower Conduct'vty E  
Diagnostics.....  
Gain Multiplier  
5.7160 ⇅



Continued on Page 2

## 2.3 Sensor Diagnostics 2 of 2

Selecting 'Reset to Factory' during sensor calibration  
sets the Gain Multiplier to the Default Gain

Tower Conduct'vty E  
Diagnostics.....  
Default Gain  
5.6000



Conductivity adjusts Gain Multiplier to calibrate

pH, ORP and temperature  
modifies Offset Adjust to calibrate

Tower Conduct'vty E  
Diagnostics.....  
Offset Adjust  
-35.0000



Selecting 'Reset to Factory' during sensor calibration  
sets the Offset Adjust to the Default Offset

Tower Conduct'vty E  
Diagnostics.....  
Default Offset  
-35.0000



Measured Level is the raw sensor level  
Before Gain Multiplier and Offset Adjust are applied

Tower Conduct'vty E  
Diagnostics.....  
Measured Level  
184.5 mV



Each driver card range and configuration jumper  
setting has a unique ID used by the  
controller to auto-configure

Watermeters and contact sets do not require IDs

Tower Conduct'vty E  
Diagnostics.....  
Input card ID  
76.7 mV



Some driver cards have internal drive levels  
Corrosion Rate cards use Drive Level  
to correct for DC isolation offsets

Key EXIT to return to sensor menu

Tower Conduct'vty E  
Diagnostics.....  
Drive level  
0.0 mV



### INHIBITOR FEED EXAMPLE page 1

Key UP DOWN to Inhibitor Pump & ENTER.

The pump is ON and owes 6.1 minutes of ON time

Key ENTER at Diagnostics

Each control type has it's own set of Diagnostics

Key ENTER to turn ON the Pump  
for 5 minutes

WARNING: Immediately turns ON pump  
Unless blocked, interlocked or on biocide lockout

Select Alarms then  
Reset Alarm & Time to end Prime Output

Current State displays Interlocked, Blocked,  
Timed Out, status messages

Controlling sensor in this example is water meter 'O'

Current value of control displayed

Volume controls measure a user set volume  
before turning ON the pump  
In this example 100 gallons

|                |    |
|----------------|----|
| Make-up Meter  | ↑0 |
| 38400 gal      |    |
| Inhibitor Pump | ←1 |
| ON: owes 6.1   |    |



|                |   |
|----------------|---|
| Inhibitor Pump | 1 |
| Diagnostics    | ← |
| Configure      |   |
| Alarms         | ↓ |



|                  |    |
|------------------|----|
| Inhibitor Pump   | 1  |
| Diagnostics..... |    |
| Prime Output     |    |
| YES              | ←↓ |



|                  |   |
|------------------|---|
| Inhibitor Pump   | 1 |
| Diagnostics..... |   |
| Current State    |   |
| ON: owes 5.6     | ↕ |



|                  |   |
|------------------|---|
| Inhibitor Pump   | 1 |
| Diagnostics..... |   |
| Control by: 0    |   |
| 38400 gal        | ↕ |



|                  |   |
|------------------|---|
| Inhibitor Pump   | 1 |
| Diagnostics..... |   |
| Measure volume   |   |
| 100.00 gal       | ↕ |



Continued on Page 2

### INHIBITOR FEED EXAMPLE page 2

In this example, after each 100 gallons,  
the Inhibitor pump turns ON for 20 seconds.

Water meter volume when last feed occurred

Event Cycles may repeat every 1,7 or 28 days

This example has 8 events which repeat  
every 4 weeks, 28 days

Today is Day 9, Monday of week No.2

Today's Inhibitor pump ON time from midnight

Inhibitor pump ON Time Owed  
Increases while the cooling tower is making up  
and decreases to zero when the make-up float closes.

Varying Cycles and Feed Verification status  
Displays follow the Special Control display

Inhibitor Pump 1  
Diagnostics.....  
Then turn ON for  
20 sec



Inhibitor Pump 1  
Diagnostics.....  
Last fed at  
38300 gal



Inhibitor Pump 1  
Diagnostics.....  
28 Day Event Cycle  
8 events, Day 9



Inhibitor Pump 1  
Diagnostics.....  
minutes ON today  
110.6 minutes



Inhibitor Pump 1  
Diagnostics.....  
Time Owed  
0.3 minutes



Inhibitor Pump 1  
Diagnostics.....  
Special Control  
none





### CAPTURED SAMPLE EXAMPLE page 1

Key UP DOWN to the blowdown control & ENTER.

Blowdown valve is ON and has been  
ON for 1.2 minutes

Key ENTER at Diagnostics

Each control type has it's own set of Diagnostics

Priming overrides boiler timing, turning ON the  
blowdown valve for 5 minutes

Select Alarms then  
Reset Alarm & Time to end Prime Output.

Current State displays that the Captured Sample  
Special Control has turned ON the Blowdown

Controlling sensor in this example is sensor 'F'

Current value of controlling sensor displayed

Controller checks Turn ON Setpoint  
at the end of every Measure period

Boiler 3 Cond. ↑F  
3628 uS  
B3 Blowdown ←4  
ON: 1.2 min



B3 Blowdown 4  
Diagnostics ←  
Configure  
Alarms ↓



B3 Blowdown 4  
Diagnostics.....  
Prime Output  
YES ←↓



B3 Blowdown 4  
Diagnostics.....  
Current State  
Special Control, ON ⇅



B3 Blowdown 4  
Diagnostics.....  
Control by: F  
3420.23 uS ⇅



B3 Blowdown 4  
Diagnostics.....  
Turn ON setpoint  
3300 uS ⇅



Continued on Page 2

### CAPTURED SAMPLE EXAMPLE page 2

Controller checks Turn OFF Setpoint  
at the end of every Measure period.

Rising Setpoint blows down above Turn ON and  
samples only below Turn OFF.

It would be unusual to have timed feed events  
on a boiler blowdown valve.

In this example there are 0 events set  
and its day 4, Wednesday today

Today's ON time for the blowdown valve  
from midnight

Captured Sample, Time Owed would usually be zero

If Prime Output is active, Time Owed  
will count down from 5 minutes.

Displays the Captured Sample ON/OFF state  
and which timer is counting down

SAMPLE | MEASURE | BLOWDOWN | RESAMPLE  
are the four captured sample states

Varying Cycles and Fail-to-Sample status  
Displays follow the state display

B3 Blowdown 4  
Diagnostics.....  
Turn OFF setpoint  
3275.00 uS



B3 Blowdown 4  
Diagnostics.....  
Control Type  
Rising Setpoint



B3 Blowdown 4  
Diagnostics.....  
7 Day Event Cycle  
0 events, Day 4



B3 Blowdown 4  
Diagnostics.....  
minutes ON today  
234.6 minutes



B3 Blowdown 4  
Diagnostics.....  
Time Owed  
0.0 minutes



Inhibitor Pump 1  
Diagnostics.....  
Captured Sample: OFF  
Resample: 26.4 m



Power ON display  
OR key UP DOWN to System: & ENTER.

Key ENTER at Diagnostics

Firmware version is followed by the two modules that  
form the base controller

M7 is a 7 analog, 7 digital input module  
M14 is a 14 analog, 12 digital input module

PR10 is a 10 relay output; PR5 a 5 relay output

PR10 controllers include an AC Current Transformer  
AC Current is the total controller current including  
All pumps, valve & solenoid current

OK is an intact, Relay 1 to 5 load fuse

OPEN is a failed fuse.  
Pumps & Solenoids controlled by relays 1-5 are OFF.

OK is an intact, Relay 6 to 10 load fuse

OPEN is a failed fuse.  
Pumps & Solenoids controlled by  
relays 6-10 are OFF.

System: 2003-10-03 ←  
S/N: M0389001  
Alarms: 16:38:11 ↑  
D G 2 Sys



System:  
Diagnostics ←  
Enable I/O  
Configure ↓



System:  
Diagnostics.....  
Firmware Version  
A814-M7-PR10 ↓



System:  
Diagnostics.....  
AC Current  
4.26 ↕



System:  
Diagnostics.....  
Relay 1-5 Fuse  
OK ↕



System:  
Diagnostics.....  
Relay 6-10 Fuse  
OPEN ↕



Continued on Page 2

Current state of alarm contacts

The controller may be configured to  
OPEN or CLOSE alarm contacts on alarm.

Displays the current state of the dry contacts at the  
AL1 & AL2 terminal block on the PR5 or PR10 module

Increasing watchdog resets indicate external  
electrical spikes or internal controller faults

Date and time of most recent full control reset

A Default Admin Password has not  
been changed from the factory default

Internal calibration check  
Factor required to correct internal 2.5V reference  
1 +/- 0.05

Current loop and turbine water meter power supply  
Thermally fused. Will read <10V if there is wiring a  
loop or meter fault

Internal 12V Relay Supply, Ethernet Option  
& Feed Verify Option  
displays follow the 15V display.

System:  
Diagnostics.....  
Alarms  
CLOSED



System:  
Diagnostics.....  
Watchdog Resets  
0



System:  
Diagnostics.....  
Reset to Factory  
2003-11-08 10:30:00



System:  
Diagnostics.....  
Admin Password  
Default



System:  
Diagnostics.....  
Internal 2.5V  
0.9996



System:  
Diagnostics.....  
15V External Supply  
20.276



## **3.1 Read this first!**

### **ONE CONTROLLER – MANY APPLICATIONS**

Controllers are shipped configured with a wide range of sensors for one or more cooling towers, multiple boilers, hot & chilled closed loops, condensate monitoring, waste water control and monitoring...

### **YOUR CONTROLLER – SENSOR SET**

The installation instructions for your specific controller are in the HELP section YELLOW pages.  
HELP is the last tab in the manual binder.

### **YOUR APPLICATION CHANGES**

The controller can be completely reconfigured using the keypad or optional browser  
Feed methods and interlocking can be changed.  
pH control can be switched to ORP

A tower controller can be switched to waste water or boiler-condensate controls

You need to automate sensor cleaning, measure more water meters,  
Feed based on steam production, Bleed on the ratio of make-up & bleed volume...

### **YOU NEED TO ADD ANOTHER PH, ORP, BOILER CONDUCTIVITY...**

Upgrade kits can expand the controller to 14 analog sensors,  
10 watermeter-digital inputs and 10 Relay controls

The controller recognizes new sensor drivers and auto-configures.  
The digital inputs can be switched between water meter inputs to contact closure inputs.

### **THE REST OF SECTION 3.**

Not all of the following sections apply to your controller or application.  
You may need some of these functions as your application evolves.

### M7 Type Controllers

Water meters are typically connected to inputs O,P & Q.  
Flowswitches, fail-to-sample sensors and contact sets connected to R, S & T.


### M14 Type Controllers

Water meters are typically connected to inputs O,P & Q and U,V & W.  
Flowswitches, fail-to-sample sensors and contact sets connected to R, S & T and X,Y & Z.




### Digital Inputs

Inputs 'O' to 'Z' may be user configured for water meters and volume measurements  
OR contact closure and state, interlocking functions


### Typical Water Meter & Flowswitch Connections

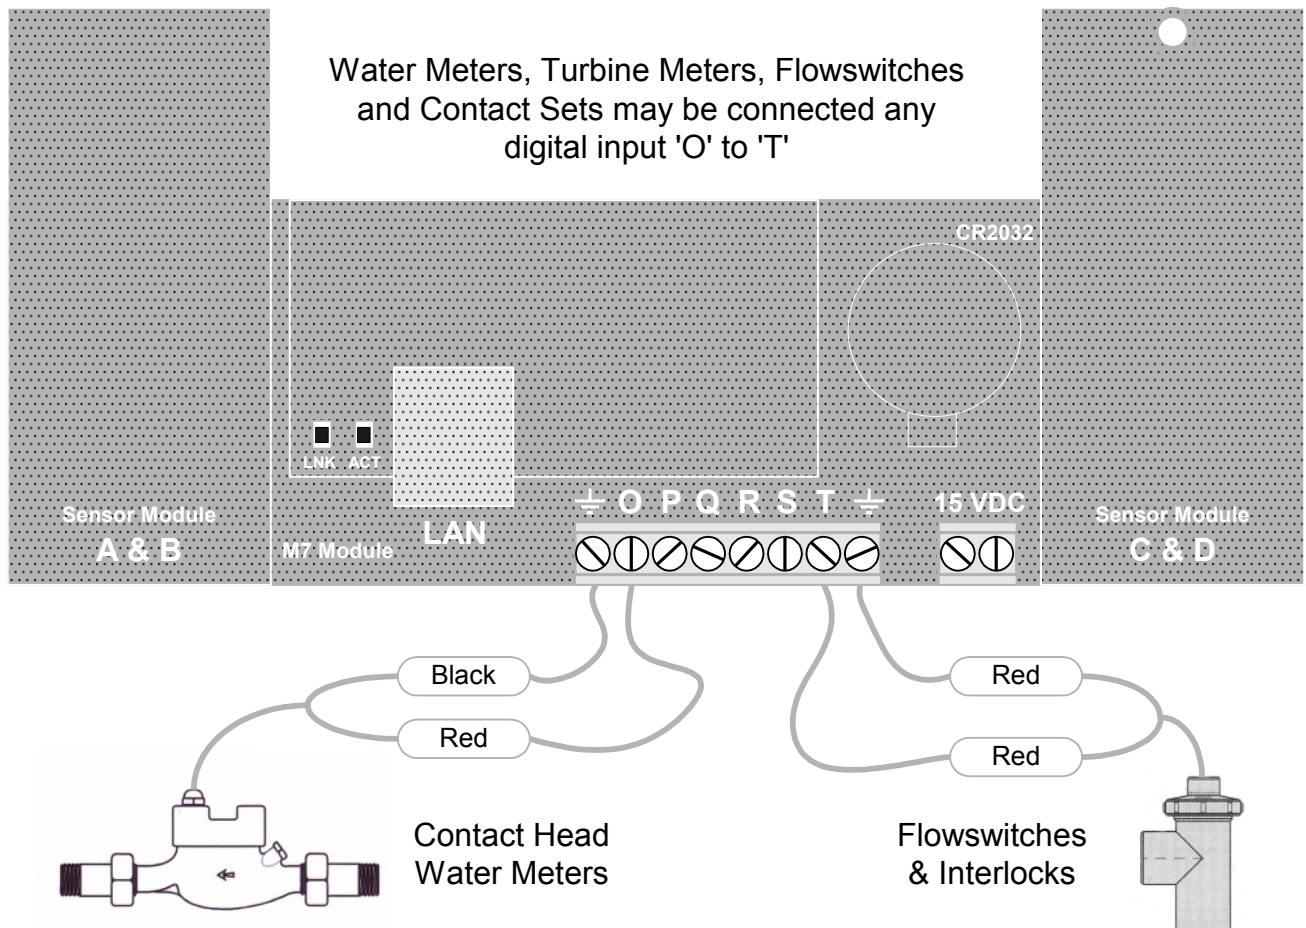

## Typical Sensor Driver Connections

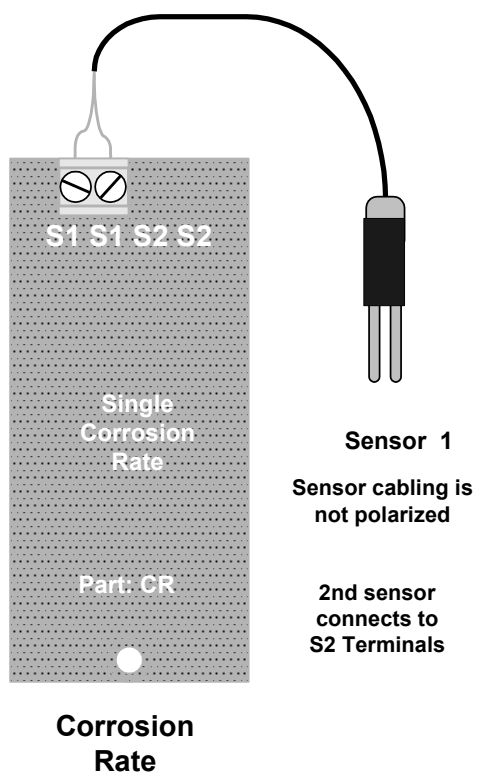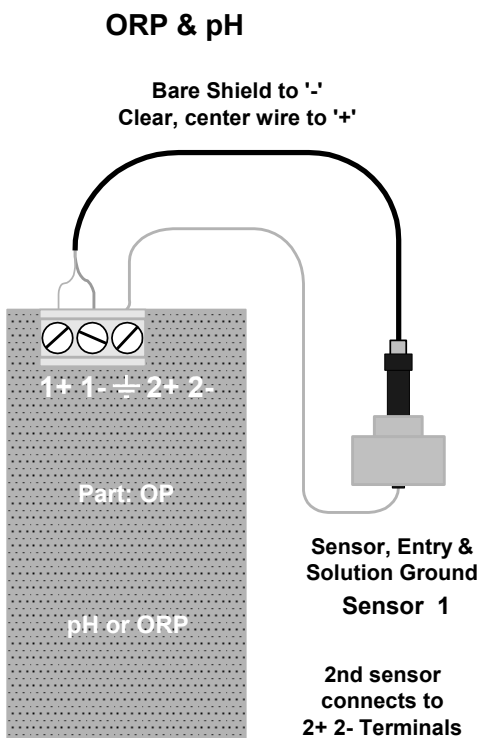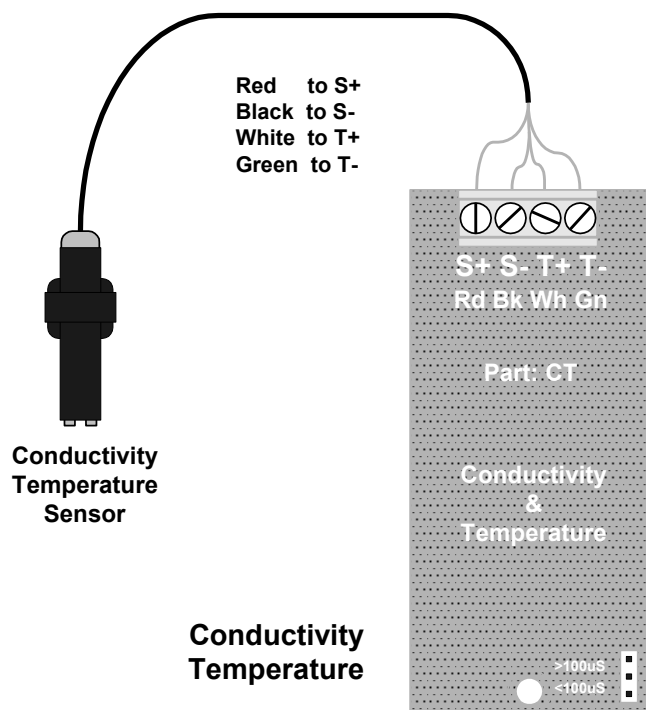


### Boiler Condensate

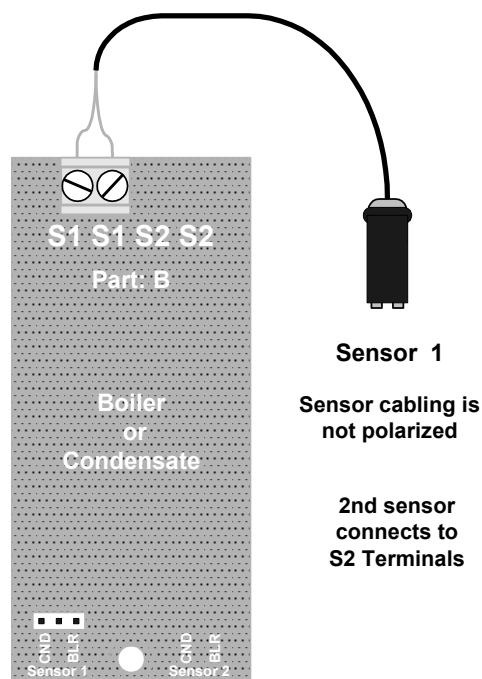







## Typical 4-20mA Output & Input Connections

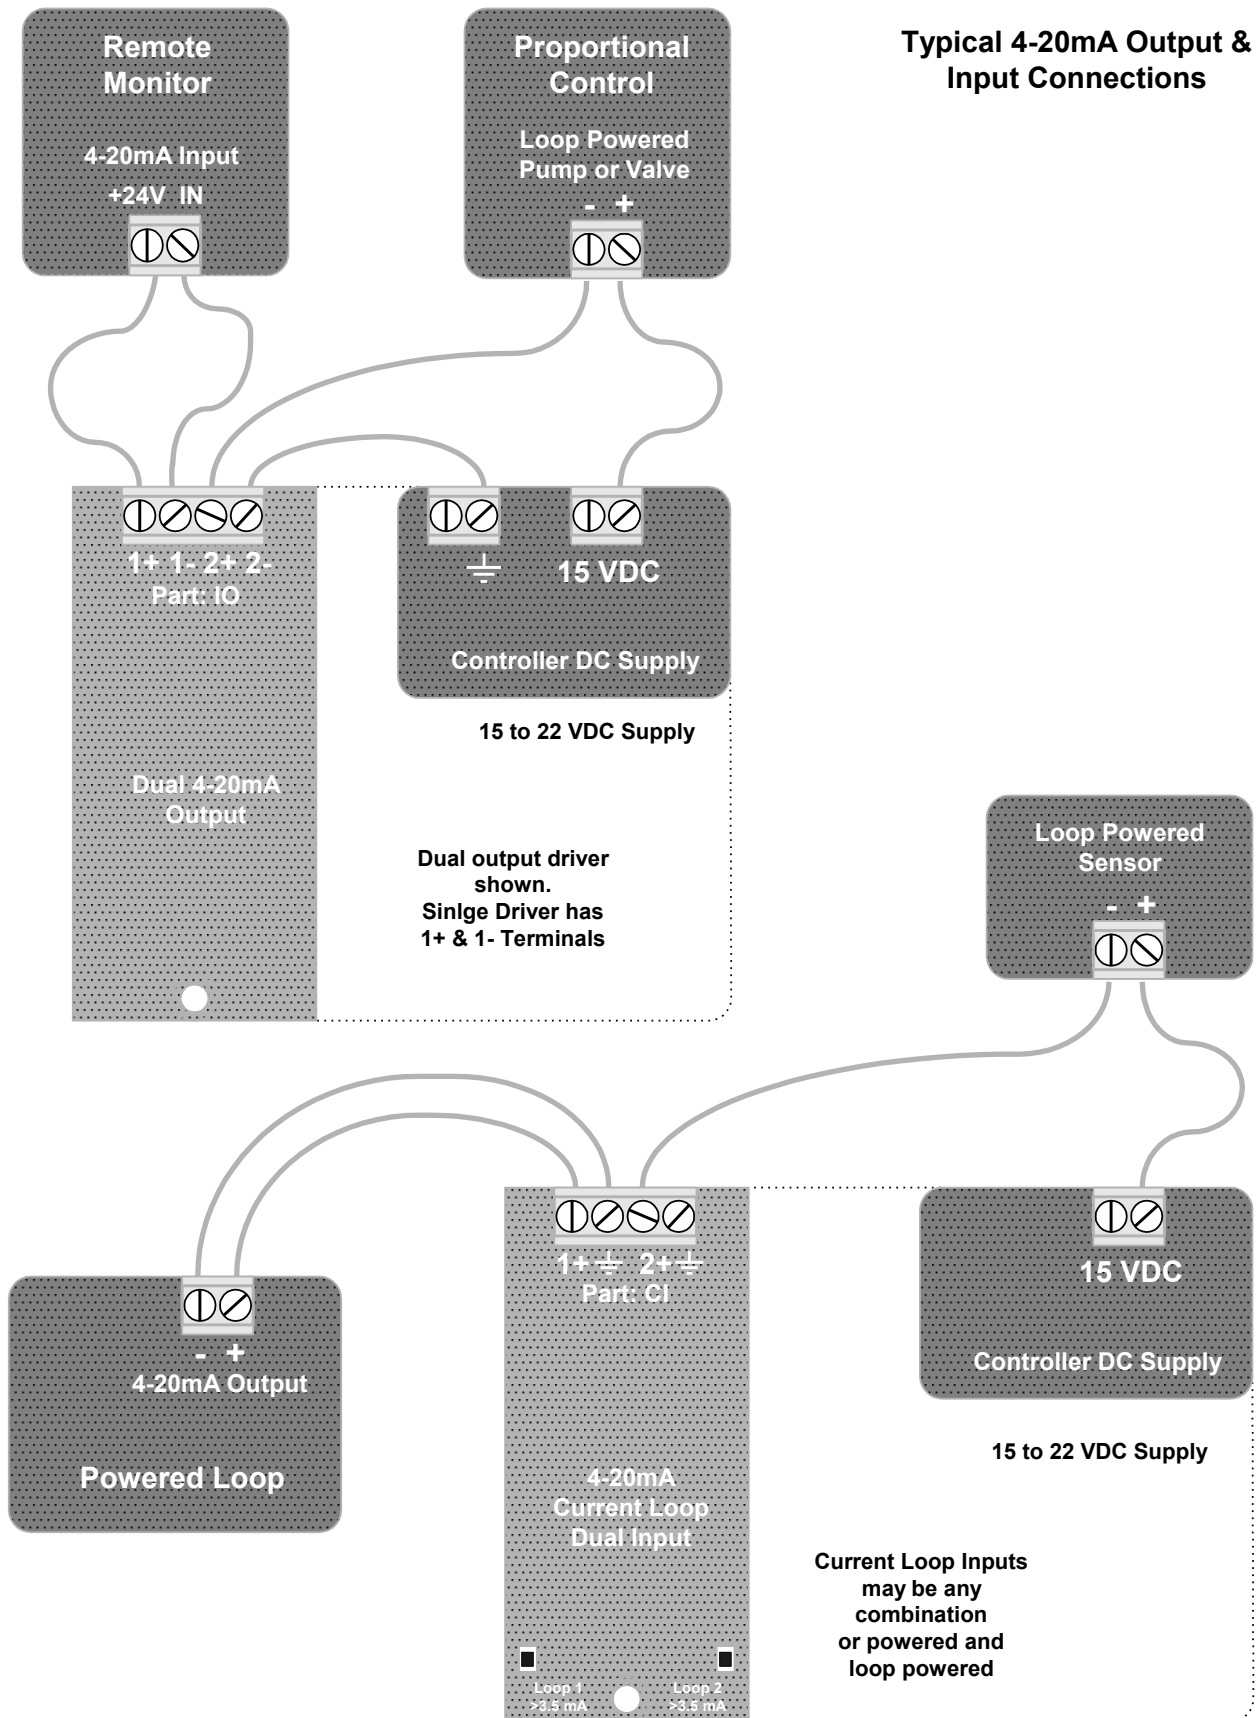

M7 Module  
Sensor Locations

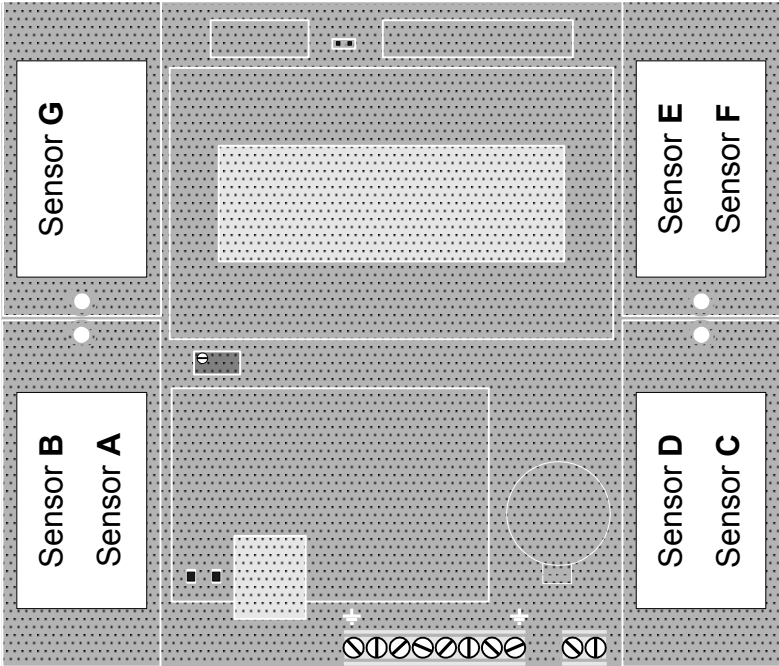


M14 Module  
Sensor Locations

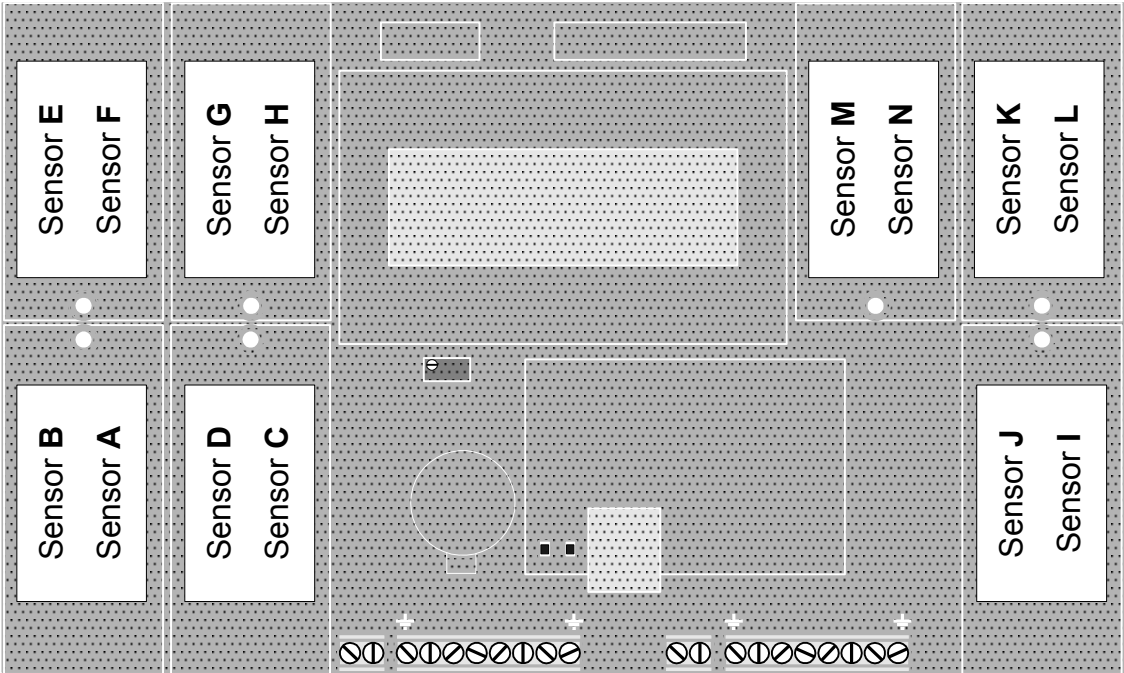



### 3.3 Connect Pumps, Valves, Solenoids


## Typical Wiring for Pumps, Solenoids and Valves

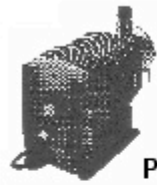

**Pump**

Black 1  
White 1  
Green

Pumps are usually plugged in.

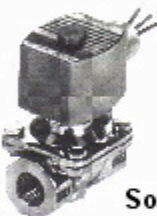

**Solenoid**

Red 2  
Red 2  
Green

Solenoids are both hardwired and plugged in.



**Motorized Valve**

Red 4  
Black 4  
White 4  
Green

Motorized Valves must be hardwired



**Pump**

Black 6  
White 6  
Green

Fractional HP pumps require motor start relays.



**Solenoid**

Red 7  
Red 7  
Green

Valve connections vary with manufacturer

Worcester:  
WHITE to flying lead,  
RED to NC &  
BLACK to NO



**Motorized Valve**

Red 9  
Black 9  
White 9  
Green

Aluminum Backplate  
Green

Black 1  
Red 2

White 1  
Red 2  
White 4

Red 4  
Black 4

Black 6  
Red 6

White 6  
Red 7  
White 9

Red 9  
Black 9



## VERIFY SENSORS MATCH CONTROLS

Controlling sensors are followed by the controlled pumps, valve & solenoids.

Make-meter connected to input 'O'.  
Controls the inhibitor pump powered by Relay 1.

Key ENTER to verify, modify pump setpoints

Conductivity Sensor connected to 'B'.  
Controls the bleed solenoid powered by Relay 2

Key ENTER to verify, modify bleed setpoints

pH Sensor connected to 'C'.  
Controls the acid pump powered by Relay 3

Key ENTER to verify, modify acid feed setpoints

Page 2 shows key sequence

Boiler Conductivity Sensor connected to 'E'.  
Controls the blowdown valve powered by Relay 4

Key ENTER to verify, modify blowdown setpoints

Biocides follow sensor no used for control  
As you key UP DOWN

Sensors may be used to control 4-20mA outputs  
In controllers with IO Driver cards

Condensate Monitoring Sensor connected to 'F'.  
Controls the C1 4-20mA control

Key ENTER to verify, modify 4-20mA span

Tower Make-up ↑ 0  
12650 gal  
Inhibitor Pump ← 1  
OFF: Setpoints



Tower conduct'ity ↑ B  
1862 uS  
Bleed Solenoid ← 2  
ON: 113.2 min



Tower pH ↑ C  
7.62 pH  
Acid Pump ← 3  
ON: 8.6 min



Boiler 1 cond. ↑ E  
3521 uS  
Bl B'down Valve ← 4  
OFF: Setpoints



Biocide 1 ↑ 7  
ON: owes 13.4  
Biocide 2 ← 8  
OFF: No Control



Condensate Cond. ↑ F  
20.3 uS  
4-20mA Output C1 ← C1  
8.46 mA 20.3 uS

## VERIFY – MODIFY SETPOINTS

The Tower pH sensor at input 'C'  
Controls the acid pump powered by relay 3  
Key ENTER at Acid Pump to verify-modify setpoints

Key DOWN to Configure and key ENTER

Key DOWN to Turn ON Setpoint

Its' currently 8.25pH, Key ENTER to Modify.

Key DOWN to verify-modify Turn OFF Setpoint.

Key ENTER at 4-20mA display

Key DOWN to Configure & key ENTER

4mA level = 0uS

Key ENTER to modify or DOWN  
to verify-modify 20mA Level


20mA level = 100uS

Key ENTER to modify

Tower pH                      ↑ C  
                                    7.62 pH  
Acid Pump                      ← 3  
ON:            8.6 min




Acid Pump                      3  
Diagnostics  
Configure                      ←  
Alarms                              ↓




Acid Pump                      3  
Configure.....  
Turn ON setpoint  
                                    8.25 pH                      ←↕

4-20mA Output C1    C1  
Diagnostics  
Configure                      ←



4-20mA Output C1    C1  
Configure.....  
4mA Level  
                                    0.00 uS                      ←↕



4-20mA Output C1    C1  
Configure.....  
20mA Level  
                                    100.00 uS                      ←↕

## 3.5 Setting Sensor Alarms

### VERIFY – MODIFY ALARMS


Key UP DOWN to the target sensor  
and key ENTER

Tower pH ←C  
7.62 pH  
Acid Pump ↓3  
ON: 8.6 min




Key DOWN to Alarms and key ENTER

Tower pH C  
Diagnostics ↑  
Alarms ←  
Calibrate




Key ENTER to modify High Alarm  
or DOWN for Low Alarm

Tower pH C  
Alarms.....  
High Alarm  
10.00 pH ←↕



Key ENTER to modify Low Alarm  
or DOWN for Alarm Relay


Tower pH C  
Alarms.....  
Low Alarm  
5.50 pH ←↕



A Tower pH alarm will trip the controller alarm relay

Key ENTER & UP DOWN to select NO  
to not set the alarm relay on a pH alarm

Tower pH C  
Alarms.....  
Set Alarm Relay  
YES ←↕



A high or low alarm will register 5 minutes  
after it occurs, to block alarms on transients

Key ENTER to modify  
A delay of 0.0 minutes will alarm immediately.

Tower pH C  
Alarms.....  
Delay on Alarm  
5.0 minutes ←↕

## 3.6 Setting Output Alarms

### VERIFY – MODIFY FEED LIMIT ALARMS

Key UP DOWN to the target control  
and key ENTER

Key DOWN to Alarms and key ENTER

An acid pump limit timer prevents overfeed  
on pH sensor fault.

Key ENTER to modify Minutes/Actuation  
or DOWN for Minutes/Day

Key ENTER to modify Minutes/Day  
or DOWN for action on alarm

Acid pumps are usually set to Turn OFF on Alarm

Bleed controls are usually set to  
NOT Turn OFF on alarm.

A feed limit alarm will trip the controller alarm relay


Key ENTER & UP DOWN to select NO  
to not set the alarm relay on feed limiting.

Key down to view Reset & Most Recent Alarm.


Tower pH ↑ C  
7.62 pH  
Acid Pump ← 3  
ON: 8.6 min




Acid Pump 3  
Diagnostics ↑  
Configure  
Alarms ←




Acid Pump 3  
Alarms.....  
Minutes/Actuation  
45.0 minutes ←↕



Acid Pump 3  
Alarms.....  
Minutes/Day  
600.0 minutes ←↕



Acid Pump 3  
Alarms.....  
Turn OFF on Alarm  
YES ←↕



Acid Pump 3  
Alarms.....  
Set Alarm Relay  
YES ←↕



### 3.7 Verify Interlocks

#### INTERLOCKS PREVENT CONTROLS FROM TURNING ON

Key UP DOWN to the target control  
and key ENTER

Key DOWN to Configure and key ENTER  
then key DOWN to Interlocked by

In this example, when the Flowswitch connected to  
input 'T' closes, the Tower Bleed can operate

Key ENTER to modify the interlock

In the 2<sup>nd</sup> example, Steam Treatment is being fed  
based on Steam demand

Key ENTER , then key DOWN  
to Configure and key ENTER

Key DOWN to Interlocked by

An R | S, 'ORS' requiring either R or S contact  
sets closed to operate the pump


R+S 'ANDS', requiring both R & S contact set to be  
closed to operate the pump

In this example, R & S may close when  
Boiler s1 & 2 are ON-line

|              |    |
|--------------|----|
| Conductivity | ↵E |
| 1245 uS      |    |
| Tower Bleed  | ↓2 |
| ON: 8.6 min  |    |



|             |   |
|-------------|---|
| Tower Bleed | 2 |
| Diagnostics | ↑ |
| Configure   | ↵ |
| Alarms      |   |




|                |    |
|----------------|----|
| Tower Bleed    | 2  |
| Configure..... |    |
| Interlocked by |    |
| T              | ↵↕ |

|                 |    |
|-----------------|----|
| Steam Demand    | ↑P |
| 32500 lb        |    |
| Steam Treatment | ↵5 |
| ON: 10.4 min    |    |



|                 |   |
|-----------------|---|
| Steam Treatment | 5 |
| Diagnostics     |   |
| Configure       | ↵ |
| Alarms          | ↓ |



|                 |    |
|-----------------|----|
| Steam Treatment | 5  |
| Configure.....  |    |
| Interlocked by  |    |
| R S             | ↵↕ |

### 3.8 Verify Blocking Relays

#### BLOCKING PREVENTS TWO CONTROLS FROM TURNING ON AT THE SAME TIME

This example shows an Inhibitor Pump,1 blocked when the Oxidant Pump,3 is ON to prevent Inhibitor – Oxidant reaction

Key ENTER

Key DOWN to Configure and key ENTER then key DOWN to Blocking Relays

This example shows that Relay 1 is OFF whenever relay 3 is ON

Key ENTER to modify the blocking relay  
Selecting 'none' removes the block

This example shows an Inhibitor Pump turned OFF when Relay 2 is ON.

Relay 2 is a tower bleed solenoid.  
This block stops Inhibitor from being pumped down the tower drain

Key ENTER , then key DOWN to Configure and key ENTER

Key DOWN to Blocking Relays


A '2+3' block would prevent the Inhibitor from feeding during bleed AND Oxidant feed.

Key ENTER to modify the blocking relays

```
Inhibitor Pump    ←1
OFF:Blocked 3
Oxidizing Biocide ↓3
ON:    14.2 min
```



```
Inihibitor Pump    1
Diagnostics
Configure          ←
Alarms             ↓
```



```
Inhibitor Pump    1
Configure.....
Blocking Relays
3                 ←↕
```

```
Inhibitor Pump    ←1
OFF:Blocked 2
Oxidizing Biocide ↓3
ON:    14.2 min
```



```
Inihibitor Pump    1
Diagnostics
Configure          ←
Alarms             ↓
```



```
Inhibitor Pump    1
Configure.....
Blocking Relays
2+3               ←↕
```

### 3.9 Selecting Special Controls

This example shows an Inhibitor Pump  
with 'Bleed then Feed' Special Control

Key ENTER

Key DOWN to Configure and key ENTER  
then key DOWN to Special Control

Displays current special control

Key UP DOWN to view available Special Controls  
Meter controlled relays do not have Special Controls

No Control & sensor controlled relays can select from:  
**Bleed & Feed, Bleed then Feed, Captured Sample,**  
**% Time, Prebleed-Lockout, Time Modulation,**  
**Holding Time and Time Modulation**

Key ENTER to view, modify current Special Control

Key ENTER to modify the Bleed Relay  
Or DOWN to view the % of Time

In this Bleed Then Feed example:  
For every 5 minutes of Tower Bleed time,  
the Inhibitor runs for 46% or 136 seconds  
AFTER the bleed turns OFF


Key ENTER to modify the % of Time  
This example increase the % of time from 46% to 52%

Special Controls are detailed in the on-line  
M714\_Tech, technical service manual


Inhibitor Pump      ←1  
OFF: No Control  
Biocide A              ↓3  
ON:      8.6 min



Inhibitor Pump      1  
Diagnostics           ↑  
Configure           ←  
Alarms




Inhibitor Pump      1  
Configure.....  
Special Control  
Bleed then Feed      ←↕

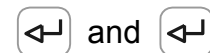

Inhibitor Pump      1  
Bleed then Feed-----  
Bleed Relay  
Tower Bleed           ←↓



Inhibitor Pump      1  
Bleed then Feed-----  
% of Time              ←  
46%                      ↓



Editing Value:  
% of Time.....  
    52%                      ↕→  
← Executes      ⓪ Exits



### 3.10 Modifying Variable Cycles 1 of 2

Variable Cycles may be used where varying make-up conductivity cause water treatment fault.

Requires a make-up conductivity sensor

Key ENTER

Key DOWN to Variable Cycles and key ENTER

Key ENTER to modify Low Range

When the Make-up Conductivity is less than Low Range  
Bleed is controlled at Low Cycles

Key ENTER to modify the Low Cycles

Key ENTER to modify Medium Range


When the Make-up Conductivity is less than Medium Range & greater than Low Range  
Bleed is controlled at Medium Cycles

Key ENTER to modify the Medium Cycles


```
Conductivity      ↑ E
      1384 uS
Tower Bleed      ← 2
ON:      8.6 min
```




```
Tower Bleed      2
Timed Events      ↑
Setup
Variable Cycles   ←
```




```
Tower Bleed      2
Variable Cycles....
Low Range
      350 uS      ← ↑
```



```
Tower Bleed      2
Variable Cycles....
Low Cycles
      6.100 cycles ← ↓
```



```
Tower Bleed      2
Variable Cycles....
Med. Range
      650 uS      ← ↓
```



```
Tower Bleed      2
Variable Cycles....
Med. Cycles
      4.250 cycles ← ↓
```

↓ or ← Continued on Page 2

## 3.10 Modifying Variable Cycles 2 of 2

Key ENTER to modify High Range

When the Make-up Conductivity is less than High Range & greater than Med. Range Bleed is controlled at High Cycles

Key ENTER to modify the High Cycles

When the Tower Conductivity exceeds Maximum Conductivity the Bleed is controlled at Max Conductivity

Key ENTER to modify the Maximum Conductivity

Tower Bleed 2  
Variable Cycles.....  
High Range  
1000 uS

↓ or ←

Tower Bleed 2  
Variable Cycles.....  
High Cycles  
2.500 cycles

↓ or ←

Tower Bleed 2  
Variable Cycles.....  
Max Conduct.  
3000 uS

↑ or ← or ⊗

### Variable Cycles Primer

Variable Cycles must be set to YES in the Bleed control **Configure** menu option

The bleed relay must be controlled by a conductivity ratio.  
Example: Control Equation is **E/F** where **E** = Tower Conductivity & **F** = Makeup Conductivity.  
The Control Equation may be modified in the Bleed control **Configure** menu option

Variable Cycles modifies bleed setpoints as make-up conductivity changes  
Setpoint adjustment is blocked when Variable Cycles is controlling.

Bleed Setpoint units are set to 'cycles' when Variable Cycles are selected.

You will need to modify the Range and Cycle Setpoints for your site  
makeup water chemistry and water treatment program

## 3.11 Modifying Feed Verification 1 of 2

**Controller Option:** Feed Verification calculates  
Inhibitor ppm and Inhibitor tank level  
with fail-to-feed alarms.

Requires a feed verification meter on the  
inhibitor chemical pump feed.

Key ENTER

Key DOWN to Feed Verify and key ENTER

The Verify Meter measures the volume  
pumped by the inhibitor pump

Key ENTER to modify Verify Meter sensor location

Inventory Location logs tank level,  
lowering level as inhibitor is pumped

Key ENTER to modify Inventory location

ppm location logs the calculated ppm  
based on volume pumped and the method used to  
calculate cycles

Key ENTER to modify ppm location


One of three methods is used to calculate cycles  
Fixed Cycles | Bleed Cycles | Meter Cycles

Key ENTER to modify the cycles method


Tower Make-up      ↑ 0  
18425 gal  
Inhibitor Pump      ← 1  
ON: 10.6 min




Inhibitor Pump      1  
Setup      ↑  
Variable Cycles  
Feed Verify      ←




Inhibitor Pump      1  
Feed Verify.....  
Verify Meter  
Meter Input Q      ←↕



Inhibitor Pump      1  
Feed Verify.....  
Inventory location  
Sensor Input G      ←↕



Inhibitor Pump      1  
Feed Verify.....  
ppm location  
Sensor Input H      ←↕



Inhibitor Pump      1  
Feed Verify.....  
ppm method select  
Fixed Cycles      ←↑



## 3.11 Modifying Feed Verification 2 of 2

Fixed Cycles applies a user set cycles  
to calculate ppm

Key ENTER to view-modify cycles

ppm is calculated using 3.5 cycles of concentration  
Key ENTER to modify

Key UP DOWN and RIGHT to modify  
then ENTER

Increasing the concentration from 3.5 to 4.23  
increases the calculated ppm.

Select one:  
ppm method select...  
Fixed Cycles  
← Executes 0 Exits



Inhibitor Pump 1  
ppm method select---  
Fixed Cycles  
3.500 cycles ←



Inhibitor Pump 1  
Fixed Cycles.....  
4.230 cycles ↕→  
← Executes 0 Exits



### Feed Verification Primer

Feed Verification must be set to YES in the Inhibitor pump control **Configure** menu option

The Inhibitor pump relay must be controlled by the make-up water meter.

A fail-to-feed alarm is set on the feed verification meter input if the meter does not measure volume after the pump has been ON for 30 seconds

Meter Cycles ppm calculation requires a water meter on the tower bleed.  
Cycles of concentration is calculated using ratio of the Make-up to Bleed meter volumes

Bleed Cycles ppm calculation requires the conductivity of the tower make-up.  
Cycles of concentration is calculated using ratio of the Tower to Make-up conductivities

## 3.12 Time & Date

Time & Date are battery backed  
Adjusting Timer & Date may not be  
required on start-up

Key ENTER at System:

Key DOWN to Time & Date and key ENTER

Displays current Date and Time

Key ENTER to modify

Key UP DOWN and RIGHT to modify  
the Date and Time

Key ENTER


Displays modified Date & Time

EXIT returns to System:

System: 2003-10-27 ↵  
S/N: M0389001  
Alarms: 16:38:11 ↓  
none



System:  
Enable I/O ↑  
Configure  
Time & Date ↵



System:  
Time & Date.....  
Adjusts Date-Time  
2003-10-27 16:38 ↵



System:  
Adjusts Date-Time...  
03-11-27 17:38 Wed ↕→  
↵ Executes 0 Exits



System:  
Time & Date.....  
Adjusts Date-Time  
2003-11-27 17:38 ↵





## 4.1 Spare Parts

### Fusing

| Protects  | Rating / Type  | Manufacturer - Vendor  |
|---|--|--|
| <b>Power Relays</b><br>Fuse 1-5<br>&<br>Fuse 6-10 | 6.3 Amps @ 120VAC<br>3 Amps @ 250VAC<br>5mm x 20mm,<br>Fast Acting | Littlefuse, Type 217, 250VAC<br>Digikey Part# F953-ND<br>Digikey Part# F950-ND<br><br><a href="http://www.digikey.com">www.digikey.com</a> 1-800-344-4539                            |
| <b>Controller – Modem</b><br><br>Control Fuse     | 1.5 Amp @ 120VAC<br>½ Amp @ 250VAC                                 | Cooper Bussmann, PC-TRON,<br>PCC Series, 250VAC<br>Digikey Part# 283-2758-ND<br>Digikey Part# 283-2120-ND<br><br><a href="http://www.digikey.com">www.digikey.com</a> 1-800-344-4539 |

### Controller Parts

| Part#       | Description  |
|-------------|--|
| M-FUSES     | 120VAC Fuse Kit, 20 x 6.3A Relay Fuses,<br>4 x 1 Amp control fuses |
| Cable-Xover | Crossover cable, Controller RJ45 to Notebook NIC                   |
| Mod-LCD4    | Replacement 4x20 LCD Display                                       |
| Mod-M3000   | Micro controller module  |
| Mod-M7      | Seven analog, Six digital input module                             |
| Mod-M14     | Fourteen analog, Twelve digital input module                       |
| Mod-PR5     | Five power relay, power module                                     |
| Mod-PR10    | Ten power relay, power module                                      |
| Modem       | Modem, serial cable & power cube                                   |
| SFCBL4      | 120VAC Four Plug box, flex conduit & fittings, pre-wired           |
| SFCBL2      | 120VAC Two Plug box, flex conduit & fittings, pre-wired            |
| H-SEN6      | Sensor entry gland, six cable seal                                 |

### Replacement Sensors and Upgrade Kits

Refer to 4.2 Technical Support

**ProMinent Fluid Controls, Inc.**  
(formerly Aquatrac, Inc.)

136 Industry Drive  
Pittsburgh, PA  
15275

412-787-2484  
8:00AM - 5:00PM EST

### **Other Keypad Functions**

Navigation to keypad functions is detailed in Section 4.4, Keypad Navigator

### **Upgrade Kits**

Controls can be added to installed controllers.  
Upgrade kits include sensor, entry fitting, driver card and installation instructions

### **On-Line Help**

Internet HELP is linked in real time by browser users  
with internet accessible controllers

Keypad connect to [www.aquatrac.com/help](http://www.aquatrac.com/help) with 'iNet HELP#' from LCD display

### **Browser Users Manual**

Download **M714\_browse** from [www.aquatrac.com](http://www.aquatrac.com)

### **Controller Technical Manual**

Download **M714\_tech** from [www.aquatrac.com](http://www.aquatrac.com)

### Controllers configured M7-PR5, M7-PR10, M14-PR5 & M14-PR10

| Analog – Digital I/O | Rating - Detail   | Notes   |
|----------------------|---|---|
| Analog Inputs        | <b>M7:</b> 7 Analog Sensors<br><b>M14:</b> 14 Analog Sensors  | 3 Dual & 1 Single Driver<br>7 Dual Drivers<br>Auto-configure on Driver installation and removal   |
| 4-20 ma Outputs      | 0 to 8, DC isolated, loop powered.<br>Nominal 0.1% resolution.<br>Auto polarity correction field wiring.                          | Single & Dual Drivers<br>Each 4-20mA output uses an Analog Input.<br>Auto-configure on Driver installation and removal  |
| Digital Inputs       | <b>M7:</b> 6<br><b>M14:</b> 12<br>Dry Contacts, 250mS response<br>Water Meters, 400 Hz max<br>0.5mA @ 5VDC<br>measurement current | User configurable as water meters or contact sets.<br><br>Contact head meters software debounced.<br>Turbine-Paddle wheel rating = Seametrics max pulse rate. |
| Relay Outputs        | <b>M7:</b> 5 1 SPST, 4 SPDT<br><b>M14:</b> 10 2 SPST, 8 SPDT  | Relays rated 10A, 120VAC<br>Fused in sets of 5 relays<br>Detection and Alarm on fusing  |
| Alarm Relay          | Dry contact set, Unfused  | User selected NO or NC  |
| Load Current         | <b>PR10</b> Only  | Measures total AC load current  |

| Communications<br>User Interface               | Rating – Detail  | Notes   |
|--|--|---|
| Keypad - LCD                                   | 5 Key Tactile feedback: UP / DOWN / ENTER / EXIT / RIGHT<br>4 Line x 20 Character, Backlit                                 | Scan rate 100mS nominal<br><br>User adjustable contrast   |
| 10 BaseT, TCP-IP<br>Ethernet LAN<br>(Optional) | HTML, Telnet micro Web Server<br>Full command, control, reconfigure via browser.<br>Network parameters and ports User set. | Password, UserID protected.<br>Browser can show LCD is real time.<br>Auto-configures views linking sensors and controls.<br>HELP links for on-line users. |
| Modem<br>(Optional)                            | 56K, V.90 Remote Telnet access.<br>Dedicated controller serial port.   | Dial-out on alarm to pager or PC<br>Forced dial-out diagnostics   |

| Controls                       | Rating - Detail   | Notes  |
|--------------------------------|---|--|
| ON/OFF                         | User set deadband and controlling sensor(s) or contact set.<br>User defined rising, falling or between Setpoints or active only during timed events | Any relay can be user configured for any Control.<br>Control by up to 4 analog sensors using +,-,x & / math                        |
| Biocide Feed<br>(Timed Events) | 28 Events per relay<br>1 minute resolution<br>Lockout, Prebleed on both time and conductivity.  | Each relay can be set to 1,7 or 28 day cycle.<br>Timed events may exist concurrently with other controls                           |
| Proportional 4-20mA            | User defined control by sensor or relay control equation.<br>Auto-Manual switching.   | Software ZERO & SPAN adjust.<br>Interlocked current loops go to 4mA  |
| Proportional ON/OFF            | Timed Modulation and Timed Cycling Special Controls   | ON time modified by Setpoint to actual delta.  |
| Volumetric                     | User set, measure volume & pump ON time.<br>Sequential control, measures Makeup volume, then bleeds for user set volume.                            | Rate-to-Volume conversion routes analog input to Water Meter(s).   |
| Timed                          | Bleed & Feed and Bleed then Feed<br>Includes % of Bleed Time.<br>User set % Time<br>Prime<br>Holding Time   | % Bleed & Feed based on 5 minute period.<br>% Time & Prime on 5 minute period.<br>Holding time averages sensor values for control. |
| Captured Sample – Boilers      | Sample / Measure / Blowdown / Resample user set timing.<br>Fail-to-Sample sensor support included.  | Any sensor may be used.<br>Support for high pressure sites   |
| Interlocking                   | 1 to 4 contact set inputs,<br>AND & OR support  | Relay OFF when contact set opens.  |
| Blocking                       | 1 to 4 relays may block any other relay   | Support for common Oxidant –Inhibitor feed.<br>If Blocking relay ON, this relay OFF  |

| Controls                      | Rating - Detail   | Notes   |
|-------------------------------|---|---|
| Alarms – Feed Limit Timers    | Minutes / Actuation<br>Minutes / Day<br>User defined trip alarm relay,<br>and/or dial-out   | User defined OFF on Feed Limit<br>Auto reset on Bleed & Feed and<br>Bleed then Feed                                     |
| Variable Cycles               | Three user defined ranges of<br>make-up conductivity and target<br>cycles.<br>User defined maximum tower<br>conductivity.   | Requires control by the ratio of<br>analog sensors.<br>1% deadband on cycles and<br>maximum conductivity                |
| Feed Verification<br>(Option) | ppm calculation based on volume<br>fed and cycles of concentration.<br>Alarm on fail to feed.<br>User selected cycles method:<br>Fixed, Ratio of Tower/Makeup<br>conductivity, Ratio of<br>Makeup/Bleed Volume. | Requires feed volume meter or<br>4-20mA input on feed rate.<br><br>Fail-to-to feed is no volume fed<br>after 30 seconds |

| Data Logging           | Rating - Detail   | Notes  |
|------------------------|---|--|
| Log Content            | Analog Inputs: Min, Max & Average<br>Digital -Water Meters: Volume<br>Digital-Contact Set: ON Time              | Year to date included for Meters                             |
| Log Size               | 600 entries for each of 26 analog<br>and digital inputs and each of 10<br>relay outputs<br>21,600 Entries Total | 600 entries = 25 Days<br>at 60 minutes Logging Rate          |
| Logging Rate           | User set independently for each<br>I/O from 5 to 1440 minutes / entry   | Default 60 minutes   |
| Log File Format<br>XML | User defined start & end date for<br>XML download   | .dtd defines date stamping for<br>each of 21,600 log entries |

| System                   | Rating - Detail   | Notes   |
|--------------------------|---|---|
| Controller Configuration | User selected Save and Restore to<br>FLASH memory                 | Makes current configuration<br>factory default. |
| Watchdog                 | 1 sec. Hardware relay lockout                                     | Active on power up and<br>firmware blocked      |
| Field Upgrades           | Enable ETHERNET, Feed<br>Verification.<br>Add Sensors and Drivers | Upgrades locked to Serial# and<br>date limited. |

| Electrical                      | Rating - Detail  | Notes  |
|---------------------------------|--|--|
| AC Input                        | 120 or 240 VAC, 50/60Hz,   | Switch selectable  |
| Fusing                          | <b>M10 Version</b><br>12.6 Amps @ 120VAC<br>6 Amps @ 240VAC<br><b>M5 Version</b><br>6.3 Amps @ 120VAC<br>3 Amps @ 240VAC | 5x20mm, 120VAC fusing:<br>Relays 1-5 & 6-10: 6.3A ea.<br>Control: 1.5A                                 |
| Surge-Spike Suppression         | Relays 2-5 and 7-10, NO contacts<br>snubbed 0.1uF, 150R<br>Varistor on control AC input                                  | Controller, transformer isolated from AC line  |
| AC Terminals                    | AC Input: AWG 12, 240mm <sup>2</sup><br>AC Outputs: AWG 14, 150mm <sup>2</sup>   | Electrical grounds at bottom of<br>aluminum backplate<br>Conductor insulation rated<br>600VAC minimum. |
| Sensor, Digital Input Terminals | AWG 22, 0.25 – 0.50mm <sup>2</sup>   | MAX AWG14, 150 150mm <sup>2</sup><br>Conductor insulation rated<br>600VAC minimum.                     |
| DC Loop – Turbine Meter Power   | 15 – 22 VDC, unregulated<br>Thermally fused @ 200mA  | Field wiring terminals on <b>M7 &amp; M14</b>  |

| Mechanical                                     | Rating   | Notes  |
|--|--|--|
| Enclosure<br><br>Rating, Dimensions,<br>Weight | Non-metallic, NEMA4X, IP65<br><b>M10 Version</b><br>14"W x 17"H x 6.75"D<br>355mm W x 430mm H x 170mm D<br>17lb. 7.7kg nominal<br><b>M5 Version</b><br>12.5"W x 15"H x 6.5"D<br>320mm W x 380mm H x 165mm D<br>11.8lb. 5.4kg nominal | Nominal dimensions, excluding<br>entry fittings and flexible<br>conduit. Including mounting.<br><br>Enclosure door hinged left.<br><br>Allow 18", left for door opening.<br>Allow 24", below for cable-<br>conduit access. |
| 120VAC Plug Boxes                              | Rated for outdoor use.<br>Limited to 5 Amps / plugbox<br>2 & 4 plug boxes provided with 36"<br>of flexible non-metallic conduit  | Plug boxes not included:<br>1. At hardwired and<br>240VAC sites.<br>2. With controllers shipped<br>outside of North America  |
| Environmental                                  | Pollution Degree 2,<br>Altitude 2000m,<br>Installation Category II,<br>Humidity 5% to 95%,   |  |

|  |                       |  |
|--|-----------------------|--|
|  | Temperature 0C to 40C |  |
|--|-----------------------|--|

## 4.4 Keypad Navigator 1 of 2

| <b>Activity</b>                       | <b>Top Level<br/>UP DOWN<br/>to:</b> | <b>then<br/>DOWN<br/>&amp; ENTER</b> | <b>then<br/>&amp; Notes</b>   |
|---------------------------------------|--------------------------------------|--------------------------------------|---|
| 4-20mA Output<br>MANUAL-AUTO          | Output<br>C1..C8                     | Configure                            | ENTER & ENTER to toggle<br>MANUAL-AUTO  |
| 4-20mA Output<br>Control Modify       | Output<br>C1..C8                     | Configure                            | DOWN to Control by:   |
| 4-20mA Output<br>C1..C8 Location      | Output<br>C1..C8                     | Diagnostic                           | DOWN to Output Card @:<br>See Section 3.2, 4 of 4   |
| Alarm Relay OPEN-CLOSE                | System:                              | Configure                            | DOWN to<br>Alarm opens contacts   |
| Biocide Cycle:<br>Set 1, 7,28 days    | Output 1..10                         | Setup                                | DOWN to Event Cycle   |
| Contact Set to Meter: Modify          | Input O..Z                           | Configure                            | DOWN to Digital Input Type<br>ENTER, DOWN to Contact<br>Head OR Turbine Meter                       |
| Control Type<br>(Action on Setpoints) | Output 1..10                         | Configure                            | DOWN to Control Type<br>Rising/Falling & Between<br>Setpoints OR Active only<br>during Timed Events |
| Default Configuration LOAD            | System:                              | Configure                            | DOWN to Load Configuration<br>Restores Default Controller   |
| Default Configuration SAVE            | System:                              | Configure                            | DOWN to Save Configuration<br>Makes current configuration<br>the default                            |
| Disable Input                         | Input A..Z                           | Configure                            | DOWN to Disable Input   |
| Disable Output                        | Output 1..10<br>C1..C8               | Setup                                | DOWN to Disable Output  |



## 4.4 Keypad Navigator 2 of 2

| Activity                                    | Top Level<br>UP DOWN<br>to: | then<br>DOWN<br>& ENTER | then<br>& Notes  |
|---|-----------------------------|-------------------------|--|
| Enable I/O                                  | System:                     | Enable I/O              | DOWN to inputs or outputs<br>Key ENTER & DOWN to<br>select                             |
| Input Name:   Modify                        | Input A..Z                  | Configure               | DOWN to Description  |
| Input Resolution:   Modify                  | Input A..Z                  | Configure               | DOWN to Digits after decimal<br>LCD & Browser display                                  |
| Input Units:   Modify                       | Input A..Z                  | Configure               | DOWN to Displayed Units  |
| LAN:<br>IP, Netmask, Gateway,<br>MAC, Ports | System:                     | LAN Setup               | <b>WARNING !</b><br>Do not modify network<br>parameters without site IT<br>permission. |
| Metric:       ON-OFF                        | System:                     | Configure               | DOWN to Metric Units   |
| Meter to Contact Set:   Modify              | Input O..Z                  | Configure               | DOWN to Digital Input Type<br>ENTER,<br>DOWN to Contact Set                            |
| Output Name:   Modify                       | Output 1..10                | Setup                   | DOWN to Description  |
| Password:   Modify                          | System:                     | Passwords               | DOWN to New Password<br>for current userid   |
| Passwords:   ON-OFF                         | System:                     | Configure               | DOWN to Keypad Password  |
| Upgrade:   Reset Passwords                  | System:                     | Upgrade                 | Requires upgrade code<br>Linked to controller serial#                                  |

## 4.5 Revision Log 1 of 1

| Issued     | Contents  |
|------------|---|
| 2004-01-01 | Original issued   |
| 2004-03-16 | Section 1.7.<br>Removes 'userid' selection for keypad log-in. Applies only to controllers with Keypad Passwords ON  |
| 2004-04-05 | Cover page revised, Repagination, Safety grounding information added to page 3.   |
| 2004-04-21 | Section 4.3 - Specification<br><br>1. Specification revised to match controller nameplate<br>2. M5 & M10 enclosure sizing and weights added<br>3. Installation cabling insulation rating specified.<br><br>Section 3.1 – Read This First!<br><br>1. Emphasis added for controller specific HELP section |
| 2007-10-02 | Section 4.3 – Specification / Environmental<br><br>Added CSA statements. Page 51  |
| 2015-8-24  | Safety<br><br>Added caution statement on pg. 4  |