


Operating Instructions ProMinent® ProMix-M (Inline Controls) Polymer Blending System

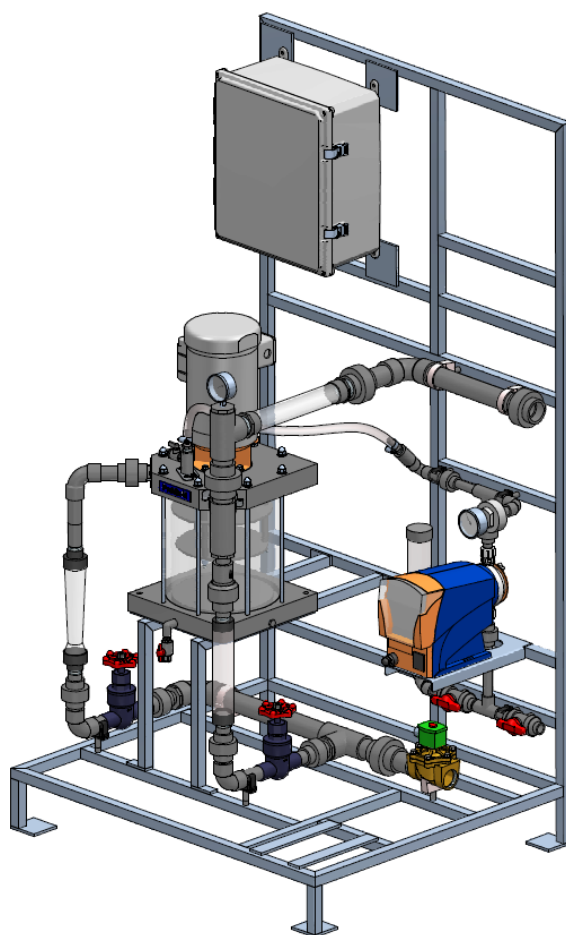

***Please completely read through these operating instructions first! Do not discard!
The warranty shall be invalidated by damage caused by operating errors!***

ProMix_MA_IOM (02/14/2020): – P/N: 984701 Rev C.

ProMinent Fluid Controls, Inc. (USA) 136 Industry Drive, Pittsburgh, PA 15275

Tel: (412) 787-2484 www.prominent.us Fax: (412) 787-0704

Table of Contents

i. Overview:..... 4

ii. ProMix Systems: **Error! Bookmark not defined.**

 Diaphragm Pump Type GAMMA XL (DA Series):..... 6

 Progressive Cavity Pump Type (PA Series): 7

iii. Diaphragm Polymer Pumps used on M Models: 8

iv. Progressive Cavity Polymer Pumps used on M Models:..... 9

1.0 INSTALLATION & QUICK START GUIDE 10

 1.1 Safety:..... 10

 1.2 Delivery & Storage Checklist: 10

 1.3 Installation Considerations: 10

 1.4 Installation: 11

 1.5 Quick Start Guide: 12

 1.6 ProMix Options for Polymer Settings and Controller Door Switches 14

 1.7 Servicing Guidelines:..... 15

2.0 CONTROLLER 16

 2.1 Keypad Navigation 16

 2.2 Main Menu 17

 2.3 Adjust Setpoint 18

 2.4 Modify Timing..... 19

 2.5 Change Polymer type 21

 2.6 Manually Flush Mixer..... 22

 2.7 Status Message Summary 23

 2.8 Calibrate 4-20mA Input..... 24

 2.9 Scale the 4-20mA Input 25

 2.9 Scale the 4-20mA Input (continued) 26

 2.10 Response on Loss of 4-20 mA Input..... 27

 2.11 Calibrate 4-20mA Output..... 28

 2.12 Operation Configuration 29

 2.13 Feed Verification 30

 2.14 4-20mA Controls 31

 2.15 Troubleshooting Guide 31

 2.16 Diagnostic Display..... 32

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

3.0 SPARE PARTS & PREVENTIVE MAINTENANCE 33

 3.1 GAMMA XL (GXLA) Pump Spare Parts..... 33

 3.2 SEEPEX Pump Spare Parts 33

 3.3 PVC Mixing Chamber Spare Parts 33

 3.4 Piping Components Spare Parts 34

 3.5 Control Panel Spare Parts..... 34

 3.6 Maintenance and Lubrication Schedule 35

Appendix A – DA & PA Series Bill of Material 38

 Mechanical & Electrical List..... 38

Appendix B – Control Panel “A Controls” 44

 B.1 Controller Board Layout 44

 B.2 Controller Wiring (DA/PA Series) 46

 B.3 4-20 mA Input Scaling..... 53

Appendix C – Polymer Sizing / Dosage 54

Appendix D – Reference Documents 55

Appendix E - Keypad Menu Overview..... 57


ProMinent ProMix 'DA' & 'PA' Polymer Feeder

i. Overview:

The ProMix M Polymer Feeder is a skid system designed to control feed water and polymer and combine them to produce a high quality solution. The system is designed to receive liquid neat polymer while mixing it with feed water to produce and discharge a quality solution from the system.

Research in the science of polymer activation indicates that the activation energy must decrease as the polymeric chain is uncoiled to prevent rupture and hence decrease the performance of the product.

The mixing of the Polymer Feeder is accomplished mechanically with three distinct mixing zones separated by baffles. The first zone consists of a fast mixing blade that delivers high shear at the precise point of polymer injection, creating an immediate dispersion before agglomeration takes place. The second zone mixing blade induces a vortex and draws solution down through the center of the chamber from zone one and forces the solution outward to the sides and then down into zone 3. Finally, the third zone mixing blade gently agitates/blends the active polymer solution before it exits the chamber through the bottom of the discharge tube.

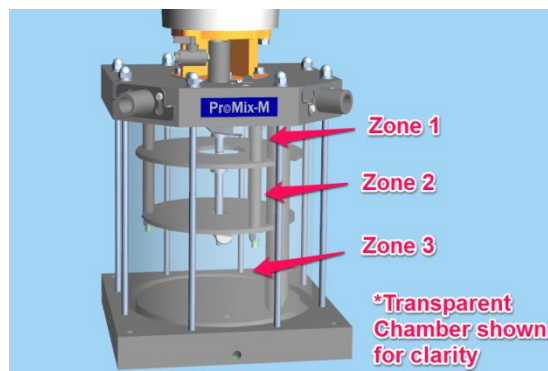

The ProMix M Polymer Feeder controller permits several operation options using the 'A' controller. These options and their respective configurations are selected using various combinations of the controller door switch positions and polymer type selections. The controller allows the polymer pump speed to be selected either locally (keypad) or remotely (4-20 mA signal) from 0 to 100%. The polymer dosage rate must be calculated and the pump adjusted for the desired ratio concentration of polymer to dilution water leaving the feeder by volume. Different maximum concentrations are possible based upon the type of polymer. Emulsion polymers should be limited to 1% concentration in the mixing chamber and Mannich polymers should not exceed 10%. These polymer types are selectable from the keypad menu.

The System Start switch on the controller door has three positions ON-OFF-REMOTE. ON enables the controller locally and REMOTE enables the controller via a customer supplied dry contact. The Polymer Pump switch has two positions LOCAL-REMOTE. If the pump speed is to be selected using the keypad on the controller door then the Polymer Pump switch should be moved to the LOCAL position. When the pump is to be controlled via a remote 4-20 mA signal then REMOTE should be selected.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

Placing the System Start switch in the OFF position after having first been in either of the other two positions will initiate a flush cycle before shutting down. The Polymer Pump switch on the controller front door has two positions to choose the source of the pump control signal. In the LOCAL position the controller uses the keypad entry for polymer pump speed. In the REMOTE position the user generated 4-20 mA signal represents 0 – 100% pump speed. The user must manually adjust the primary and post dilution valves for the desired dilution water flow rate and must calculate the required pump speed to attain the desired concentration. Rotameters are provided to monitor the dilution water flow rates.

The design incorporates an electric solenoid valve (water inlet), flow meter/switch, manually adjustable rotameters for primary and post dilution flow, peristaltic neat polymer pumps, microprocessor based controller, manual ball valves, pump calibration column, PVC piping and components, and polymer mixing chamber mounted on a skid to facilitate proper mixing and delivery.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

ii. ProMix Systems:

Diaphragm Pump Type GAMMA XL (DA Series):

PART NUMBER	MODEL	PUMP TYPE	MAX CAPACITY
1048367	300X2-2.3DA	Gamma XL 1020	5.18 GPH
1048368	600X2-3.8DA	Gamma XL 1020	5.18 GPH
1048369	600X2-6.2DA	Gamma XL 0730	7.76 GPH
1048370	600X2-10.3DA	Gamma XL 0450	12.95 GPH
1048371	1200X2-6.2DA	Gamma XL 0730	7.76 GPH
1048372	1200X2-10.3DA	Gamma XL 0450	12.95 GPH
1048373	1500X2-6.2DA	Gamma XL 0730	7.76 GPH
1048374	1500X2-10.3DA	Gamma XL 0450	12.95 GPH

*****Refer to Appendix C for proper sizing*****

Overall Skid Dimensions.....72"H x 40"W x 34"D
Overall Weight of Skid220 lbs
Power Requirements 120VAC, 60Hz, 1 Phase, 20 Amp
Volume of Mixing Chamber 3.2 Gallons
Maximum Rated Chamber Pressure.....150 PSIG
Normal Operating Pressure 58 PSIG to 100 PSIG (Depends on Pump Selected)
Recommended Running Temperature..... +50°F to 100°F
Water Connection Size1-1/2" FNPT
Solution Discharge Connection Size1-1/2" FNPT

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

Progressive Cvity Pump Type (PA Series):

PART NUMBER	MODEL	PUMP TYPE	MAX CAPACITY
1048375	300X2-5.0PA	Seepex MD	5.0 GPH
1048376	600X2-5.0PA	Seepex MD	5.0 GPH
1048377	600X2-10.0PA	Seepex MD	10.0 GPH
1048378	1200X2-10.0PA	Seepex MD	10.0 GPH
1048379	1200X2-24.0PA	Seepex MD	24.0 GPH
1048380	1500X2-10.0PA	Seepex MD	10.0 GPH
1048381	1500X2-24.0PA	Seepex MD	24.0 GPH

*****Refer to Appendix C for proper sizing*****

Overall Skid Dimensions.....72"H x 40"W x 34"D
 Overall Weight of Skid250 lbs.
 Power Requirements 220VAC, 60Hz, 1 Phase, 20 Amp
 Volume of Mixing Chamber 3.2 Gallons
 Maximum Rated Chamber Pressure..... 150 PSIG
 Normal Operating Pressure 58 PSIG to 100 PSIG (Depends on Pump Selected)
 Recommended Running Temperature..... +50°F to 100°F
 Water Connection Size 1-1/2" FNPT
 Solution Discharge Connection Size 1-1/2" FNPT

iii. Diaphragm Polymer Pumps used on M Models:

Series	Identification Code	Factory Default Mode	SPM Max	Flowrate (GPH)		Pressure (PSIG)
				Min @ 100% Stroke	Max @ 100% Stroke	
GXLA	GXLAUS1020PVT4V000UV4030EN	HV2	120	0.019	3.24	145
GXLA	GXLAUS1020PVT4V000UV4030EN	Standard	200	0.019	5.18	145
GXLA	GXLAUS0730PVT4V000UV4030EN	Standard	200	0.031	7.76	102
GXLA	GXLAUS0450PVT2V000UV4030EN	Standard	200	0.11	12.95	58

Notes:

1. ProMinent – Gamma XL Solenoid Driven Metering Pump
2. Original Pump GPH rating is derated 20% due to Polymer viscosity. The actual deration may vary depending on the polymer used
3. Control Modes Available*
 - a. Standard – 200 spm: 0 - 50 cP
 - b. HV1 (slightly reduced discharge speed) – 180 spm: 50 - 200 cP
 - c. HV2 (moderately reduced discharge speed) – 120 spm: 200 - 500 cP
 - d. HV3 (maximum reduced discharge speed) – 80 spm: 500 - 1000 cP
4. Connections: ½" x 3/8" or DN10 Depending on Model Selected
5. Power Requirements: 115VAC, 60 Hz, Single Phase

* Viscosity values are approximate and can vary widely per specific application. Use these values as a guideline only and consult the factory for specific application capabilities

iv. Progressive Cavity Polymer Pumps used on M Models:

Series	Identification Code	RPM Max	Flowrate (GPH)		Pressure (PSIG)
			Min	Max	
MD	MD 003-12 / A6-A7-A7-H0-GA-X	331	0.50	5.0	100
MD	MD 006-12 / A6-A7-A7-H0-GA-X	234	1.00	10.0	100
MD	MD 012-12 / A6-A7-A7-H0-GA-X	252	2.40	24.0	100

Notes:

1. Seepex Progressive Cavity Metering Pump
2. Original Pump GPH rating is derated due to Polymer viscosity. The actual deration may vary depending on the polymer used
3. Power Requirements: 220VAC, 60 Hz, Single Phase

* Viscosity values are approximate and can vary widely per specific application. Use these values as a guideline only and consult the factory for specific application capabilities

1.0 INSTALLATION & QUICK START GUIDE

1.1 Safety:

Utilize appropriate protective safety gear when operating or maintaining this equipment. Recommended safety gear is as follows:

Personal Protective Equipment (PPE):

- Hard Hats (Where overhead hazards exist)
- Safety Glasses with side shields
- PVC Apron
- PVC Gloves
- Safety-Toed Work Boots

1.2 Delivery & Storage Checklist:

1. Check packing list for completeness and note any missing items immediately.
2. Inspect equipment and shipping container for damages before accepting delivery. Make note on the carrier's bill-of-lading the extent of the damage, if any, and notify the carrier.
3. Store the equipment on firm level surface in original packing container. Do not store the equipment where it may be exposed to extreme temperatures, precipitation, humidity, or dust. Avoid direct sunlight that could overheat and damage equipment.

Ambient Conditions for storage and transport:

Temperature: 14°F to 120°F

Air Humidity: ≤ 92% relative humidity, non-condensing

1.3 Installation Considerations:

- Required Polymer System Voltage
- Available Water Pressure
- Injection Point Pressure
- Number of Injection Points
- Polymer Solution Discharge: For example (Length of Piping Run and Pipe Size)
- Neat Polymer Suction: Flooded or Lift
- Type of Application / Dewatering Device
- Type of Polymer: Emulsion, Dispersion, Solution

1.4 Installation:


1. Unpack and position equipment on sturdy level surface. Fasten to prevent movement.
2. Do not install equipment in areas of extreme heat, cold, dust or humidity. Avoid areas where objects or fluids can drop from overhead.
3. Units are to be installed as close to the point of application as possible.
4. Inlet pressure is not to exceed 100 psig working pressure.
5. System pressure at the discharge is not to exceed 80% of inlet pressure.
6. Piping Internal to the System:
 - a. Inspect the piping for breakage. The system may have been jarred during shipping.
 - b. Check the tightness on all unions. Hand tighten only – no tools. Unions incorporate an o-ring seal. Ensure that the o-ring is seated properly prior to tightening.
7. Piping External to the System (*Reference Appendix A for connection location*):
 - a. Install piping so that connections properly meet system termination points. Do not “stretch” field installed piping to meet system termination points. Stressed piping will fail!
 - b. Piping should be at a minimum $\frac{3}{4}$ ” to and from the piping on the system. 1” or larger piping is recommended. Larger piping sizes would be required for runs over 100 feet in length if utilizing $\frac{3}{4}$ ” pipe.
 - c. Avoid getting dirt and debris inside the piping during installation. Plug ends of piping with rags if construction activities are underway. All debris must be flushed from piping before system start-up.
 - d. Connect to outlet piping 1-1/2” FNPT from static mixer to associated customer application point.
 - e. Connect to make-up water inlet piping 1-1/2” FNPT (25 GPM maximum at 100 psig maximum).
 - f. Connect to Neat Polymer pump inlet piping $\frac{1}{2}$ ” FNPT (GXLA Models) & 1” FNPT (Seepex Models). Flooded Suction ONLY for Seepex PC pump.
 - g. Install 1-1/2” pressure regulator and 1-1/2” y-strainer / basket strainer on the clean make-up water line if equipment is currently not installed. (Recommended). Sizing depends on inlet/outlet piping.
 - h. Allow provisions for draining the system piping. Skid components will require maintenance. Ensure that chemicals can be evacuated from the skid piping and components for servicing.
8. Electrical Supply Needed for the System:
 - a. Note: Review local Electrical Code and follow accordingly.
 - b. Connect incoming power to skid mounted control panel (*120VAC, Single Phase, 20 Amp, 60 Hz*). Ensure panel is properly grounded.
 - c. Check electrical connections to be sure proper voltage is supplied to the system.
 - d. Power the unit using a dedicated, separate breaker in the local lighting distribution panel.
 - e. Do not route the AC power in common conduit with variable frequency pump drives.
 - f. Do not put conduit entries in the top of the control panel. Resulting conduit condensation and failure to seal may damage controller circuit boards.
9. The Overload relay should be set to the Motor Nameplate Full Load Amps. Setting this to a higher value will result in possible damage to the motor and associated wiring. Overload conditions should be investigated and possible process changes may need to be made to prevent overload conditions.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

10. Connect Digital Remote Start Functions (note wiring termination points in Appendix B) for polymer tank level and remote start permissive. Default jumpers should remain in place for any input not available.
11. Refer to the Gamma XL or Seepex pump manual (Reference Document) for pump operation.

1.5 Quick Start Guide:

1. Review installation portion (Section 1.4) of the manual.
2. Open ball valve on the suction of the pump to allow chemical to flow into the system by gravity. If the application is suction lift then ensure liquid is present in pump suction.
3. Start up pumps at 100% stroke length and frequency to purge all air and prime the system. To prime the GXLA pump press the Priming key on the keypad until chemical is visible in the suction line. The Seepex pump must have a flooded suction.
4. Verify motor rotation on Mixing Chamber motor. Normal rotation is CCW.
5. Do not run the mixing chamber motor dry. Damage to the mechanical seal could occur.
6. Close the Secondary flow control valve and adjust the Primary flow control valve to obtain the flow range required. If additional dilution water is needed adjust the secondary accordingly.

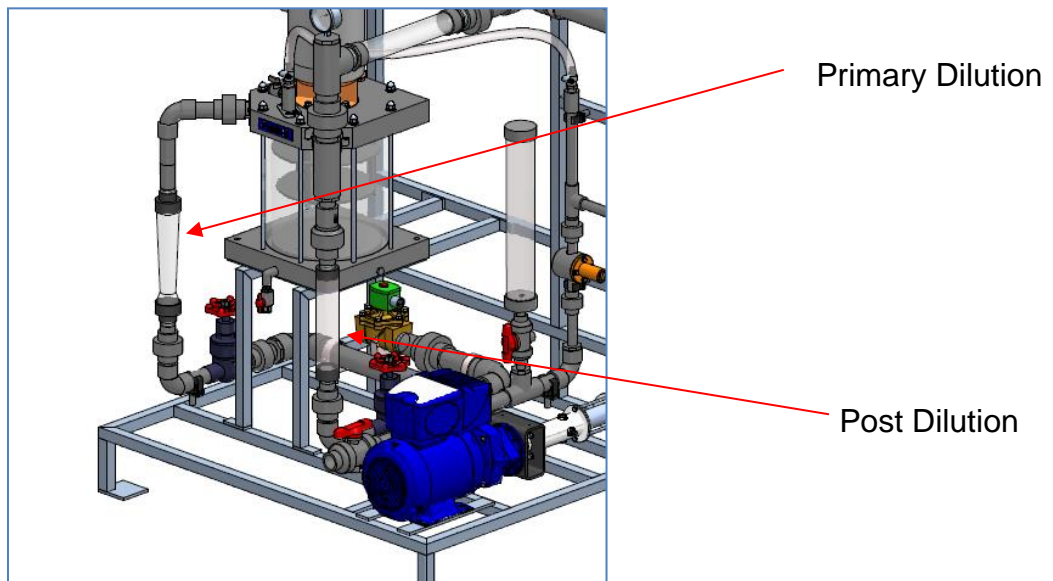

7. Verify that the maximum polymer injection pump pressure is higher than the system pressure.
8. Perform pump calibration using drawdown calibration cylinder. See section 2.12.
9. Check flow calibration and be sure pump meets or exceeds the rated flow capacity. Check flows at 100% capacity.
10. In System Start ON and Polymer Pump LOCAL switch positions the neat polymer pump speed is adjusted manually using the controller keypad to change the pump rate from 0 to 100% of the pump rated output.
11. In System Start ON and Polymer Pump REMOTE switch positions the controller receives a remote customer supplied analog 4-20 mA signal to adjust the desired pump speed from 0 to 100% of the pump rated output. This remote 4-20 mA signal can be scaled at the controller to enhance the resolution of the pump output control and bias the pump response

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

to the remote signal. A remote start permissive is optional – if used then System Start switch should be in the REMOTE position.

12. Confirm proper operation of all instrumentation. For example: Gauge, Rotameter switch, etc.
13. Input functions checked and simulated (remote start/stop, 4-20mA, etc.).
14. Output functions checked.
15. Test the operation of all remaining circuits.
16. Observe system to assure that nothing looks or sounds abnormal.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

1.6 ProMix Options for Polymer Settings and Controller Door Switches

Begin by first selecting type of polymer (Emulsion or Mannich) see section 2.5.

Emulsion or Mannich The type of polymer being used by the ProMix feeder is selected. If emulsion then a maximum of 1.0% concentration is permitted in the mixing chamber. If Mannich is selected then the maximum is 10.0% concentration.

After setting polymer type, manually adjust the two door switches, 'System Start' and 'Polymer Pump' for the desired operating conditions:

System Start door switch

Permits use of remote contact to enable system operation in REMOTE position.

Polymer Pump door switch

Determines the setpoint for pump control action which can be from the keypad entry in LOCAL or from a 4-20 mA signal in REMOTE.

Mannich polymer door switch options

System Start ON-OFF-REMOTE controller door switch	Polymer Pump LOCAL-REMOTE controller door switch	PROMIX OPERATION
ON	LOCAL	Remote Start Contact: N/A Keypad Local Setpoint: 0 – 100 % pump speed Remote Setpoint: N/A Max. chamber concentration: 10.0%
ON	REMOTE	Remote Start Contact: N/A Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0-100% pump speed Max. chamber concentration: 10.0%
REMOTE	LOCAL	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: 0 – 100% pump speed Remote Setpoint: N/A Max. chamber concentration: 10.0%
REMOTE	REMOTE	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0-100% pump speed Max. chamber concentration: 10.0%

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

Emulsion polymer door switch options

System Start ON-OFF-REMOTE controller door switch	Polymer Pump LOCAL-REMOTE controller door switch	PROMIX OPERATION
ON	LOCAL	Remote Start Contact: N/A Keypad Local Setpoint: 0 – 100% pump speed Remote Setpoint: N/A Max. chamber concentration: 1.0%
ON	REMOTE	Remote Start Contact: N/A Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0 –100% pump speed Max. chamber concentration: 1.0%
REMOTE	LOCAL	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: 0 – 100% pump speed Remote Setpoint: N/A Max. chamber concentration: 1.0%
REMOTE	REMOTE	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0–100% pump speed Max. chamber concentration: 1.0%

1.7 Servicing Guidelines:

- Disconnect electrical power to the equipment prior to servicing.
- Relieve all pressure from the unit prior to servicing.
- Close all suction and discharge valves.
- Verify dilution water is closed.
- Drain chemical/water from unit prior to disassembly.
- Maintain protective covers over all moving parts.
- Keep body parts, hair and foreign objects from contact with moving parts.
- Do not allow grease or oil to be used or stored around the feed equipment or chemicals.
- Review the Material Safety Data Sheets of the Polymer utilized and observe appropriate safety measures.
- Mineral Oil can be utilized to aid in the polymer cleaning process.

Ensure all operating & maintenance personnel are instructed regarding the contents of this manual.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

2.0 CONTROLLER

2.1 Keypad Navigation

The ProMinent ProMix M Polymer Feeder uses a fixed configuration to deliver the operation required to operate the feeder. The main board is not interchangeable with other ProMinent controller hardware.

The top line of the main menu displays the current feeder state on power ON

Press **EXIT** during any main menu display & you'll return to the top of the menu & the current feeder state.

The other main menu displays show information you'll need to set & adjust feed rate and to verify flowswitch, 4-20mA in & out...

UP & **DOWN** to view options or to EDIT numbers



Move **RIGHT** to select next field when EDITing



ENTER to select an option & to execute EDITing



EXIT to escape option, info display or EDITing
EXIT goes to top of **Main Menu**



ProMinent ProMix 'DA' & 'PA' Polymer Feeder

2.2 Main Menu

This is the power ON, top of the menu display.

Press **EXIT** at any display to return here.

Displays the **Polymer** feed rate 0-100% and the current state of the feeder. See 1.6 for complete state table.

Displays the **Polymer Pump** feed rate 0-100% and the controlling 4-20mA current level,

Press **ENTER** @ **Polymer Pump** to view-adjust the Manual Setpoint & Calibrate the 4-20mA controlling the pump.

Mixer ON time resets to zero every time the **Mixer** turns OFF.

Press **ENTER** during **Auto RUN** or **Manual RUN** to turn OFF the **Polymer Pump** and flush the mixer.


The **Remote Setpoint** 4-20mA current loop controls the **Polymer Pump** in **Remote RUN** mode.
Press **ENTER** to calibrate.

Flowswitch ON time resets to zero every time the **Flowswitch** turns OFF.
After 24 hours displays **>1Day**.


The **Remote Start** contacts must be closed for the polymer feeder to run.
Remote Start time resets to zero every time the contact set opens.

We're now back at the top of the main menu.

Polymer 38.6% ↵
Auto RUN ↕



Polymer Pump ↵
ON 38% 10.1mA ↕




Mixer ↵
ON 49.1 Mins ↕

Alternates every second

Mixer ↵
Flush on ENTER ↕



Remote Setpoint ↵
38% 10.1mA ↕



Flowswitch ↵
ON 3.45 Hrs ↕



Remote Start ↵
ON 1.36hrs ↕



Polymer 38.6% ↵
Remote RUN ↕

Sidebar:

Press **ENTER** at **Polymer** to view and adjust feeder **Fill, Flush & Wait-for-Flow** timing.

Press **ENTER** & **UP** at **Polymer** to view feeder **Diagnostics**. Refer to 2.17 for **Diagnostic** displays.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

2.3 Adjust Setpoint

Press **ENTER** @ **Polymer Pump**
to view or adjust the **Local Setpoint**.

Local Setpoint may be adjusted at any time
If Polymer Pump switch is set to Local mode.



The present **Local Setpoint** is **25.0%**.
Press **ENTER** to adjust.

Key **RIGHT** to move the cursor &
UP or **DOWN** to change the digit.
Key **EXIT** to abandon or **ENTER** to execute.



Displays new, adjusted **Local Setpoint**.
Press **EXIT** to return to main menu.

If the Polymer Pump switch is in the **Local** position, any
adjustment takes effect immediately, modifying
the 4-20mA output to the pump.

Adjust Local Setpoint

PoLymer Pump 
ON 38% 10.1mA 



Local Setpoint 
25.0% 





Edit & ENTER 
32.4% 



then



Local Setpoint 
32.4% 

Sidebar:

Local Setpoint only controls the polymer pump when the Polymer Pump switch is @ Local.

If the **Local Setpoint** is @ 25% the 4-20mA current output loop will be at 8mA ($4\text{mA} + 0.25 \times 16\text{mA} = 8\text{mA}$).

Remote Setpoint only controls the polymer pump when the Polymer Pump switch is @ Remote.
The polymer pump speed is then controlled by the remote 4-20 mA signal.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

2.4 Modify Timing

Press **ENTER** @ **Polymer**

to view or adjust the feeder timing.

Fill Time is the time that the feeder waits to fill the feeder prior to turning on the **Polymer Feed** pump. This protects the mechanical seal of the mixer motor shaft by keeping it wet. Minimum time is 30 seconds for the first fill only.

Thereafter this step is skipped if operation pauses unless electrical power to the controller is cycled. Key **ENTER** to modify.

Flush Time is the time water flows after initiation of a Flush Cycle. This is a maintenance feature and can be manually initiated by (1) placing the controller door System Start Switch in the OFF position for more than 2 seconds or (2) by opening the remote start contact for longer than 2 seconds or (3) by using the keypad menu. Key **ENTER** to modify time.

Wait for Flow may be adjusted to any time from 1 to 30 seconds. Press **ENTER** to adjust.

Diagnostics displays the input current loop power voltage.

Press **ENTER** to view diagnostic data set.

Refer to 2.17 for detail.

View Timing

Polymer 38.6%	←
Auto RUN	↕
←	
Fill Time	←
30 Seconds	↓
↓ ↑ or ←	
Flush Time	←
60 Seconds	↓
↓ ↑ or ←	
Wait for Flow	←
5 Seconds	↓
↓ ↑ or ←	
Diagnostics	←
23.9 VDC	↓

Sidebar:

Wait for Flow: Water inlet solenoid open, ON. Mixer and Polymer Pump both OFF.

Factory default = 5 seconds.

The 4-20mA current loop control input may be powered by the site control system or by the ProMix M 24VDC power supply.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

Press **ENTER** @ **Polymer**
to view or adjust the **Fill Time**, **Flush time**
or **Wait for Flow** time.

All three times are adjusted in the same way.
In this example we'll press **ENTER** @ **Fill Time**.

Key **RIGHT** to move the cursor &
UP or **DOWN** to change the digit.
Key **EXIT** to abandon or **ENTER** to execute.

Displays new, adjusted **Fill Time**.
Press **EXIT** to return to main menu.

If you **ENTER** a time less than 1 second,
the **Fill Time** will be set to 1 second.

If you **ENTER** a time greater than 60 seconds,
the **Fill Time** will be set to 60 seconds.

Adjust Timing

Polymer 38.7% 
Auto RUN 



Fill Time 
30 Seconds 



Edit & ENTER
45 Seconds 



then




Fill Time 
45 Seconds 

Low Limit response

Fill Time 
1 Seconds 

High Limit response

Fill Time 
60 Seconds 

Sidebar:

Fill Time: Minimum = 1 second, Maximum = 60 seconds.

Factory default = 30 seconds.

Flush Time: Minimum = 1 second, Maximum = 120 seconds.

Factory default = 60 seconds.

Wait for Flow: Minimum = 1 second, Maximum = 30 seconds.

Factory default = 5 seconds.


ProMinent ProMix 'DA' & 'PA' Polymer Feeder

2.5 Change Polymer type

Top of Main Menu. Displays current feeder state.
Key **ENTER** @ to view & adjust System settings
You can always key **EXIT** until you get to this screen

Key **ENTER** @ **Configure** and use **DOWN** key to access **Feed Mode**.

Key **DOWN** to **Batch Type** and Key **ENTER**. View-adjust the **Batch Type** to either **Emulsion** or **Mannich**. Key **ENTER** when the desired polymer type is displayed.

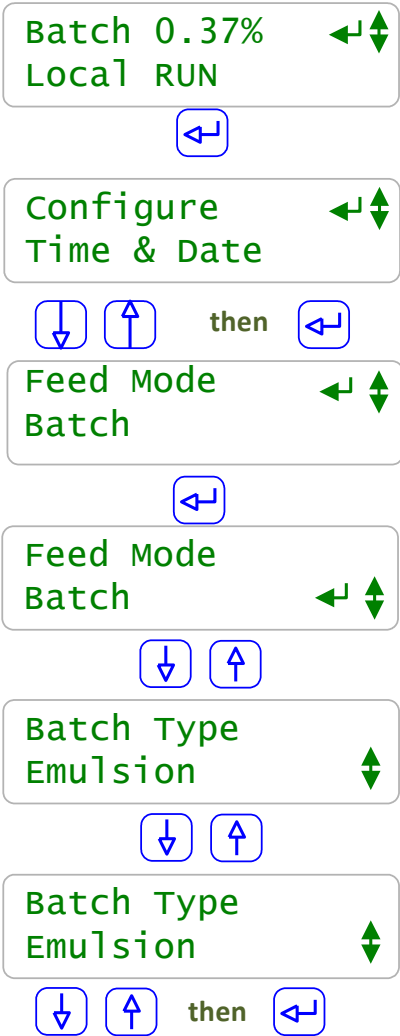

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

2.6 Manually Flush Mixer

Press **ENTER** @ **Mixer**

When the **Mixer ON** time display is alternating with the **Flush on ENTER** display.

The polymer feed pump will turn OFF.
The Mixer & water inlet solenoid will remain ON while the alternating **Mixer** display counts down the flush period.

At the end of the Flush period the ProMix M will return to the Remote RUN or Local RUN state unless the user:

1. Sets the ON-OFF-REMOTE switch to OFF.
2. Shuts off the feeder inlet water.
3. Opens the Remote Start contacts.

Flush Mixer

Mixer
ON 49.1 Mins ↕

Alternates every second

Mixer ↵
Flush on ENTER ↕



Mixer
ON 50.8 Mins ↕

Alternates every second

Mixer ↵
Flush 26sec ↕

Sidebar:

Flush Time: Minimum = 1 second, Maximum = 120 seconds.

Factory default = 60 seconds.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

2.7 Status Message Summary

LCD Displays	Feeder State
Offline STOP	Feeder powered. On-Off-Remote switch at Off.
Lin<4mA, Fault	Local-Remote switch at Remote and 4-20mA input less than 4 mA. Exits on 4-20mA \geq 4 mA or On-Off-Remote = Off or On
Flow Check	Waits user set seconds for Flowswitch contact set closed after Filling Mixer. Exits on flowswitch closed or On-Off-Remote = Off
No Water STOP	Exits on flowswitch closed or On-Off-Remote = Off
Filling Mixer	Inlet Solenoid ON & Mixer OFF. Waits user set seconds to fill mixer. Exits on On-Off-Remote = Off
No Ext.Run STOP	Polymer Pump, Mixer and Solenoid OFF Exits on Remote Start contacts closed or On-Off-Remote = Off
Flushing Mixer	Solenoid & Mixer ON. Polymer pump OFF. Exits on flush time expired or No flow or On-Off-Remote = Off
Flush Fail STOP	No Flow measured while flushing. Exits on flush time expired or flow measured or On-Off-Remote = Off
Remote RUN	Polymer pump @ 4-20mA input controlled setpoint. Exits on no flow, control<0%, flush, Remote Start open, or On-Off-Remote = Off or Local.
Local RUN	Polymer pump @ user setpoint. Exits on no flow, flush, Remote Start open or On-Off-Remote = Remote or Off.
Flushed, Stopped Press ↵ to Run	Flush ends. Polymer Pump, Mixer and Solenoid OFF Any key press restarts.

Sidebar:

Flow Check: The flowswitch monitors dilution water flow into the mixer chamber.

Filling Mixer: The mixer chamber is filled once after every power ON.

If you drain the mixer, switch the power OFF then ON to re-fill the mixer chamber.

2.8 Calibrate 4-20mA Input

Press **ENTER** @ **4-20 mA Input**
to calibrate the 4-20mA current loop input
from the site's control system

4-20 mA Input may be calibrated at any time
in Remote or Local mode.

The present **4-20 mA Input** is **38.7%**.
Press **ENTER** to calibrate.

Key **RIGHT** to move the cursor &
UP or **DOWN** to change the digit.
Key **EXIT** to abandon or **ENTER** to execute.

Displays new, adjusted **Remote Setpoint**.
Press **EXIT** to return to main menu.

If the Local-Remote switch is in the Remote position, any
adjustment takes effect immediately and modifies
the 4-20mA output to the polymer pump.

Calibrate 4-20mA In

Remote Setpoint↵
38% 10.1mA ↕



Calibrate Iin ↵
38.7%



Edit & ENTER
36.9% →↕



then



Calibrate Iin ↵
36.9% ↓

Sidebar:

'**Calibrate lin**' matches the % display on the polymer feeder with the remote operator's % display.

The underlying 4-20mA level is of less importance than having both of the % displays

(the feeder's & the remote operator's) match because the Polymer feed pump operates from OFF at 0% to maximum ON at 100%.

It's simpler to calibrate on a % instead of calibrating on a current and making a non-intuitive 4-20mA loop to 0-100% conversion.

So you don't need to know that a 32.4% feed corresponds to a current loop @ 9.18 mA. The factory default scales the 4-20 mA input for 4mA = 0% Pump to 20 mA = 100% Pump. See Section 2.2 if your site's 4-20 mA input is not scaled 4-20 mA = 0 to 100%

2.9 Scale the 4-20mA Input

Press **ENTER** @ **4-20 mA Input**
to navigate the input current loop sub-menu

See the previous page for calibrating the 4-20 mA input loop

Press **DOWN** to view the present 4 mA pump feed
percentage.

The factory default is as displayed. When the 4-20 mA input
is at 4.0 mA the pump will be OFF.

Press **DOWN** to view the present 20 mA pump feed
percentage.

The factory default is as displayed. When the 4-20 mA input
is at 20.0 mA the pump will be 100%.

Press **DOWN** to view the response when the input current
loop is less than 4.0 mA.

The factory default is as displayed. When the 4-20 mA input
is less than 4.0 mA the pump will be OFF.

Press **ENTER** at any of the four sub-menu displays to
modify the present setting.

Press **EXIT** to leave unchanged.

4-20mA input sub Menu

4-20mA Input	←
38% 10.1mA	↕
←	
Calibrate Iin	←
38.7%	↓
↓ ↑ or ←	
Scale Iin @4mA	←
4.0mA = 0%	↓
↓ ↑ or ←	
Scale Iin @20mA	←
20.0mA = 100%	↓
↓ ↑ or ←	
Iin Fail State	←
Pump OFF	↓

Sidebar:

Calibration of the 4-20 mA input ensures that the measured value of the 4-20 mA Input is displayed as the correct mA level.

Scaling the 4-20 mA input is required when you do not want 4-20 mA to correspond to a 0-100% polymer feed rate.

Selecting a different response than Pump OFF on loss of the 4-20 mA input allows for a wider range of site operational configurations & control loop reliability.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

2.9 Scale the 4-20mA Input (continued)

Press **ENTER** @ **4-20mA Input**
to calibrate the 4-20mA current loop input
from the site's control system.

Press **UP** or **DOWN** to the **Scale lin @20mA** display
& then press **ENTER**.


Press **RIGHT** to move the underline cursor &
UP or **DOWN** to modify the value @ the cursor.
Press **EXIT** to leave the present setting unchanged.

You can modify either or both of the mA level and the
resulting pump feed %.
Press **ENTER** when finished editing.

Displays new, adjusted **Scale lin @20mA**
Press **EXIT** to return to main menu.

Scale lin @4mA is modified in the same way.

Modify mA @ 100% ON

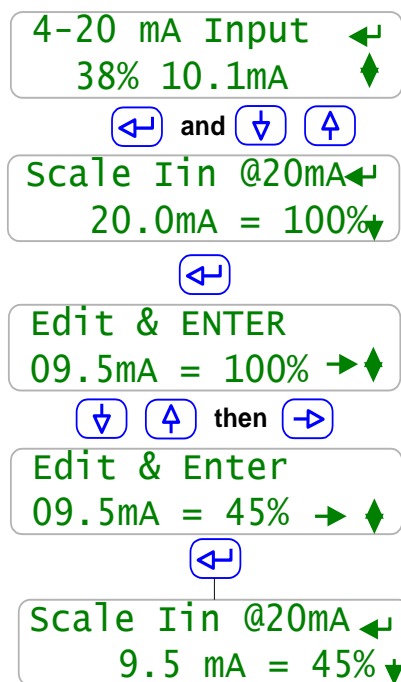

Edit either or both mA & %

Sidebar:

There's a lot of flexibility in the 4-20 mA input scaling & the corresponding pump speed but most users will leave 4mA=0% and adjust the mA @ 100% to allow 0-100% pump operation over a narrower range of 4-20 mA input.

For example, if you wish 0-15% of the 4-20 mA input to control the pump from 0-100%

Edit **Scale lin @20mA** for **6.4mA = 100%**

& leave **Scale lin @ 4 mA** unchanged at **4.0mA = 0%**

Setting the mA level below 4.0mA will set the mA level to 4.0mA

Setting the mA level above 21.0mA will set the mA level to 21mA

Setting the % above 100% will set the % to 100%. The % level cannot be set below 0%.

Refer to Appendix A for notes on 4-20mA Input scaling.

If you set % span to zero in error, the pump will turn OFF.

Note that you could make the current loop response reverse acting so that an increasing loop current will cause a decreasing pump %.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

2.10 Response on Loss of 4-20 mA Input

Press **ENTER** at 4-20Ma input.

Press **UP** or **DOWN** to **Iin Fail State**.

Displays the factory default.

Pump OFF when **4-20mA Input** less than 4mA.

Press **ENTER** to select a different response.

Press **DOWN** to select a user set pump speed on less than 4 mA.

Displays the factory default of 10%.

Press **ENTER** to select response & modify value.

Press **DOWN and ENTER** to run the pump at the last input Value greater than 4.0mA when the measured current loop value falls below 4.0mA.

If you pressed **ENTER** @ **Pump @ 10%**
You will be able to modify the **10%** value.

Press **RIGHT** to move the underline cursor & **UP** or **DOWN** to modify the value at the cursor.

Press **EXIT** to leave unchanged or **ENTER**
To set the new value.

View-Modify response
On 4-20mA Input fail

The diagram illustrates the sequence of screen displays and navigation keys for setting the response to a 4-20mA input failure:

- Screen 1:** 4-20mA Input 38% 10.1mA. Navigation: Left arrow, Down arrow, Up arrow.
- Screen 2:** Iin Fail State Pump OFF. Navigation: Left arrow.
- Screen 3:** Pump OFF Pump @ 10%. Navigation: Down arrow, Up arrow.
- Screen 4:** Pump @ 10% Last good Iin. Navigation: Down arrow, Up arrow.
- Screen 5:** Last good Iin Pump OFF. Navigation: ENTER @ Pump @ 10% (Left arrow).
- Screen 6:** Edit & ENTER Pump @ 26%. Navigation: Down arrow, Up arrow, then Right arrow.
- Screen 7:** Iin Fail State Pump @ 26%.

Sidebar:

The feeder defines a failed 4-20mA input @ -1% which is nominally 3.85mA.
(4.0mA – 0.01 x 16.0mA = 3.84mA)

3.85mA allows 4.0mA, a valid pump control signal some headroom prior to a fault response

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

2.11 Calibrate 4-20mA Output

Press **ENTER** & **DOWN** @ **Polymer Pump**
to calibrate the 4-20mA current loop output
that controls the pump feed rate

The present **Polymer Pump** control is 38.0%
But the on-pump display is @ 39.5%
Press **ENTER** to calibrate.

Key **RIGHT** to move the cursor &
UP or **DOWN** to change the digit.
Key **EXIT** to abandon or **ENTER** to execute.

The ProMix M reduces the pump 4-20mA current
So that the on-pump display will measure 38.0%.
Press **EXIT** to return to main menu.

Any adjustment takes effect immediately and modifies both
the 4-20mA output.

Calibrate 4-20mA Out

Polymer PUMP ←
ON 38% 10.1mA ↕

← and ↓

Calibrate Iout ←
38.0% ↕

←

Edit & ENTER
39.5% →↕

↓ ↑ then →

Calibrate Iout ←
38.0% ↓

Sidebar:

'Calibrate Iout' matches the % display on the polymer feeder with the
polymer feed pump's % display (not all pump types display %, some display mA)

Note: 50% will not display 12mA after calibration. It will display the mA required for the pump to
display 50% which could be 11mA to 13mA. Refer to 4.3 for 4-20mA reset.

Correction >10% blocked, displays "**Advice >10% Adj.Error**". Press **EXIT** to clear.

Modifying Zero, <4%

At less than 4% the 4-20mA zero is modified to correct loop offset.

Example: Pump shows 0% and the ProMix M displays 1.5%.

Modifying Span, >6%

At more than 6% the 4-20mA span is modified to correct loop gain.

Example: Pump shows 52% and the ProMix M displays 50%

2.12 Operation Configuration

Set points

Control of the neat polymer feed pump is set by the **System Start** and **Polymer Pump** switches located on the ProMix control panel door. The type of polymer, either **emulsion** or **Mannich**, and the operation, either **Local** or **Remote**, are selected via the controller keypad or browser interface. Refer to the ProMix Mode and Polymer charts in section 1.6.

NOTE: In Batch mode the ProMix feeder adjusts the pump speed as the measured Primary & Post dilution flow rates vary to maintain the setpoint polymer concentration.

Feed Verification

Feed verification ensures that the polymer pump is actually delivering polymer by monitoring the output of the pump. Sometimes a thermal flow switch is employed for this purpose as an optional feature for 'other' type pumps selection. The GXLA pump utilizes an integral relay for feed verification. See section 2.13 for further details.

Pump Calibration

Before placing the ProMix system in operation the polymer pump should be calibrated at maximum dosing and the resultant gph rate entered into the configuration menu for pump size. A calibration cylinder is provided on most ProMix systems to assist in the calibration of the polymer pump. The following procedure should be followed to calibrate a GXLA type pump, assuming all installation requirements are met:

1. Configure pump for manual operation, set desired suction viscosity spm, and set stroke length to 100%.
2. Fill calibration cylinder to top mark by manipulating valves & pump to allow neat polymer into the cylinder. Manually fill the calibration cylinder if it is not possible to use the pump output.
3. Keep ProMix feeder connected to the actual system so that maximum application back pressure is realized.
4. Open primary dilution water valve so that the mix chamber fills when system is started.
5. Manipulate pump valves so that pump suction is connected to the calibration cylinder only.
6. Manually run pump at maximum rated strokes per minute and time the calibration column drawdown for at least 30 seconds taking note of beginning and end marks. Calculate the gph pump rate from the volume and time.
7. Using the controller keypad, enter the calculated pump rate in gph
8. Place the pump back into the analog mode.

Follow the same procedure for a Seepex pump but do not use water for testing and/or calibration. Connect suction side of the Seepex pump to neat polymer or mineral oil only. Also use 'other' for the type of pump selected in the controller menu

2.13 Feed Verification

Press **ENTER** and **DOWN** @ **Polymer Pump** to navigate to the polymer pump feed verification option.

Feed Verify when switched **ON** is used to monitor the relay pulse output from the polymer feed pump verifying that the 4-20 mA signal from the controller is driving the pump. If this **Feed Verify** pulse signal is not active when the controller is sending the 4-20 mA control signal to the polymer pump then a pump failure alarm is actuated.


Feed Verify can also be turned **OFF** in the case where the polymer pump does not have the pulse feedback option. Press the **RIGHT** key to alternate between **ON** and **OFF** and press **ENTER** to modify. Press **EXIT** to return to main menu.

Press **ENTER** and **DOWN** @ **Polymer Pump** to navigate to the polymer pump feed verification option pulse timing interval.

Feed Verify is the time delay between pulse signals and may be adjusted to any time from 1 to 30 seconds. If a pulse is not received within this time period and **Feed Verify** is **ON** then a pump failure alarm is actuated. Press **ENTER** to modify and press the **RIGHT** key to change values.

Press **EXIT** to return to main menu

Verify on/off

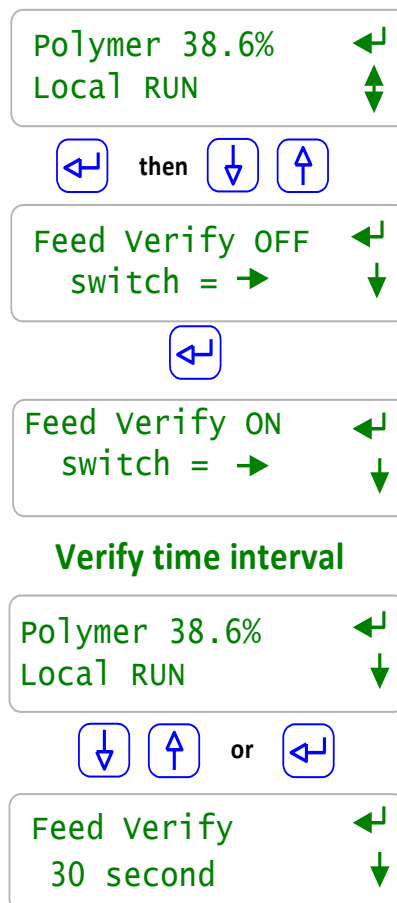

Sidebar:

The **Feed Verify** pulse signal from the pump is wired to the **FV** terminals on the Digital Input accessory board.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

2.14 4-20mA Controls

0% defaults to 4.0 mA.

100% defaults to 20.0 mA.

The 4-20mA input current may be changed by adjusting the 4-20mA input scaling.

2.15 Troubleshooting Guide

Adjustment and bypass fixes to operational problems.

LCD Display	Operational Problem
No Control STOP	Switch the On-Off-Remote to On while you figure out the problem with the 4-20mA current loop connected to mA In input terminals ' I+ ' & Ground \perp terminal. If the ProMix M mA In 24V is powering the loop, view Polymer / Diagnostic to ensure >23VDC
No Water STOP	Flowswitch OK? If a flowswitch problem, jumper controller Interlock input terminal ' FS ' to the adjacent Ground symbol \perp terminal while you resolve. Solenoid OK? Verify that the solenoid has been actuated during the Filling Mixer and Flow Check states by cracking a downstream union. Verify 120VAC between AC Power terminal ' S 'olenoid & Neutrals terminals during the Filling Mixer and Flow Check states. Fuse Fails? If no AC solenoid power, verify solenoid wiring & coil not shorted & replace the solenoid fuse. It's the brown 2.5A fuse in the white socket above the Neutrals terminals. www.digikey.com Part# 7500413 Note that power to the mixer motor start relay coil shares the 2.5A solenoid fuse.
No Ext. Run STOP	If a Remote Start contact set problem, jumper controller Interlock input terminal ' RC ' to the adjacent Ground symbol \perp terminal.
Flush Fail STOP	This state occurs if flow lost during flushing. After flush time expires, goes to No Water STOP
Offline STOP	If the On-Off-Remote switch is not in the OFF position then there is either a loose connection @ the door mounted switch terminals or the red 3 wire connector below the keypad ribbon connector has been disconnected.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

2.16 Diagnostic Display

Press **ENTER** & **UP** @ **Polymer**
for **Diagnostics**.

When initially programmed, the ProMix M serial
number 1st letter is set to '**U**'.
Manufacturing sets the 1st letter to '**P**'

Firmware Ver: is the software issue date.
In this example 4/06/10.

An increasing number of **Watchdog Resets** indicates that
the software is halting, typically as a result of an external
electrical fault. Disconnect the **Interlock RC** inputs first,
followed by the **mA In I+** & common inputs next.

If the feeder runs continuously or the **RC** input is used to
STOP the feeder, there should be a low number of **Power
OFF-ONS**. An unexplained, high number usually indicates
accidental shutdown or AC power wiring problems.

Relay ON/OFF display in the same order as wired and
labeled on the ProMix M circuit board.

Polymer enable, **R**unning, **W**ater Loss, **M**ixer, **S**olenoid.
P, R & **W** are dry NO contacts, **M** & **S** are NO hot, 120VAC.

This is the elapsed time on the **Polymer enable** contact set
& therefore tracks the time spent in the **Remote RUN** &
Local RUN states. It's saved to flash every hour so if
powered OFF before an hour of ON time, ON time is lost.

This is the elapsed ProMix M AC powered time & meant to
be compared to the previous **Pump ON** time.
It's saved to flash every hour so if powered OFF before an
hour of ON time, ON time is lost.

The 4-20mA current input is locked to the 4-20mA current
output when Remote selected. Both can be calibrated &
occasionally mis-calibrated. Press **ENTER** to return to the
factory defaults & a known state.

Diagnostics

Diagnostics	←
23.9 VDC	↕
↩	
Serial Number	←
U310PF001	↕
↓ ↑	
Firmware Ver:	↕
40610	
↓ ↑	
Watchdog Resets	←
0	↕
↓ ↑	
Power OFF-ONS	↕
2	
↓ ↑	
P R W M S	↕
ON ON - ON ON	
↓ ↑	
Pump ON	↕
0Days, 2Hrs	
↓ ↑	
Powered 1Yrs	↕
46Days, 14Hrs	
↓ ↑	
Reset Iin&Iout	←
ENTER resets	↕

3.0 SPARE PARTS & PREVENTIVE MAINTENANCE

3.1 GAMMA XL (GXLA) Pump Spare Parts

P/N: Description:

1027082 GXLA 1020 Spare Parts Kit**

1000249 GXLA 1020 Diaphragm

1017393 GXLA 1020 Liquid End

1027083 GXLA 0730 Spare Parts Kit**

1000250 GXLA 0730 Diaphragm

1017404 GXLA 0730 Liquid End

1027084 GXLA 0450 Spare Parts Kit**

1000251 GXLA 0450 Diaphragm

1025138 GXLA 0450 Liquid End

**Spare Parts Kit above includes the following:

(1) Diaphragm

(1) Suction Valve Set

(1) Discharge Valve Set

(2) Ball Valves (Check)

(1) Set of O-rings

(1) Connector Set

3.2 SEEPEX Pump Spare Parts

Consult Factory

3.3 PVC Mixing Chamber Spare Parts

P/N: Description:

7746474 Seal, Mech, Shaft, 1/2", ProMix-U

7747244 Injection Valve, SG, ProMix

7746491 O-Ring, Chamber, Viton, ProMix-M

7500346 PVDF Insert - 1/16 NPT x 3/16 Hose Barb (*Seal Failure Fitting*)

7037004 Tubing PVC 3/16" x 1/4" (*Seal Failure Tubing*)

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

3.4 Piping Components Spare Parts

P/N: Description:

1019883 1/2" PVC Back Pressure/Pressure Relief Valve SOC pfc
7745788 0-160PSI, Gauge, SS, 2-1/2, Bottom MTD
7746152 0-160PSI 316SS Back gauge & CPVC/PTFE Isolator
7744091 1/2" ID PVC Nylobraid Hose
7741354 1/2" SS Hose Clamp
7740541 1/2" PVC Hose Barb Adapter H x MNPT

3.5 Control Panel Spare Parts

P/N: Description:

1078793 SQD Overload 6.5-10 Amps Adjustable
1078795 SQD Contactor
1077629 ABB Circuit Breaker 20 Amp
1077628 ABB Circuit Breaker 15 Amp
7500413 Littlefuse 2.5A 250V for Circuit Board
7746094 GLD2 Time Delay Fuse

3.6 Maintenance and Lubrication Schedule

MAINTENANCE		
Description / Task	Remarks	Frequency
Visual inspection of unit		Weekly
Check dosing line fittings and valves for tightness		Every 3 Months (Approx 30% continuous operation.)
Verify equipment is operating properly	No leaks or abnormal noises	Weekly
Check the electrical connections for integrity		Quarterly
Check tubing for wear or cuts		Weekly
Check Mixing Chamber Motor amperage. Check fan cover for obstruction or Dirt		Monthly
Check dosing diaphragm for damage (GXLA Pump)		Every 3 Months (Approx 30% continuous operation.)
Check the liquid end for tightness (GXLA Pump)	Torque Settings for screws 40 - 44 in/lb	Every 3 Months (Approx 30% continuous operation.)
Check leakage rate and tighten/loosen packing to allow 1-6 drops per minute (Seepex Pump)	Adjust tightening nuts only 1/2 turn per minute until stabilized	Weekly
Check flow pump rate at rated pressure (Seepex Pump)	Replace Rotor/stator as required	Weekly
Check Bearing End play and Temperature. Change Grease (Seepex Pump)	See Lubrication Chart	Monthly (3,000 Operation Hours)
Check Universal Joint Seal, Bushing and joint integrity. Replace Grease (Seepex Pump)	See Lubrication Chart	Upon rotor/stator replacement
Check Motor RPM/amperage. Drain. Check fan cover for obstruction or Dirt (Seepex Pump)		Monthly
Check Gear reducer temperature and oil level (Seepex Pump)	See Lubrication Chart	Monthly

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

MAINTENANCE		
Description / Task	Remarks	Frequency
Change Gear reducer oil (Seepex Pump)	See Lubrication Chart	3 Years
Short Term – Flushing of Piping & Chamber	24 Hour Shut Down	Run 60 Second Flush
Long Term – Flushing of Piping & Chamber	24 Hour + or if large amount of polymer is dosed into chamber w/o water running	Run Water until piping is visibly clear in static mixer

LUBRICATION		
Description / Task	Lubrication	Frequency
Mixing Chamber Motor 1.5 Hp (See Chart Below)	Ball Bearing Grease	5,000 Hours of Service per Year
Check Gear Reducer Oil Level (Seepex Pump)	210cSt @ 40°C (Gulf EP Lube-S 100 or equal)	Weekly
Change Gear Reducer Oil Level (Seepex Pump)	210cSt @ 40°C (Gulf EP Lube-S 100 or equal)	3 Years
Repack Motor Bearing w/Grease	Gulf EP No. 2 or equal	3 Years
Repack Pump Bearing	Shell Alvania EP 2 or equal	3,000 Operating Hours
Repack Pump Universal Joints	Seepex Grease Type 30321 "ONLY"	Rotor Replacement or 10,000 operating hours whichever is first

Mixing Chamber Motor Lubrication Details:

Lubrication

This is a ball bearing motor. The bearings have been lubricated at the factory. Motors that do not have regrease capability are factory lubricated for the normal life of the bearings.

Relubrication Intervals (For motors with regrease capability)

New motors that have been stored for a year or more should be relubricated. Lubrication is also recommended at these intervals:

Relubrication Intervals

NEMA (IEC) Frame Size	Rated Speed (RPM)			
	3600	1800	1200	900
Up to 210 incl. (132)	5500Hrs.	12000Hrs.	18000Hrs.	22000Hrs.
Over 210 to 280 incl. (180)	3600Hrs.	9500Hrs.	15000Hrs.	18000Hrs.
Over 280 to 360 incl. (225)	*2200Hrs.	7400Hrs.	12000Hrs.	15000Hrs.
Over 360 to 5000 incl.(300)	*2200Hrs.	3500Hrs.	7400Hrs.	10500Hrs.

* Lubrication interval for 6313 or 6314 bearings that are used in 360 through 5000 frame, 2 pole motors. If roller bearings are used, bearings must be lubricated more frequently, divide the interval by 2.

Lubricant

Baldor motors are pregreased, normally with Polyrex EM (Exxon Mobil). If other greases are preferred, check with a local Baldor Service Center for recommendations.

Procedure

Clean the grease fitting (or area around grease hole, if equipped with slotted grease screws). If motor has a purge plug, remove it. Motors can be regreased while stopped (at less than 80°C) or running.

Apply grease gun to fitting (or grease hole). Too much grease or injecting grease too quickly can cause premature bearing failure. Slowly apply the recommended amount of grease, taking 1 minute or so to apply. Operate motor for 20 minutes, then reinstall purge plug if previously removed.

Caution: Keep grease clean. Mixing dissimilar grease is not recommended.


Amount of Grease to Add

Frame Size NEMA (IEC)	Weight of grease to add ounce (gram)	Volume of grease to add	
		inches ³	teaspoon
Up to 210 incl. (132)	0.30 (8.4)	0.6	2.0
Over 210 to 280 incl. (180)	0.61 (17.4)	1.2	3.9
Over 280 to 360 incl. (225)	0.81 (23.1)	1.5	5.2
Over 360 to 5000 incl.(300)	2.12 (60.0)	4.1	13.4

Appendix A – DA & PA Series Bill of Material

Mechanical & Electrical List

General Mechanical Layout
ProMix M DA

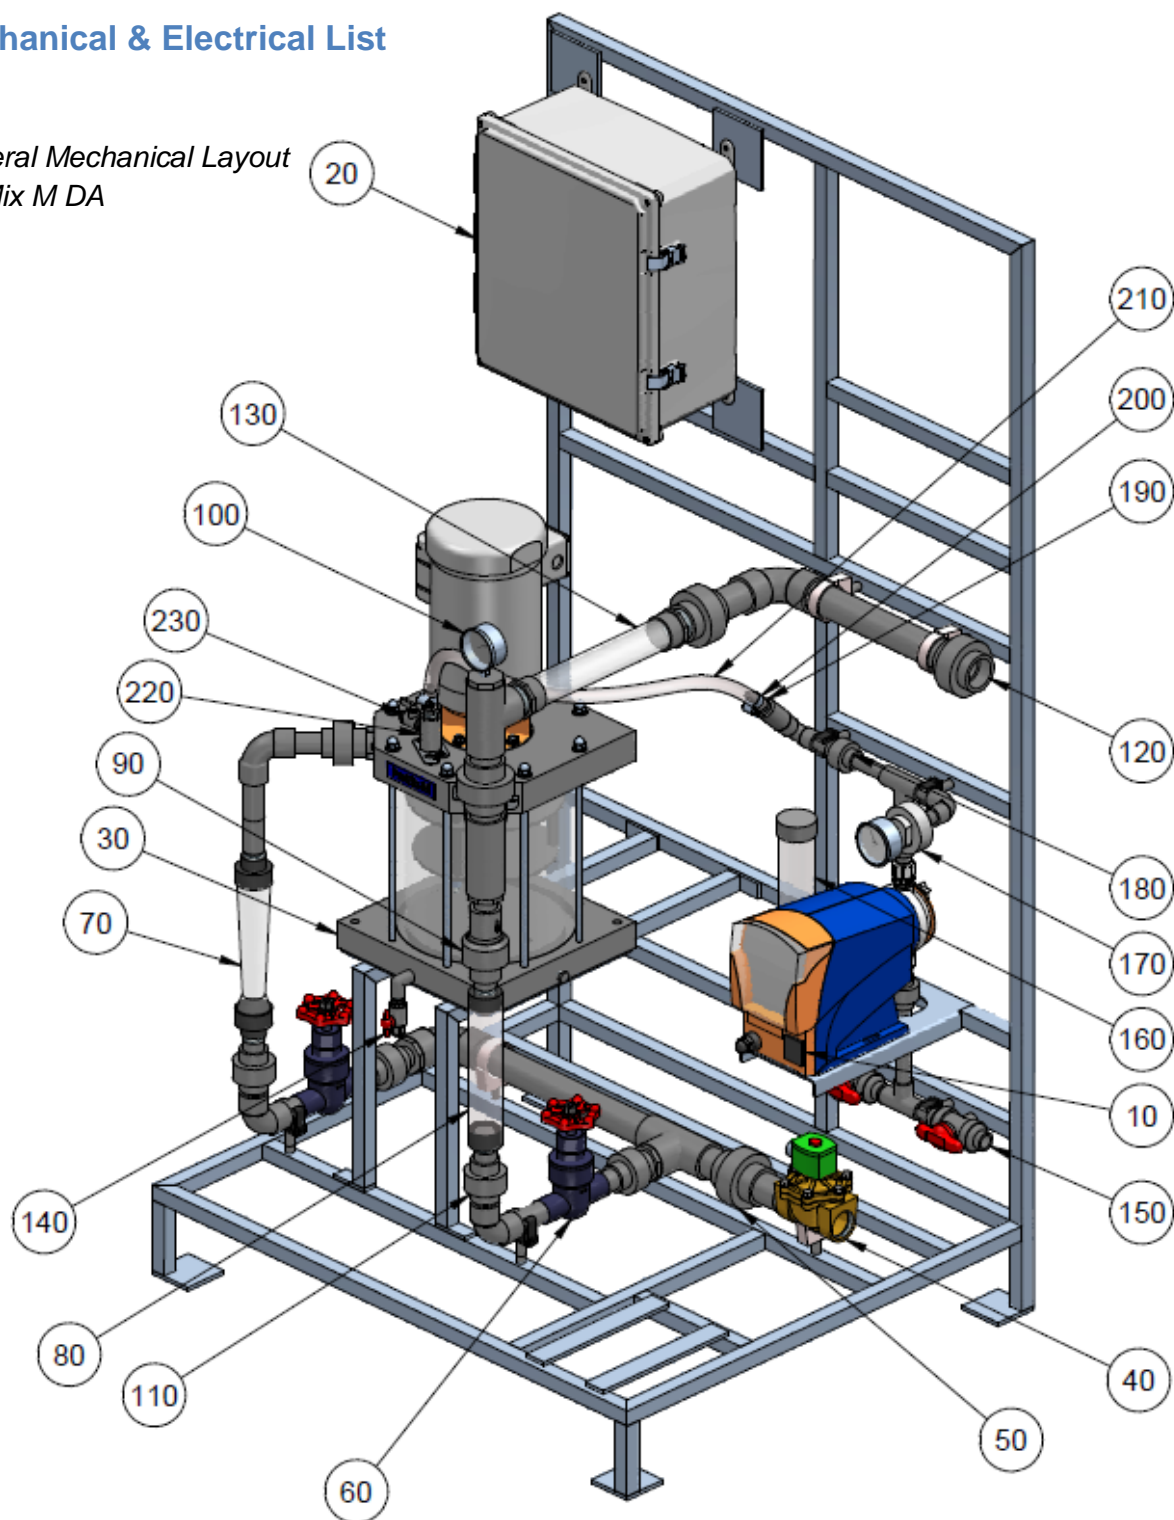


PROMIX M DA

PROMIX M (DA SERIES) BILL OF MATERIAL

			1048367	1048368	1048369	1048370	1048371	1048372	1048373	1048374
ITEM	PART DESCRIPTION	PART NO								
10	GXLA 1020 SERIES PUMP ON HV2 SETTING	GXLAUS1020PVT4V000UV4030EN	X							
	GXLA 1020 SERIES PUMP	GXLAUS1020PVT4V000UV4030EN		X						
	GXLA 0730 SERIES PUMP	GXLAUS0730PVT4V000UV4030EN			X		X		X	
	GXLA 0450 SERIES PUMP	GXLAUS1020PVT2V000UV4030EN				X		X		X
20	CONTROL PANEL	7747282	X	X	X	X	X	X	X	X
30	PROMIX M MIXING CHAMBER	7747253	X	X	X	X	X	X	X	X
40	SOLENOID VALVE, 1-1/2", FNPT, BRASS	7756526	X	X	X	X	X	X	X	X
50	UNION, 1-1/2", SOCKET, PVC/EPDM, SCH. 80	7744564	X	X	X	X	X	X	X	X
60	GLOBE VALVE, 1", SOCKET, PVC/EPDM	1048407	X	X	X	X	X	X	X	X
70	FLOW METER, 5 GPM, 3/4", FNPT, PVC, W/SWITCH	7746674	X							
	FLOW METER, 10 GPM, 3/4", FNPT, PVC, W/SWITCH	7746675		X	X	X				
	FLOW METER, 20 GPM, 1", FNPT, PVC, W/SWITCH	7746676					X	X		
	FLOW METER, 25 GPM, 1", FNPT, PVC, W/SWITCH	7746677							X	X
80	FLOW METER, 5 GPM, 1/2", FNPT, PVC	7746343	X							
	FLOW METER, 10 GPM, 1", FNPT, PVC	7746652		X	X	X				
	FLOW METER, 21 GPM, 1", FNPT, PVC	7746653					X	X		
	FLOW METER, 30.5 GPM, 1", FNPT, PVC	7746654							X	X
90	CHECK VALVE, 1", SKT, PVC	1048408	X	X	X	X	X	X	X	X
100	PRESSURE GAUGE, 316 SST, 0 – 100 PSI	7741084				X		X		X
	PRESSURE GAUGE, 316 SST, 0 – 160 PSI	7745788	X	X	X		X		X	
110	UNION, 1", SKT, PVC	7744563	X	X	X	X	X	X	X	X
120	UNION, 1-1/2", FNPT, PVC/VITON, SCH. 80	7744559	X	X	X	X	X	X	X	X
130	STATIC MIXER, 1-1/2", MNPT, CLEAR PVC, SCH. 40, 6 ELE	7746529	X	X	X	X	X	X	X	X
140	LAB COCK, 1/4", FNPT, PVC/VITON	7746331	X	X	X	X	X	X	X	X
150	BALL VALVE, 1/2", PVC/VITON, SCH. 80, TYPE 21	7000309	X	X	X	X	X	X	X	X
160	CALIBRATION COLUMN, PVC, 500 ML	7500139	X	X	X	X	X	X	X	X
170	PRESSURE GAUGE, 316SST, CPVC/PTFE ISOLATOR, 0 – 100 PSI	7746151				X		X		X
	PRESSURE GAUGE, 316SST, CPVC/PTFE ISOLATOR, 0 – 160 PSI	7746152	X	X	X		X		X	
180	UNION, 1/2", SOCKET, PVC/VITON, SCH. 80	7744562	X	X	X	X	X	X	X	X
190	HOSE BARB ADAPTER, 1/2" ID TUBING X MNPT, PVC	7740541	X	X	X	X	X	X	X	X
200	HOSE CLAMP, 1/2", SST	7741354	X	X	X	X	X	X	X	X
210	TUBING, 1/2", ID, PVC, NYLON BRAID	7744091	X	X	X	X	X	X	X	X
220	INJECTION VALVE	7747244	X	X	X	X	X	X	X	X
230	BLEED VALVE, 1/8", PVC/VITON	7747237	X	X	X	X	X	X	X	X

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

General Mechanical Layout
ProMix M PA

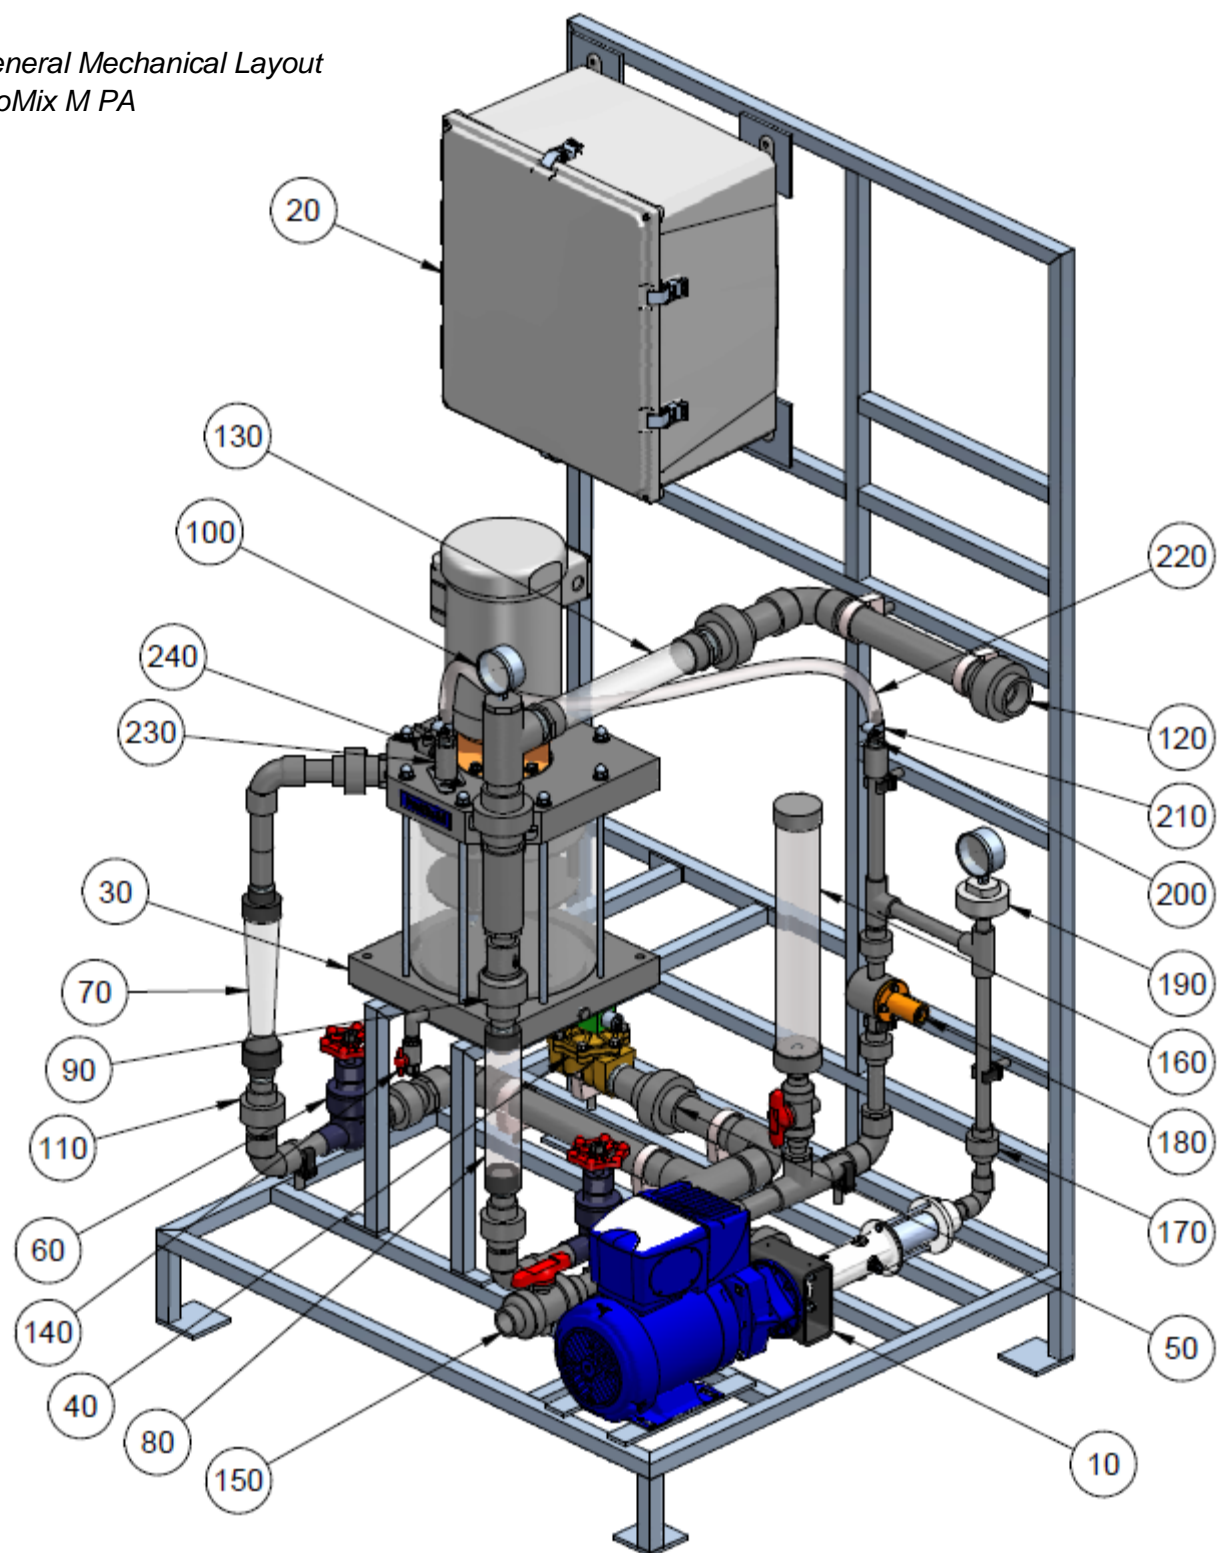


PROMIX M PA

PROMIX M (PA SERIES) BILL OF MATERIAL

			1048375	1048376	1048377	1048378	1048379	1048380	1048381
ITEM	PART DESCRIPTION	PART NO							
10	PUMP, 5 GPH, SEEPEX MODEL MD-003-012	1048415	X	X					
	PUMP, 10 GPH, SEEPEX MODEL MD-006-012	1048416			X	X		X	
	PUMP, 24 GPH, SEEPEX MODEL MD-012-012	1048417					X		X
20	CONTROL PANEL	7747283	X	X	X	X	X	X	X
30	PROMIX M MIXING CHAMBER	7747253	X	X	X	X	X	X	X
40	SOLENOID VALVE, 1-1/2", FNPT, BRASS	7756526	X	X	X	X	X	X	X
50	UNION, 1-1/2", SOCKET, PVC/EPDM, SCH. 80	7744564	X	X	X	X	X	X	X
60	GLOBE VALVE, 1", SOCKET, PVC/EPDM	1048407	X	X	X	X	X	X	X
70	FLOW METER, 5 GPM, 3/4", FNPT, PVC, W\SWITCH	7746674	X						
	FLOW METER, 10 GPM, 3/4", FNPT, PVC, W\SWITCH	7746675		X	X				
	FLOW METER, 20 GPM, 1", FNPT, PVC, W\SWITCH	7746676				X	X		
	FLOW METER, 25 GPM, 1", FNPT, PVC, W\SWITCH	7746677						X	X
80	FLOW METER, 5 GPM, 1/2", FNPT, PVC	7746343	X						
	FLOW METER, 10 GPM, 1", FNPT, PVC	7746652		X	X				
	FLOW METER, 21 GPM, 1", FNPT, PVC	7746653				X	X		
	FLOW METER, 30.5 GPM, 1", FNPT, PVC	7746654						X	X
90	CHECK VALVE, 1", SKT, PVC	1048408	X	X	X	X	X	X	X
100	PRESSURE GAUGE, 316 SST, 0 – 160 PSI	7745788	X	X	X	X	X	X	X
110	UNION, 1", SKT, PVC	7744563	X	X	X	X	X	X	X
120	UNION, 1-1/2", FNPT, PVC/VITON, SCH. 80	7744559	X	X	X	X	X	X	X
130	STATIC MIXER, 1-1/2", MNPT, CLEAR PVC, SCH. 40, 6 ELE	7746529	X	X	X	X	X	X	X
140	LAB COCK, 1/4", FNPT, PVC/VITON	7746331	X	X	X	X	X	X	X
150	BALL VALVE, 1", PVC/VITON, SCH. 80, TYPE 21	7741335	X	X	X	X	X	X	X
160	CALIBRATION COLUMN, PVC, 500 ML	7500139	X	X	X	X		X	
	CALIBRATION COLUMN, PVC, 1000 ML	7500130					X		X
170	UNION, 1/2", SOCKET, PVC/VITON, SCH. 80	7744562	X	X	X	X	X	X	X
180	BACK PRESSURE VALVE, 1/2", SOCKET, PVC, 0 – 150 PSI	1019883	X	X	X	X	X	X	X
190	PRESSURE GAUGE, 316SST, CPVC/PTFE ISOLATOR, 0 – 160 PSI	7745318	X	X	X	X	X	X	X
190	HOSE BARB ADAPTER, 1/2" ID TUBING X MNPT, PVC	7740541	X	X	X	X	X	X	X
200	HOSE CLAMP, 1/2", SST	7741354	X	X	X	X	X	X	X
210	TUBING, 1/2", ID, PVC, NYLON BRAID	7744091	X	X	X	X	X	X	X
220	INJECTION VALVE	7747244	X	X	X	X	X	X	X
230	BLEED VALVE, 1/8", PVC/VITON	7747237	X	X	X	X	X	X	X

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

P/N: 7747253 Mixing Chamber Components

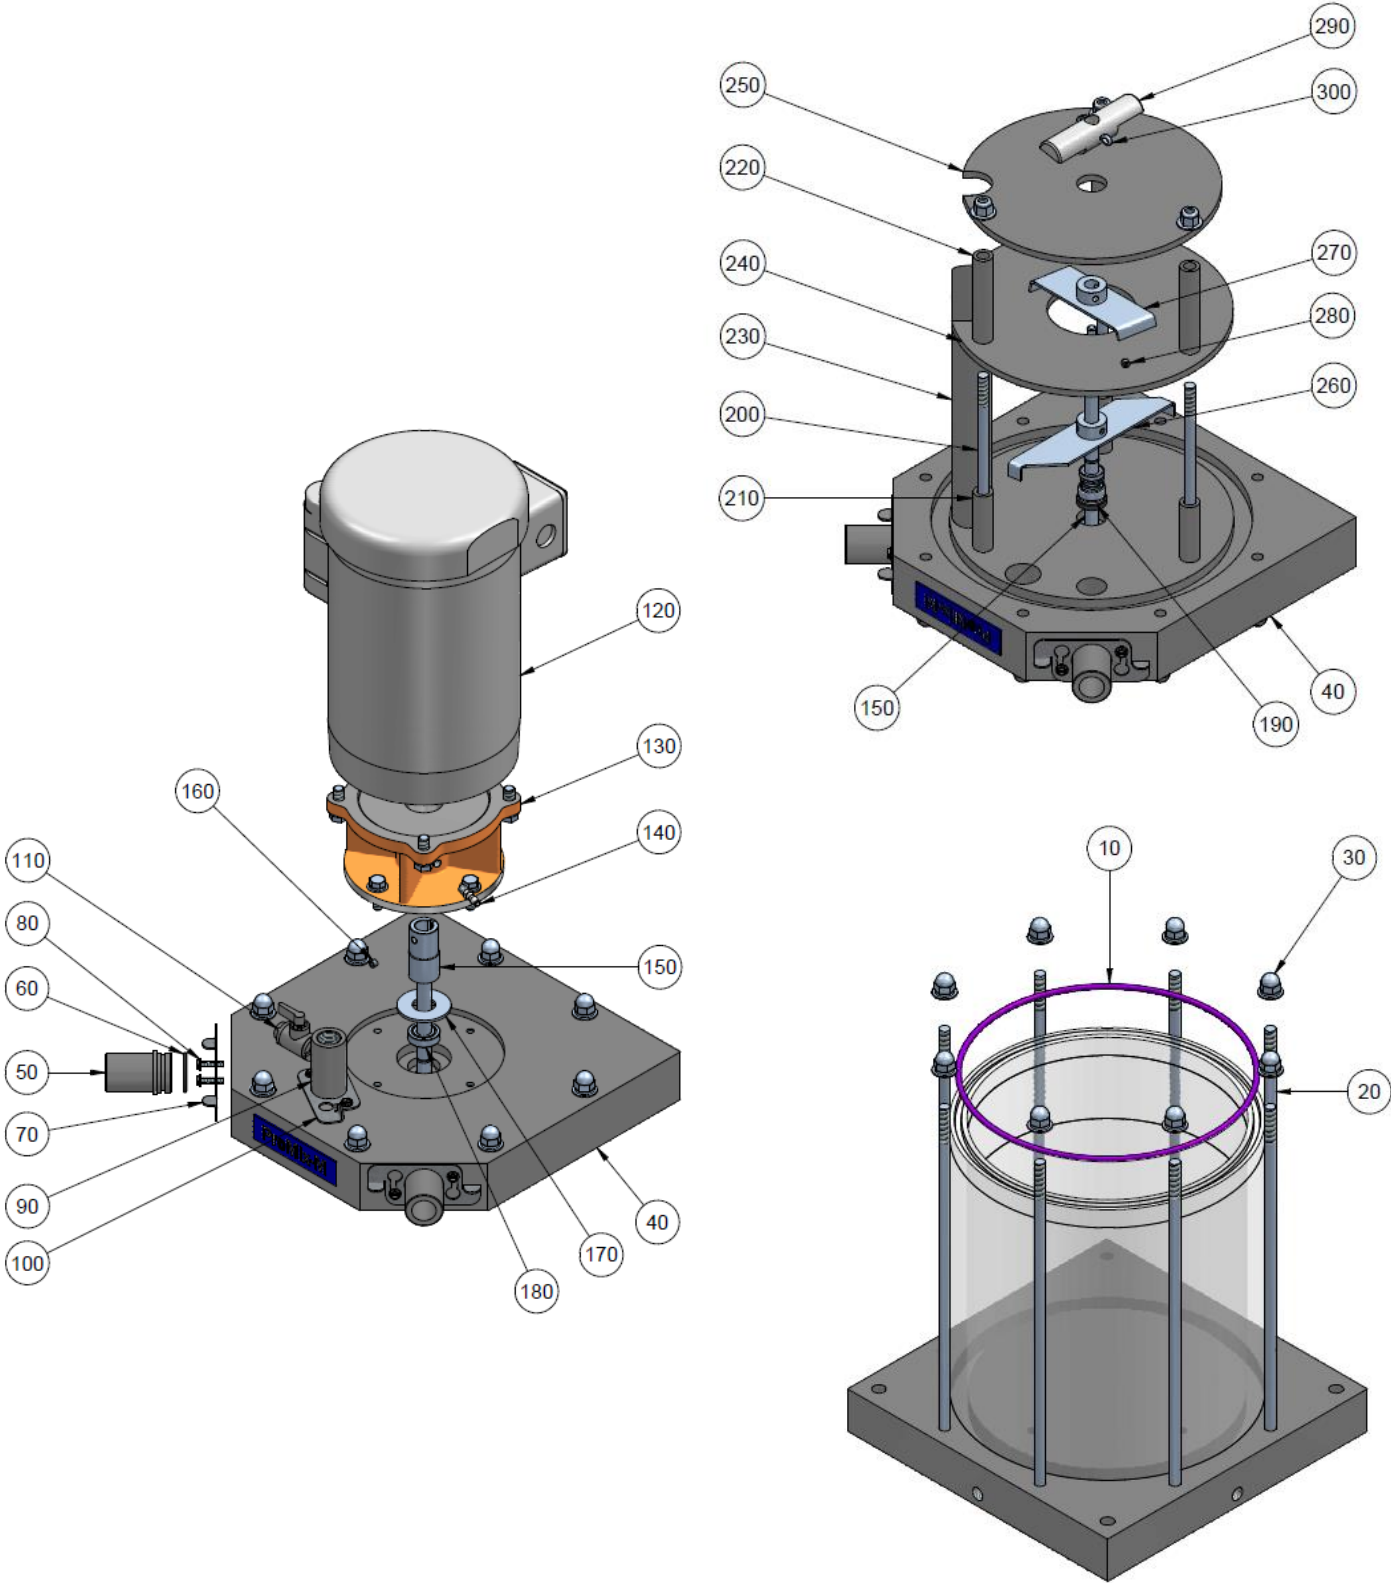

PROMIX M - MIXING CHAMBER BILL OF MATERIALS P/N: 7747253


ITEM	USA P/N	QTY	DESCRIPTION
10	7746491	1	O-RING, CHAMBER, VITON, PROMIX-M
20	7747246	8	ROD, 316SS, 3/8-16 X 14.75, PROMIX-U
30	7746492	8	NUT, ACORN, 3/8-16, 18-8 SST
40	7747252	1	PLATE, TOP, PVC, 1.75, PROMIX-M, SG
50	7747270	2	INSERT, MALE, 1", PVC, PROMIX-M
60	7747288	2	O-RING, VITON, 1.174 ID X .103 CS, AS568B-123
70	7747272	2	RETAINER, MALE INSERT, 1" 316 SST, PROMIX-M
80	7747238	6	SCREW, 10-24X3/4", 18-8, HEX HEAD WITH WASHER
90	7747244	1	INJECTION VALVE, SG, PROMIX
100	7747239	1	RETAINER, INJECTION VALVE, 316 SST
110	7747237	1	VALVE, BALL, 1/8", MANPT X FNPT, PVC, VITON
120	1105295	1	MOTOR, 1-1/2 HP, TEFC, 115/230 VAC, 1 PH, 56C, BALDOR VWDL3414
130	7746478	1	FLANGE, MOTOR, C56/135, PROMIX-M
140	7500346	1	HOSE BARB, 1/16" MNPT X 3/16" ID, PVDF
150	7746484	1	SHAFT, MIXER, 303SS, PROMIX-M
160	851405	1	SCREW, SET, 316SS, 1/4-28 PROMIX-U
170	7746473	1	WASHER, 316SS. 1.88X.81X.09, PROMIX-M
180	7746472	1	BEARING, 440SS, 1.125X.5X.31, PROMIX-M
190	7746474	1	SEAL, MECH, SHAFT, 304SS, 1/2", PROMIX-U
200	7746497	3	ROD, 316SS, 3/8-16 X 8, PROMIX-M
210	7747249	3	SPACER, TOP BAFFLE, PROMIX-M
220	7747248	3	SPACER, BOTTOM BAFFLE, PROMIX-M
230	7747247	1	PIPE, DISCHARGE, PVC, 3/4", PROMIX-U
240	7747251	1	BAFFLE, TOP, PVC, .25, PROMIX-S
250	7747250	1	BAFFLE, BOTTOM, PVC, .25, PROMIX-S
260	1108105	1	BLADE, PRIMARY, 316SS, PROMIX-M (PFC)
270	1108106	1	BLADE, SECONDARY, 316SS, PROMIX-M (PFC)
280	7746476	4	SCREW, SET, 316SS, 1/4-28 PROMIX-U
290	7746481	1	PROP, AGITATOR, CPVC, PROMIX-M
300	7746475	1	PIN, COTTER, 316 SST, 3/16 D X 1-1/4 L, MCMASTER 98355A235

Appendix B – Control Panel “A Controls”

B.1 Controller Board Layout

The controller consists of one circuit board.

It includes a 2 line x 16 character LCD display and a microcontroller module.

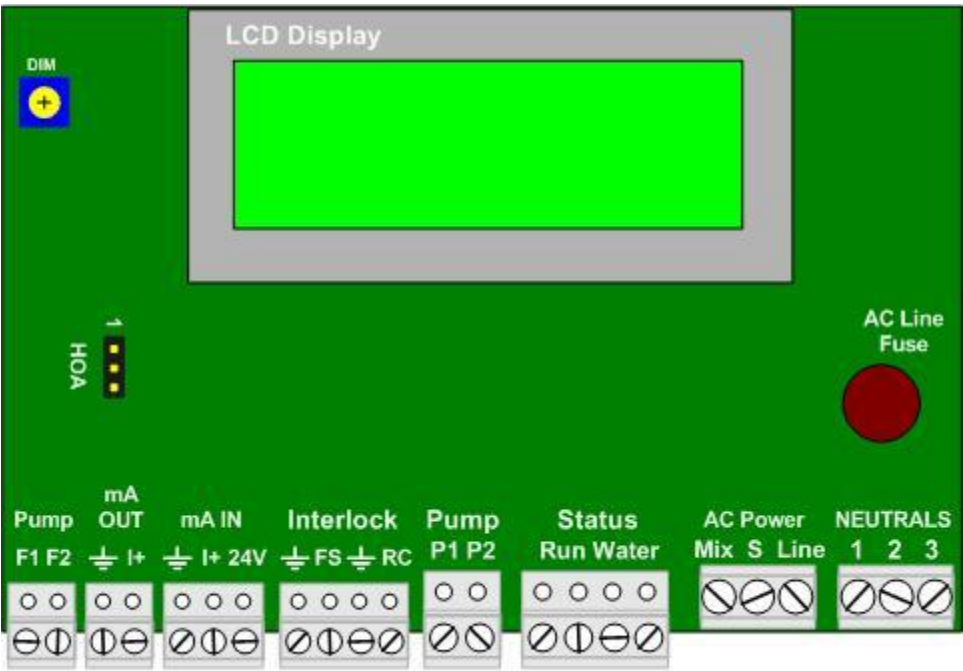


All field terminations are to be landed on terminals as per Appendix Section B.2.

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

Auxiliary digital input card – Internal Connections:

1. Connect cable from Digital card J1 to Controller Board J2
2. Connect cable from Digital card J2 to Controller Board J6

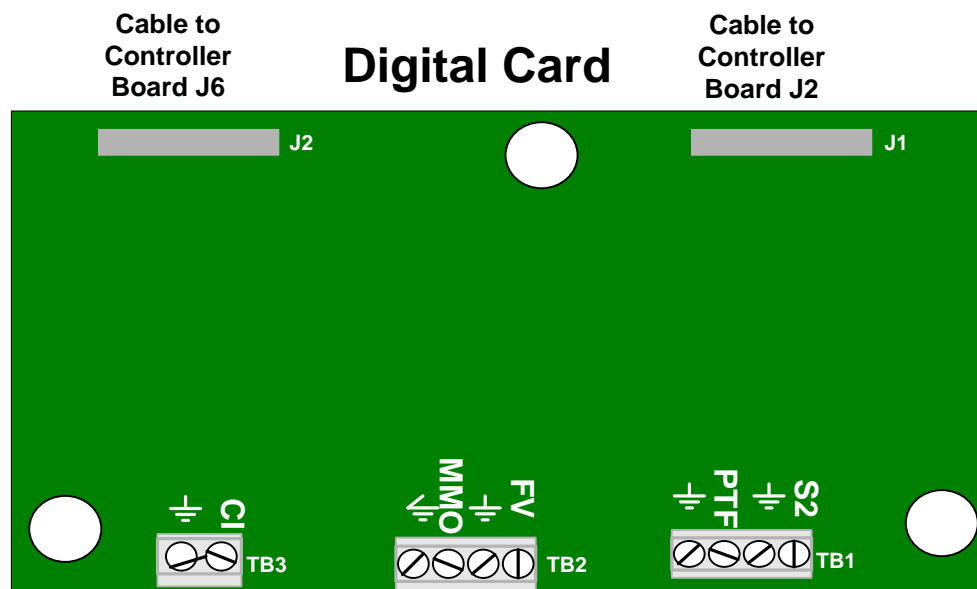


CI -
configurable
input
(sometimes
used for tank
level)

MMO – mixer motor
overload
FV – feed
verification


PTF - pump failure
S2 - interface to
Polymer Pump door
switch

B.2 Controller Wiring (DA/PA Series)



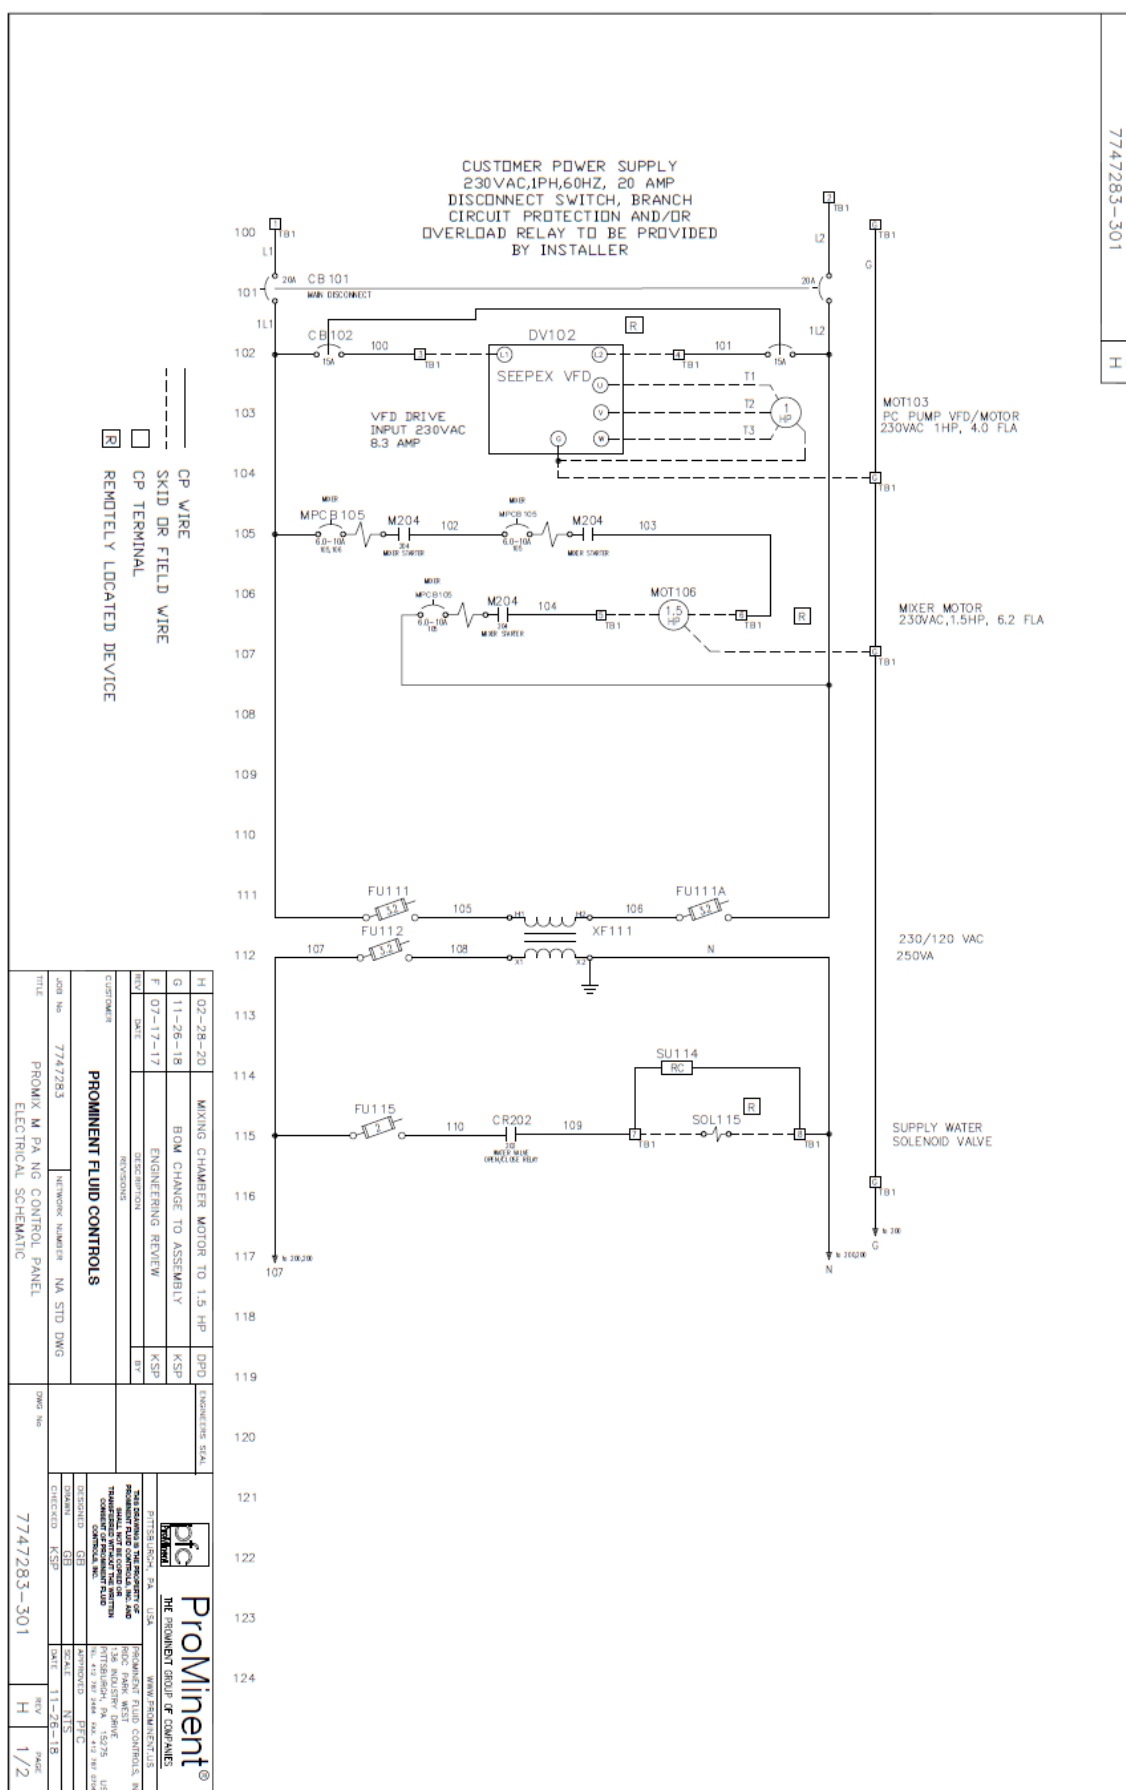


ProMinent ProMix 'DA' & 'PA' Polymer Feeder

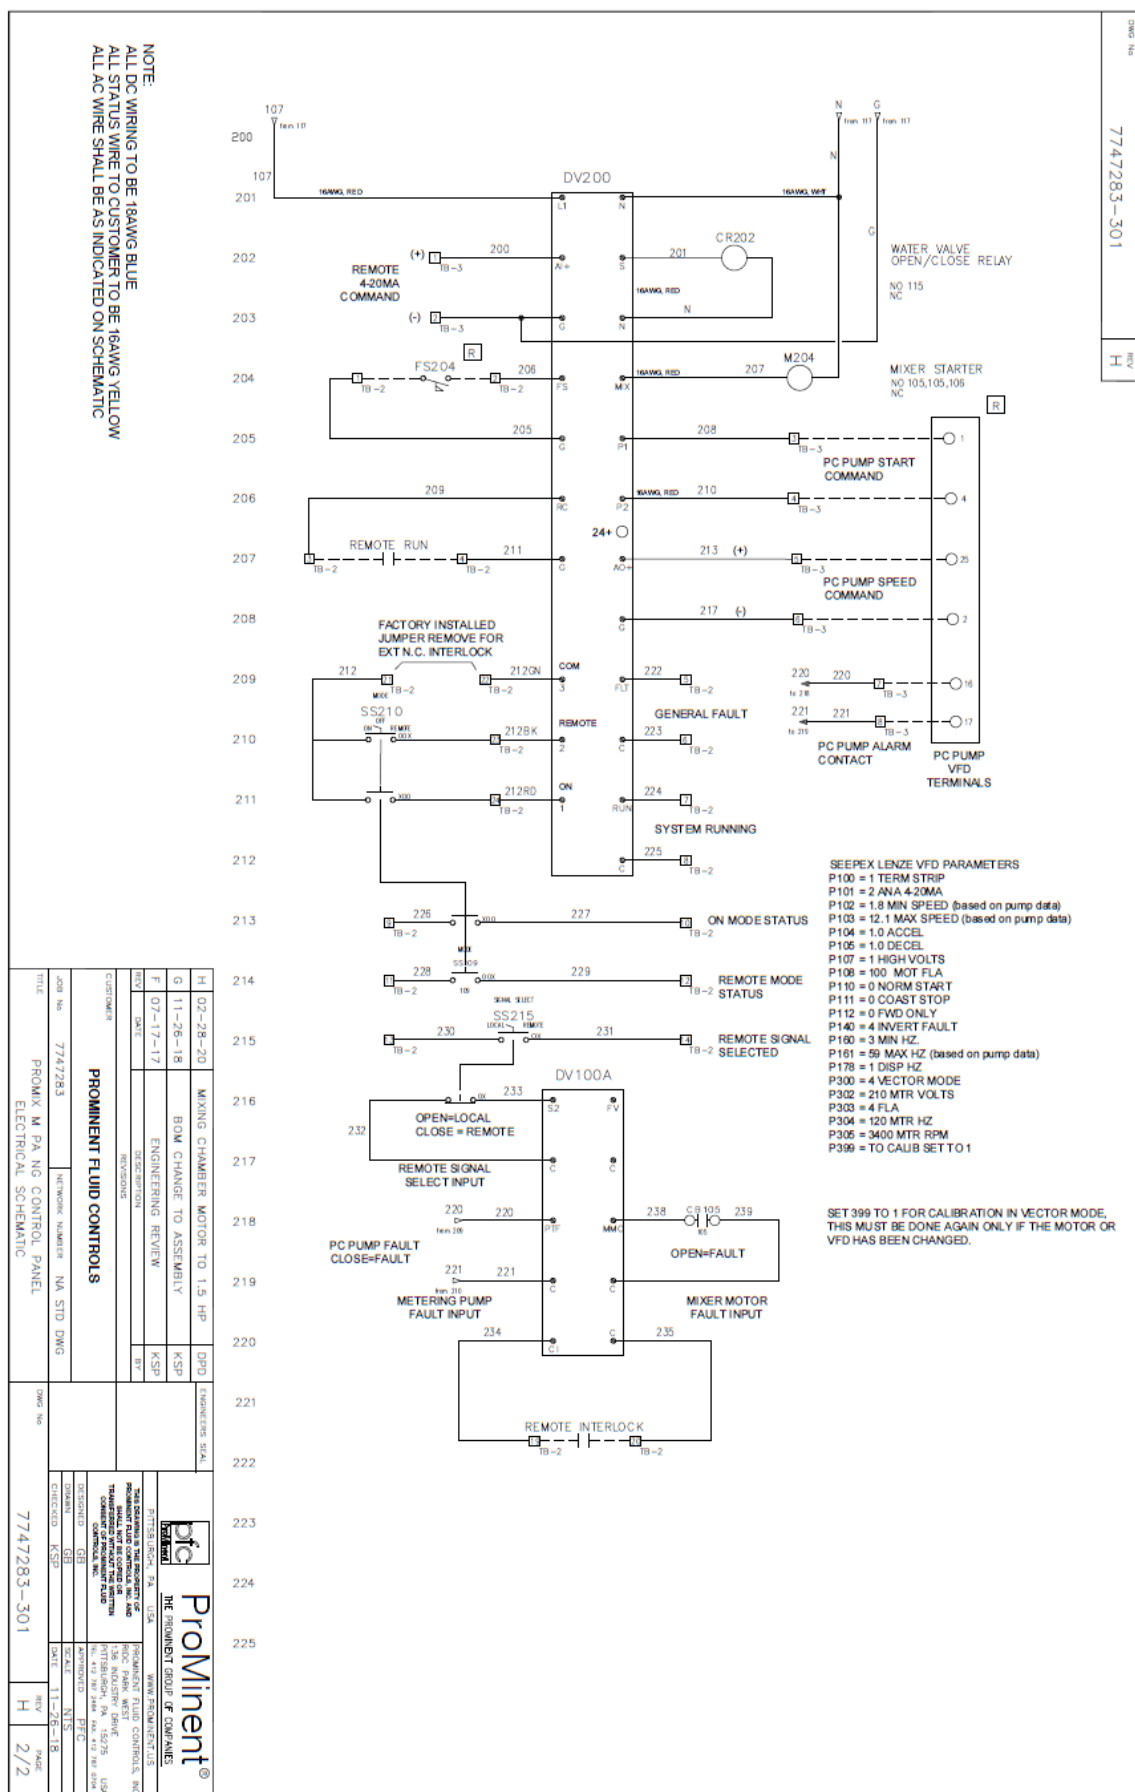


[illegible]

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

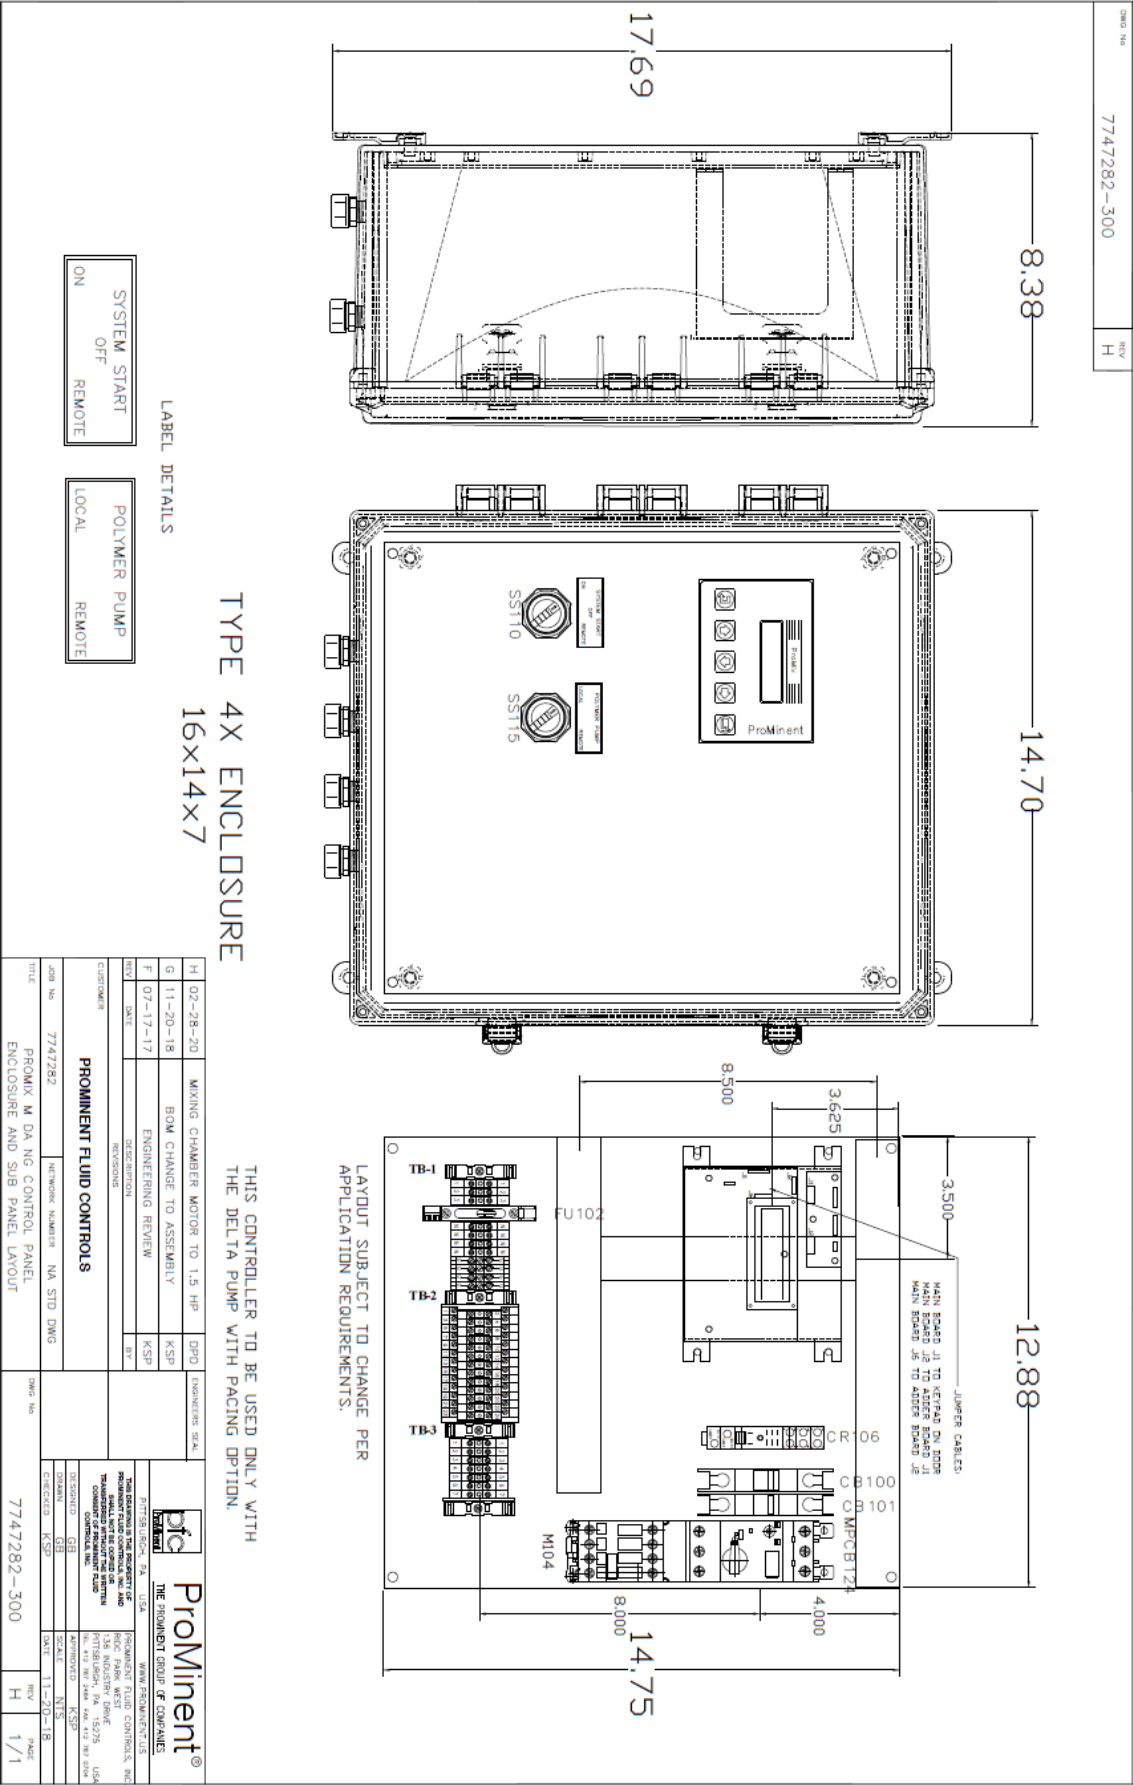


ProMinent ProMix 'DA' & 'PA' Polymer Feeder

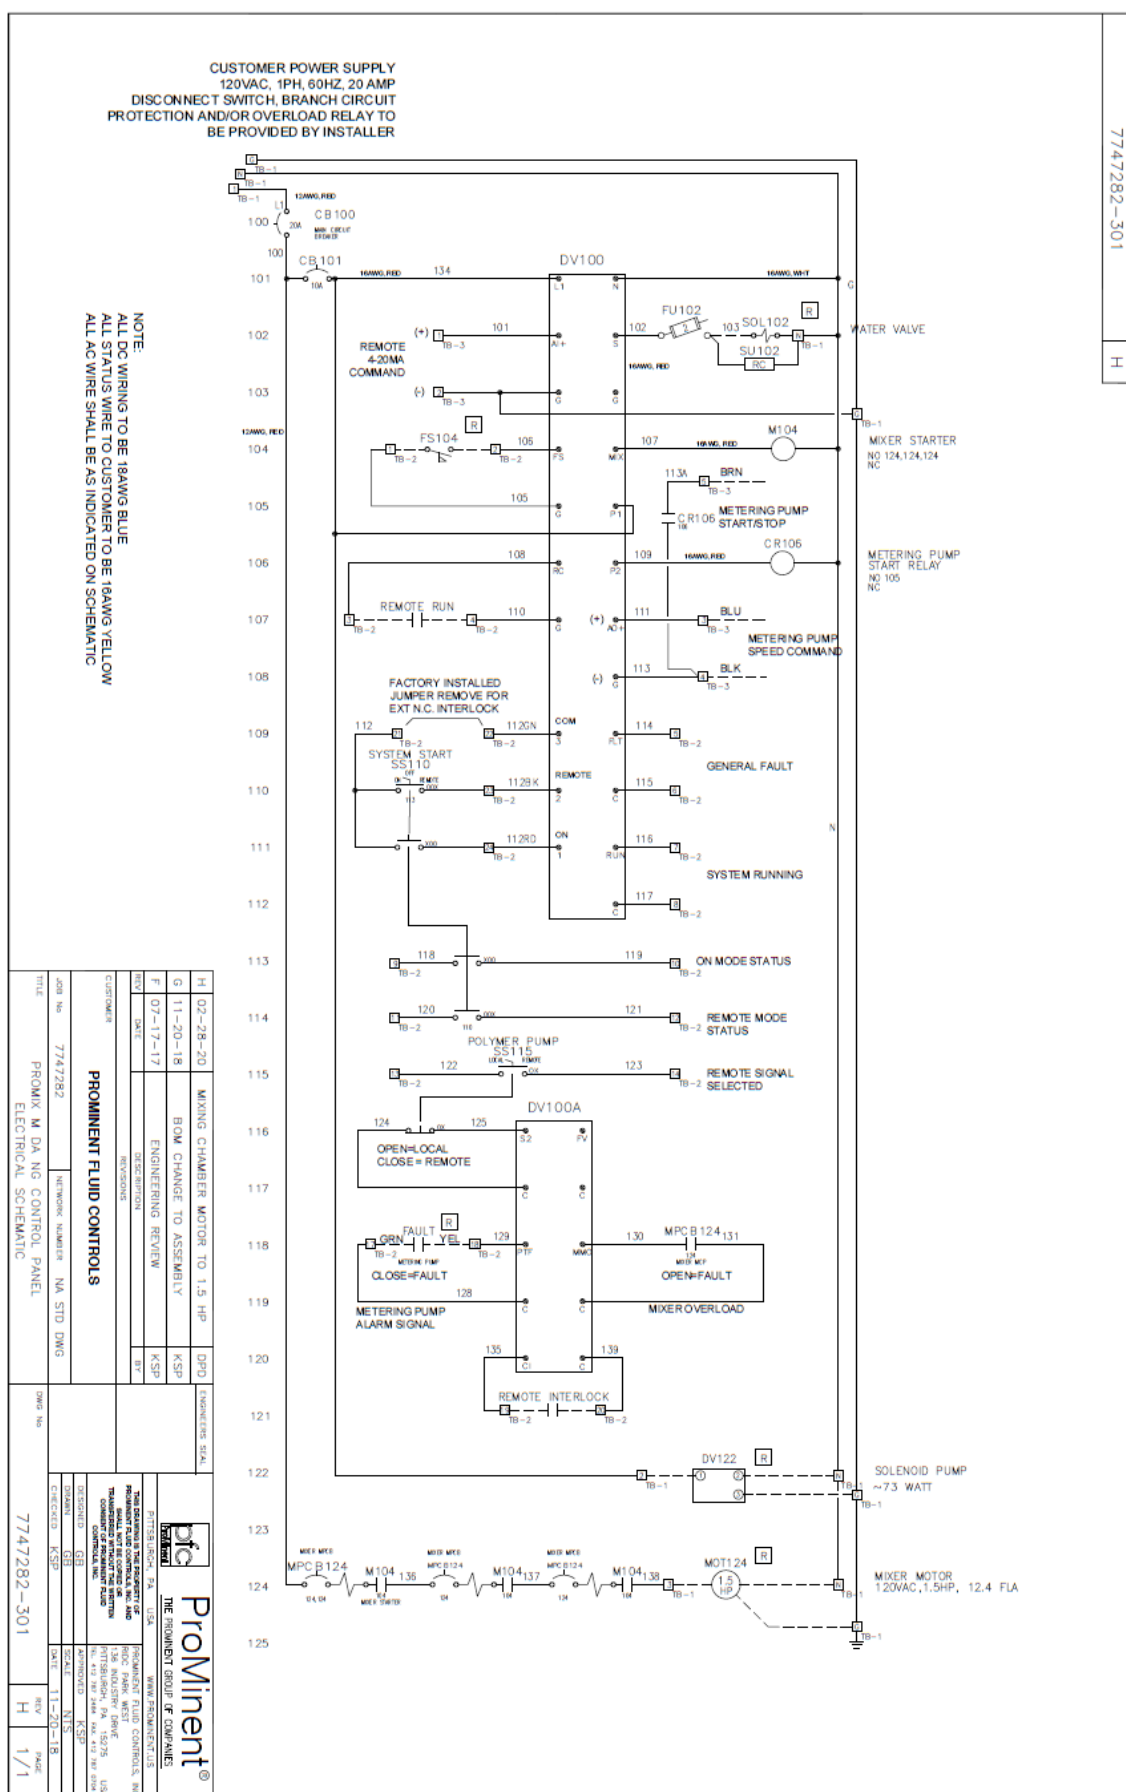

DRUG No	7747282-302	REV	H
---------	-------------	-----	---

1000	1	7745277	NETCOA	POLYCARBONATE TYPE 4X ENCLOSURE
1001	1	7745278	NETCOA	WALL MOUNT ENCLOSURE
1002	1	7745279	NETCOA	WALL MOUNT 1 X 1 X 1 N.
1003	1	7747192	NETCOA	STEEL, PAINT, PAINTED WHITE
1004	1	1077611	ASB	1-POLE CIRCUIT BREAKER
1005	1	1077612	ASB	2-POLE CIRCUIT BREAKER
1006	1	1077613	ASB	3-POLE CIRCUIT BREAKER
1007	1	1077614	ASB	4-POLE CIRCUIT BREAKER
1008	1	1077615	ASB	1-POLE CIRCUIT BREAKER
1009	1	1077616	ASB	2-POLE CIRCUIT BREAKER
1010	1	1077617	ASB	3-POLE CIRCUIT BREAKER
1011	1	1077618	ASB	4-POLE CIRCUIT BREAKER
1012	1	1077619	ASB	1-POLE CIRCUIT BREAKER
1013	1	1077620	ASB	2-POLE CIRCUIT BREAKER
1014	1	1077621	ASB	3-POLE CIRCUIT BREAKER
1015	1	1077622	ASB	4-POLE CIRCUIT BREAKER
1016	1	1077623	ASB	1-POLE CIRCUIT BREAKER
1017	1	1077624	ASB	2-POLE CIRCUIT BREAKER
1018	1	1077625	ASB	3-POLE CIRCUIT BREAKER
1019	1	1077626	ASB	4-POLE CIRCUIT BREAKER
1020	1	1077627	ASB	1-POLE CIRCUIT BREAKER
1021	1	1077628	ASB	2-POLE CIRCUIT BREAKER
1022	1	1077629	ASB	3-POLE CIRCUIT BREAKER
1023	1	1077630	ASB	4-POLE CIRCUIT BREAKER
1024	1	1077631	ASB	1-POLE CIRCUIT BREAKER
1025	1	1077632	ASB	2-POLE CIRCUIT BREAKER
1026	1	1077633	ASB	3-POLE CIRCUIT BREAKER
1027	1	1077634	ASB	4-POLE CIRCUIT BREAKER
1028	1	1077635	ASB	1-POLE CIRCUIT BREAKER
1029	1	1077636	ASB	2-POLE CIRCUIT BREAKER
1030	1	1077637	ASB	3-POLE CIRCUIT BREAKER
1031	1	1077638	ASB	4-POLE CIRCUIT BREAKER
1032	1	1077639	ASB	1-POLE CIRCUIT BREAKER
1033	1	1077640	ASB	2-POLE CIRCUIT BREAKER
1034	1	1077641	ASB	3-POLE CIRCUIT BREAKER
1035	1	1077642	ASB	4-POLE CIRCUIT BREAKER
1036	1	1077643	ASB	1-POLE CIRCUIT BREAKER
1037	1	1077644	ASB	2-POLE CIRCUIT BREAKER
1038	1	1077645	ASB	3-POLE CIRCUIT BREAKER
1039	1	1077646	ASB	4-POLE CIRCUIT BREAKER
1040	1	1077647	ASB	1-POLE CIRCUIT BREAKER
1041	1	1077648	ASB	2-POLE CIRCUIT BREAKER
1042	1	1077649	ASB	3-POLE CIRCUIT BREAKER
1043	1	1077650	ASB	4-POLE CIRCUIT BREAKER
1044	1	1077651	ASB	1-POLE CIRCUIT BREAKER
1045	1	1077652	ASB	2-POLE CIRCUIT BREAKER
1046	1	1077653	ASB	3-POLE CIRCUIT BREAKER
1047	1	1077654	ASB	4-POLE CIRCUIT BREAKER
1048	1	1077655	ASB	1-POLE CIRCUIT BREAKER
1049	1	1077656	ASB	2-POLE CIRCUIT BREAKER
1050	1	1077657	ASB	3-POLE CIRCUIT BREAKER
1051	1	1077658	ASB	4-POLE CIRCUIT BREAKER
1052	1	1077659	ASB	1-POLE CIRCUIT BREAKER
1053	1	1077660	ASB	2-POLE CIRCUIT BREAKER
1054	1	1077661	ASB	3-POLE CIRCUIT BREAKER
1055	1	1077662	ASB	4-POLE CIRCUIT BREAKER
1056	1	1077663	ASB	1-POLE CIRCUIT BREAKER
1057	1	1077664	ASB	2-POLE CIRCUIT BREAKER
1058	1	1077665	ASB	3-POLE CIRCUIT BREAKER
1059	1	1077666	ASB	4-POLE CIRCUIT BREAKER
1060	1	1077667	ASB	1-POLE CIRCUIT BREAKER
1061	1	1077668	ASB	2-POLE CIRCUIT BREAKER
1062	1	1077669	ASB	3-POLE CIRCUIT BREAKER
1063	1	1077670	ASB	4-POLE CIRCUIT BREAKER
1064	1	1077671	ASB	1-POLE CIRCUIT BREAKER
1065	1	1077672	ASB	2-POLE CIRCUIT BREAKER
1066	1	1077673	ASB	3-POLE CIRCUIT BREAKER
1067	1	1077674	ASB	4-POLE CIRCUIT BREAKER
1068	1	1077675	ASB	1-POLE CIRCUIT BREAKER
1069	1	1077676	ASB	2-POLE CIRCUIT BREAKER
1070	1	1077677	ASB	3-POLE CIRCUIT BREAKER
1071	1	1077678	ASB	4-POLE CIRCUIT BREAKER
1072	1	1077679	ASB	1-POLE CIRCUIT BREAKER
1073	1	1077680	ASB	2-POLE CIRCUIT BREAKER
1074	1	1077681	ASB	3-POLE CIRCUIT BREAKER
1075	1	1077682	ASB	4-POLE CIRCUIT BREAKER
1076	1	1077683	ASB	1-POLE CIRCUIT BREAKER
1077	1	1077684	ASB	2-POLE CIRCUIT BREAKER
1078	1	1077685	ASB	3-POLE CIRCUIT BREAKER
1079	1	1077686	ASB	4-POLE CIRCUIT BREAKER
1080	1	1077687	ASB	1-POLE CIRCUIT BREAKER
1081	1	1077688	ASB	2-POLE CIRCUIT BREAKER
1082	1	1077689	ASB	3-POLE CIRCUIT BREAKER
1083	1	1077690	ASB	4-POLE CIRCUIT BREAKER
1084	1	1077691	ASB	1-POLE CIRCUIT BREAKER
1085	1	1077692	ASB	2-POLE CIRCUIT BREAKER
1086	1	1077693	ASB	3-POLE CIRCUIT BREAKER
1087	1	1077694	ASB	4-POLE CIRCUIT BREAKER
1088	1	1077695	ASB	1-POLE CIRCUIT BREAKER
1089	1	1077696	ASB	2-POLE CIRCUIT BREAKER
1090	1	1077697	ASB	3-POLE CIRCUIT BREAKER
1091	1	1077698	ASB	4-POLE CIRCUIT BREAKER
1092	1	1077699	ASB	1-POLE CIRCUIT BREAKER
1093	1	1077700	ASB	2-POLE CIRCUIT BREAKER
1094	1	1077701	ASB	3-POLE CIRCUIT BREAKER
1095	1	1077702	ASB	4-POLE CIRCUIT BREAKER
1096	1	1077703	ASB	1-POLE CIRCUIT BREAKER
1097	1	1077704	ASB	2-POLE CIRCUIT BREAKER
1098	1	1077705	ASB	3-POLE CIRCUIT BREAKER
1099	1	1077706	ASB	4-POLE CIRCUIT BREAKER
1100	1	1077707	ASB	1-POLE CIRCUIT BREAKER
1101	1	1077708	ASB	2-POLE CIRCUIT BREAKER
1102	1	1077709	ASB	3-POLE CIRCUIT BREAKER
1103	1	1077710	ASB	4-POLE CIRCUIT BREAKER
1104	1	1077711	ASB	1-POLE CIRCUIT BREAKER
1105	1	1077712	ASB	2-POLE CIRCUIT BREAKER
1106	1	1077713	ASB	3-POLE CIRCUIT BREAKER
1107	1	1077714	ASB	4-POLE CIRCUIT BREAKER
1108	1	1077715	ASB	1-POLE CIRCUIT BREAKER
1109	1	1077716	ASB	2-POLE CIRCUIT BREAKER
1110	1	1077717	ASB	3-POLE CIRCUIT BREAKER
1111	1	1077718	ASB	4-POLE CIRCUIT BREAKER
1112	1	1077719	ASB	1-POLE CIRCUIT BREAKER
1113	1	1077720	ASB	2-POLE CIRCUIT BREAKER
1114	1	1077721	ASB	3-POLE CIRCUIT BREAKER
1115	1	1077722	ASB	4-POLE CIRCUIT BREAKER
1116	1	1077723	ASB	1-POLE CIRCUIT BREAKER
1117	1	1077724	ASB	2-POLE CIRCUIT BREAKER
1118	1	1077725	ASB	3-POLE CIRCUIT BREAKER
1119	1	1077726	ASB	4-POLE CIRCUIT BREAKER
1120	1	1077727	ASB	1-POLE CIRCUIT BREAKER
1121	1	1077728	ASB	2-POLE CIRCUIT BREAKER
1122	1	1077729	ASB	3-POLE CIRCUIT BREAKER
1123	1	1077730	ASB	4-POLE CIRCUIT BREAKER
1124	1	1077731	ASB	1-POLE CIRCUIT BREAKER
1125	1	1077732	ASB	2-POLE CIRCUIT BREAKER
1126	1	1077733	ASB	3-POLE CIRCUIT BREAKER
1127	1	1077734	ASB	4-POLE CIRCUIT BREAKER
1128	1	1077735	ASB	1-POLE CIRCUIT BREAKER
1129	1	1077736	ASB	2-POLE CIRCUIT BREAKER
1130	1	1077737	ASB	3-POLE CIRCUIT BREAKER
1131	1	1077738	ASB	4-POLE CIRCUIT BREAKER
1132	1	1077739	ASB	1-POLE CIRCUIT BREAKER
1133	1	1077740	ASB	2-POLE CIRCUIT BREAKER
1134	1	1077741	ASB	3-POLE CIRCUIT BREAKER
1135	1	1077742	ASB	4-POLE CIRCUIT BREAKER
1136	1	1077743	ASB	1-POLE CIRCUIT BREAKER
1137	1	1077744	ASB	2-POLE CIRCUIT BREAKER
1138	1	1077745	ASB	3-POLE CIRCUIT BREAKER
1139	1	1077746	ASB	4-POLE CIRCUIT BREAKER
1140	1	1077747	ASB	1-POLE CIRCUIT BREAKER
1141	1	1077748	ASB	2-POLE CIRCUIT BREAKER
1142	1	1077749	ASB	3-POLE CIRCUIT BREAKER
1143	1	1077750	ASB	4-POLE CIRCUIT BREAKER
1144	1	1077751	ASB	1-POLE CIRCUIT BREAKER
1145	1	1077752	ASB	2-POLE CIRCUIT BREAKER
1146	1	1077753	ASB	3-POLE CIRCUIT BREAKER
1147	1	1077754	ASB	4-POLE CIRCUIT BREAKER
1148	1	1077755	ASB	1-POLE CIRCUIT BREAKER
1149	1	1077756	ASB	2-POLE CIRCUIT BREAKER
1150	1	1077757	ASB	3-POLE CIRCUIT BREAKER
1151	1	1077758	ASB	4-POLE CIRCUIT BREAKER
1152	1	1077759	ASB	1-POLE CIRCUIT BREAKER
1153	1	1077760	ASB	2-POLE CIRCUIT BREAKER
1154	1	1077761	ASB	3-POLE CIRCUIT BREAKER
1155	1	1077762	ASB	4-POLE CIRCUIT BREAKER
1156	1	1077763	ASB	1-POLE CIRCUIT BREAKER
1157	1	1077764	ASB	2-POLE CIRCUIT BREAKER
1158	1	1077765	ASB	3-POLE CIRCUIT BREAKER
1159	1	1077766	ASB	4-POLE CIRCUIT BREAKER
1160	1	1077767	ASB	1-POLE CIRCUIT BREAKER
1161	1	1077768	ASB	2-POLE CIRCUIT BREAKER
1162	1	1077769	ASB	3-POLE CIRCUIT BREAKER
1163	1	1077770	ASB	4-POLE CIRCUIT BREAKER
1164	1	1077771	ASB	1-POLE CIRCUIT BREAKER
1165	1	1077772	ASB	2-POLE CIRCUIT BREAKER
1166	1	1077773	ASB	3-POLE CIRCUIT BREAKER
1167	1	1077774	ASB	4-POLE CIRCUIT BREAKER
1168	1	1077775	ASB	1-POLE CIRCUIT BREAKER
1169	1	1077776	ASB	2-POLE CIRCUIT BREAKER
1170	1	1077777	ASB	3-POLE CIRCUIT BREAKER
1171	1	1077778	ASB	4-POLE CIRCUIT BREAKER
1172	1	1077779	ASB	1-POLE CIRCUIT BREAKER
1173	1	1077780	ASB	2-POLE CIRCUIT BREAKER
1174	1	1077781	ASB	3-POLE CIRCUIT BREAKER
1175	1	1077782	ASB	4-POLE CIRCUIT BREAKER
1176	1	1077783	ASB	1-POLE CIRCUIT BREAKER
1177	1	1077784	ASB	2-POLE CIRCUIT BREAKER
1178	1	1077785	ASB	3-POLE CIRCUIT BREAKER
1179	1	1077786	ASB	4-POLE CIRCUIT BREAKER
1180	1	1077787	ASB	1-POLE CIRCUIT BREAKER
1181	1	1077788	ASB	2-POLE CIRCUIT BREAKER
1182	1	1077789	ASB	3-POLE CIRCUIT BREAKER
1183	1	1077790	ASB	4-POLE CIRCUIT BREAKER
1184	1	1077791	ASB	1-POLE CIRCUIT BREAKER
1185	1	1077792	ASB	2-POLE CIRCUIT BREAKER
1186	1	1077793	ASB	3-POLE CIRCUIT BREAKER
1187	1	1077794	ASB	4-POLE CIRCUIT BREAKER
1188	1	1077795	ASB	1-POLE CIRCUIT BREAKER
1189	1	1077796	ASB	2-POLE CIRCUIT BREAKER
1190	1	1077797	ASB	3-POLE CIRCUIT BREAKER
1191	1	1077798	ASB	4-POLE CIRCUIT BREAKER
1192	1	1077799	ASB	1-POLE CIRCUIT BREAKER
1193	1	1077800	ASB	2-POLE CIRCUIT BREAKER
1194	1	1077801	ASB	3-POLE CIRCUIT BREAKER
1195	1	1077802	ASB	4-POLE CIRCUIT BREAKER
1196	1	1077803	ASB	1-POLE CIRCUIT BREAKER
1197	1	1077804	ASB	2-POLE CIRCUIT BREAKER
1198	1	1077805	ASB	3-POLE CIRCUIT BREAKER
1199	1	1077806	ASB	4-POLE CIRCUIT BREAKER
1200	1	1077807	ASB	1-POLE CIRCUIT BREAKER
1201	1	1077808	ASB	2-POLE CIRCUIT BREAKER
1202	1	1077809	ASB	3-POLE CIRCUIT BREAKER
1203	1	1077810	ASB	4-POLE CIRCUIT BREAKER
1204	1	1077811	ASB	1-POLE CIRCUIT BREAKER
1205	1	1077812	ASB	2-POLE CIRCUIT BREAKER
1206	1	1077813	ASB	3-POLE CIRCUIT BREAKER
1207	1	1077814	ASB	4-POLE CIRCUIT BREAKER
1208	1	1077815	ASB	1-POLE CIRCUIT BREAKER
1209	1	1077816	ASB	2-POLE CIRCUIT BREAKER
1210	1	1077817	ASB	3-POLE CIRCUIT BREAKER
1211	1	1077818	ASB	4-POLE CIRCUIT BREAKER
1212	1	1077819	ASB	1-POLE CIRCUIT BREAKER
1213	1	1077820	ASB	2-POLE CIRCUIT BREAKER
1214	1	1077821	ASB	3-POLE CIRCUIT BREAKER
1215	1	1077822	ASB	4-POLE CIRCUIT BREAKER
1216	1	1077823	ASB	1-POLE CIRCUIT BREAKER
1217	1	1077824	ASB	2-POLE CIRCUIT BREAKER
1218	1	1077825	ASB	3-POLE CIRCUIT BREAKER
1219	1	1077826	ASB	4-POLE CIRCUIT BREAKER
1220	1	1077827	ASB	1-POLE CIRCUIT BREAKER
1221	1	1077828	ASB	2-POLE CIRCUIT BREAKER
1222	1	1077829	ASB	3-POLE CIRCUIT BREAKER
1223	1	1077830	ASB	4-POLE CIRCUIT BREAKER
1224	1	1077831	ASB	1-POLE CIRCUIT BREAKER
1225	1	1077832	ASB	2-POLE CIRCUIT BREAKER
1226	1	1077833	ASB	3-POLE CIRCUIT BREAKER
1227	1	1077834	ASB	4-POLE CIRCUIT BREAKER
1228	1	1077835	ASB	1-POLE CIRCUIT BREAKER
1229	1	1077836	ASB	2-POLE CIRCUIT BREAKER
1230	1	1077837	ASB	3-POLE CIRCUIT BREAKER
1231	1	1077838	ASB	4-POLE CIRCUIT BREAKER
1232	1	1077839	ASB	1-POLE CIRCUIT BREAKER
1233	1	1077840	ASB	2-POLE CIRCUIT BREAKER
1234	1	1077841	ASB	3-POLE CIRCUIT BREAKER
1235	1	1077842	ASB	4-POLE CIRCUIT BREAKER
1236	1	1077843	ASB	1-POLE CIRCUIT BREAKER
1237	1	1077844	ASB	2-POLE CIRCUIT BREAKER

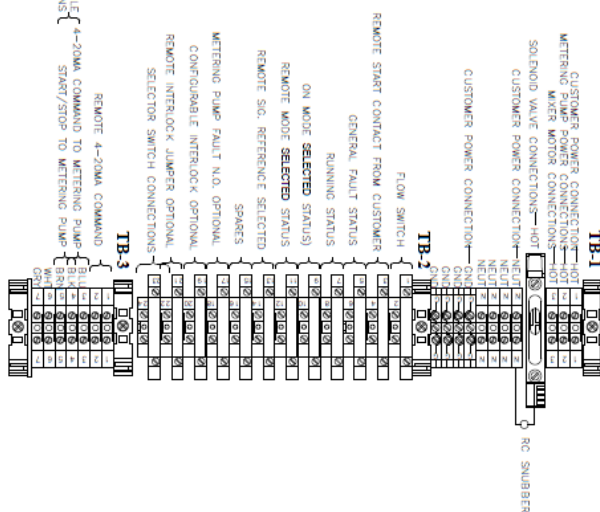

SELECTOR OPERATION		"A" CONTROL
SW1 ON-OFF-REMOTE	SW2 LOCAL-REMOTE	SYSTEM ON - LOCAL REPAIR/CONTROL'S PUMP
ON	LOCAL	SYSTEM ON - REMOTE 4-25MA FOR PUMP
ON	REMOTE	OUTPUT
REMOTE	LOCAL	SYSTEM START VIA REMOTE ORS CONTACT -
REMOTE	REMOTE	SYSTEM START VIA REMOTE ORS CONTACT -
		REMOTE 4-25MA FOR PUMP OUTPUT

[illegible]

B.3 4-20 mA Input Scaling

1. Feeding More Polymer when the 4-20mA Input Current Decreases:

If you set **Scale lin @ 4mA to 4mA = 100%** and **Scale lin @ 20mA to 20mA = 0%**, the feeder will accommodate a logically inverted controlling 4-20mA current loop.

However, the default **lin Fail State** is polymer pump OFF at 3.85mA.

If a current signal <4.0mA does not represent a control loop fault at your site, you may wish to set the **lin Fail State** to **Pump @ 100%**.

2. Non-Zero % at 4.0mA & 100% @ <20mA:

To verify a non-standard 4-20mA input scaling, Set **Scale lin @ 4mA to 4mA = 20%** and **Scale lin @ 20mA to 12mA = 100%**.

For a controlling current loop is at each of the following values:

Greater than 12mA = 100% pump speed

4.0mA = 20% pump speed

12 to 4mA = $(100\% - 20\%) \times (mA - 4) / (12 - 4) + 20\%$

Example: At 10.4mA control current: $(80\% \times (10.5 - 4) / 8) + 20\% = 85\%$ pump speed

3. Correct Pump Response buy more Complex than needed:

If you also logically invert the 4-20mA pump response it may get confusing for you to verify the pump response to the 4-20mA input.

If you set **Scale lin @ 4mA to 6mA = 100%** and **Scale lin @ 20mA to 16mA = 10%**

16 to 6mA = $(10\% - 100\%) \times (mA - 16) / (6 - 16) + 10\%$

Example: At 13.6mA control current: $(-90\% \times (10.5 - 4) / 8) + 20\% = 31\%$ pump speed

Few users will need to re-scale more than one of the current or percentage parameters. Many users will not have to re-scale the 4-20mA input; 4-20mA will be 0-100% pump speed.

4. Dual Logical Inversion:

Be careful how you set the scaling currents and percentages. The effect is not always obvious.

If you set **Scale lin @ 4mA to 20mA = 100%** and **Scale lin @ 20mA to 4mA = 0%**

You've logically inverted both the control current and the pump response – you are then back to factory default span & control response

This is not a fault but could be confusing to other users

5. Keying Error Response:

Be aware not to accidentally set both the 4mA and 20mA scaling to the same values!

For example if you set **Scale lin @ 4mA to 10mA = 100%** and

Scale lin @ 20mA to 10mA = 0%, the feeder forces a 0.1mA difference

If you set **Scale lin @ 4mA to 4mA = 50%** and **Scale lin @ 20mA to 20mA = 50%**, the feeder forces a 1% difference.

Correct any keying error prior to operating the ProMix M

Appendix C – Polymer Sizing / Dosage

The ProMix M Polymer Pump switch on the controller door enables the user to select either LOCAL or REMOTE operation. In 'LOCAL', the polymer pump speed is selectable from 0 - 100% using the controller keypad. In 'REMOTE', the polymer pump speed is controlled by a remote 4-20 mA signal representing 0 – 100%.

The desired polymer dosage must be considered prior to selecting the ProMix M model and pump speed. Typically the user will know how much polymer is required. This information is from jar tests or from prior experience. Otherwise the dosage can be derived from an initial manual calculation which must be adjusted based upon actual operation.

Below are typical guidelines to estimate polymer feed dosage:

1. For a Clarifier / Filter application:

A = MGD Plant Flow

B = ppm active polymer

C = desired solution concentration (%)

$$(A*B)/24 = \text{GPH active polymer}$$

$$\text{GPH active polymer}/C = \text{Required dilution range}$$

2. For a Sludge Dewatering application:

User must have the following information to estimate GPH neat polymer:

A = GPM sludge

B = % solids (concentration)

C = lbs polymer per dry ton

D = percent active polymer

E = desired solution concentration (%)

$$(((A*8.34)*B)*60)/2000 = \text{Tons/Hr dry sludge}$$

$$(((\text{Tons/Hr dry sludge}*C)/8.34)/D)/E = \text{Required dilution range}$$

The polymer concentration from the ProMix M Polymer feeder is based upon the neat polymer pump rate divided by the total water flow through the primary and post dilution rotameters. For example, if the neat polymer feed rate is 1.5 gph and the flow through the primary rotameter is 15 gpm and the flow through the secondary rotameter is 10 gpm then the polymer concentration is:

$$((1.5 \text{ gph} / 60) / (15 \text{ gpm} + 10 \text{ gpm})) = 0.001 = 0.1\%$$

Further post dilution is possible with equipment by others.

Appendix D – Reference Documents

Mechanical General Arrangement Drawings:

1048367	-200	ProMix M SG 300X2-2.3DA System
1048368	-200	ProMix M SG 600X2-3.8DA System
1048369	-200	ProMix M SG 600X2-6.2DA System
1048370	-200	ProMix M SG 600X2-10.3DA System
1048371	-200	ProMix M SG 1200X2-6.2DA System
1048372	-200	ProMix M SG 1200X2-10.3DA System
1048373	-200	ProMix M SG 1500X2-6.2DA System
1048374	-200	ProMix M SG 1500X2-10.3DA System
1048367	-200	ProMix M SG 300X2-2.3DA System
1048375	-200	ProMix M SG 300X2-5.0PA System
1048376	-200	ProMix M SG 600X2-5.0PA System
1048377	-200	ProMix M SG 600X2-10.0PA System
1048378	-200	ProMix M SG 1200X2-10.0PA System
1048379	-200	ProMix M SG 1200X2-24.0PA System
1048380	-200	ProMix M SG 1500X2-10.0PA System
1048381	-200	ProMix M SG 1500X2-24.0PA System

Electrical Schematic Drawings:

7747282-300	PROMIX-M Gamma XL "A" Control Panel
7747283-300	PROMIX-M Seepex "A" Control Panel

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

Pump Manuals:

GXLA QSG

Gamma XL Pump Quick Start Guide

986691

Gamma XL Pump Operating Manual

Seepex Pump Operating Manual

(Provided upon request)

Documents noted in this section are not in this manual

Appendix E - Keypad Menu Overview

