

**Instruction Manual**  
**DULCOMETER® 2201 X Condi**

**ProMinent®**



ProMinent Dosiertechnik GmbH • D-69123 Heidelberg • Germany

---

ProMinent Dosiertechnik GmbH  
Im Schuhmachergewann 5–11  
D-69123 Heidelberg  
Postfach 10 17 60  
D-69007 Heidelberg  
Telephone: +49 (06221) 842-0  
Fax: +49 (06221) 842-419  
info@prominent.de  
www.prominent.de



We reserve the right to make technical changes.

---

TA-194.300-PME01 290601

Software Version: 2.x

## Safety Precautions

### Be sure to read and observe the following requirements!

The DULCOMETER® 2201 X CondI is approved for operation in hazardous locations.

#### Warning



Before connecting the device to a power supply unit, make sure that this is an associated apparatus.

Whenever it is likely that the protection has been impaired, the device shall be made inoperative and secured against unintended operation.

The protection is likely to be impaired if, for example:

- ☐ the device shows visible damage
- ☐ the device fails to perform the intended measurements
- ☐ after prolonged storage at temperatures above 70 °C
- ☐ after severe transport stresses

Before recommissioning the device, a professional routine test in accordance with EN 61010-1 must be performed. This test should be carried out at our factory.

The device shall not be used in a manner not specified by this manual.

---


# Information on this Instruction Manual

*ITALICS* are used for texts which appear in the display.

**Bold print** is used to represent keys, e.g. **cal**.



Keys for which the functions are explained are frequently shown in the left-hand column.



**Note** Notes provide important information that should be strictly followed when using the device.



**Warning** Warning means that the instructions given must always be followed for your own safety. Failure to follow these instructions may result in injuries.

## Mode Codes

After pressing **cal** or **conf** you can enter one of the following codes to access the designated mode:



- conf**, 0000: Error info
- conf**, 1200: Configuration
- conf**, 5555: Current source



- cal**, 0000: Cal info
- cal**, 1001: Zero point calibration
- cal**, 1015: Temp probe adjustment
- cal**, 1100: Cell factor calibration
- cal**, 1125: Input/adjustment of transfer ratio
- cal**, 2222: Test mode

# Contents

<b>Safety Precautions</b> .....	<b>3</b>	<b>4 Diagnostics, Maintenance and Cleaning</b>	<b>24</b>
<b>Information on this Instruction Manual</b> ...	<b>4</b>	Sensoface®, Sensocheck® .....	24
<b>Mode Codes</b> .....	<b>4</b>	Error Messages .....	24
<b>1 Assembly</b> .....	<b>6</b>	Diagnostics Functions .....	26
Package Contents and Unpacking ....	6	Maintenance and Cleaning .....	27
Assembly .....	6	<b>5 Appendix</b> .....	<b>28</b>
<b>2 Installation, Connection and Commissioning</b> .....	<b>10</b>	Product Line .....	28
Proper Use .....	10	Specifications .....	29
Overview of DULCOMETER® 2201 X Condl .....	10	Type Examination Certificate .....	31
Terminal Assignment .....	11	Declaration of Conformity .....	34
Installation and Commissioning .....	11	Sensors .....	35
Typical Wiring .....	12	Calibration Solutions .....	37
<b>3 Operation</b> .....	<b>13</b>	Concentration Curves .....	38
User Interface .....	13	<b>Index</b> .....	<b>44</b>
Display .....	14		
Keypad .....	14		
Safety Functions .....	15		
Outputs .....	16		
Configuration .....	17		
Calibration .....	19		
Measurement .....	23		

# 1 Assembly

## Package Contents and Unpacking


Unpack the device carefully and check the shipment for transport damage and completeness.  
The package contains:

- Front unit of DULCOMETER® 2201 X Condi
- Lower case
- Short instruction sheet
- This instruction manual

– Bag containing:

- |                      |                  |
|----------------------|------------------|
| ① 2 sealing plugs    | ⑦ 1 hinge pin    |
| ② 5 hexagon nuts     | ⑧ 3 cable ties   |
| ③ 3 cable glands     | ⑨ 3 filler plugs |
| ④ 1 rubber reducer   | ⑩ 3 gaskets      |
| ⑤ 1 sealing insert   | ⑪ 1 washer       |
| ⑥ 4 enclosure screws | ⑫ 1 jumper       |

## Assembly

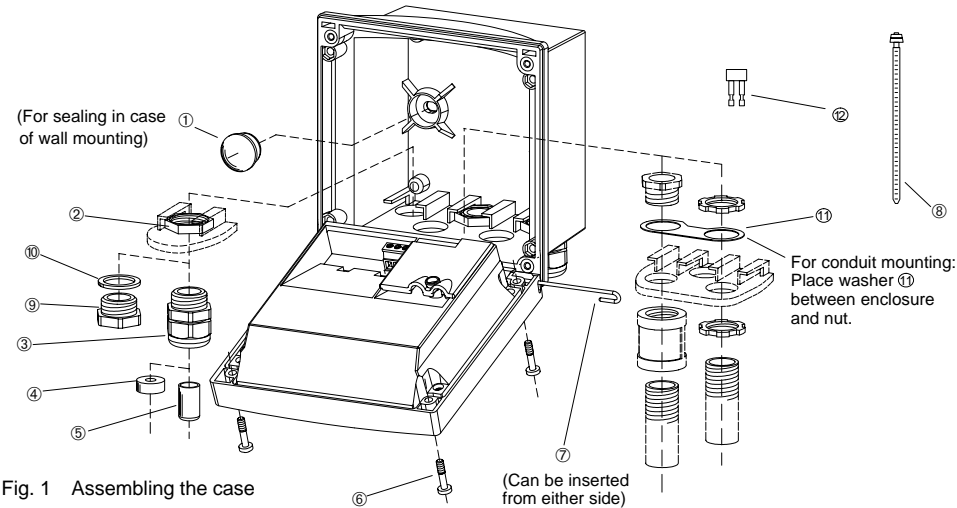

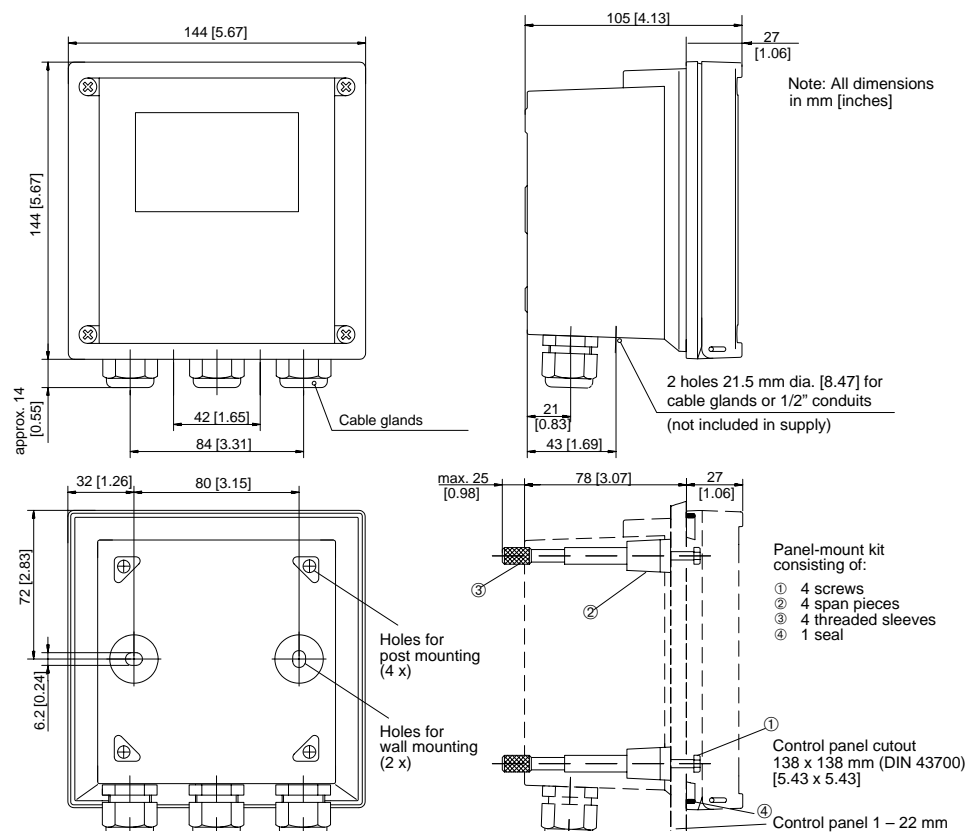


Fig. 2 Dimension drawing for DULCOMETER® 2201 X Cond, mounting diagram and panel-mount kit (Order No. 1008708)

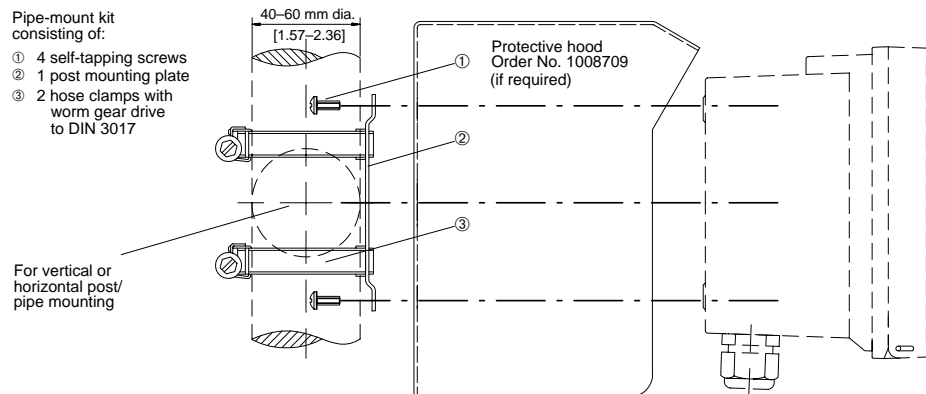


Fig. 3 Pipe-mount kit (Order No. 1008707)

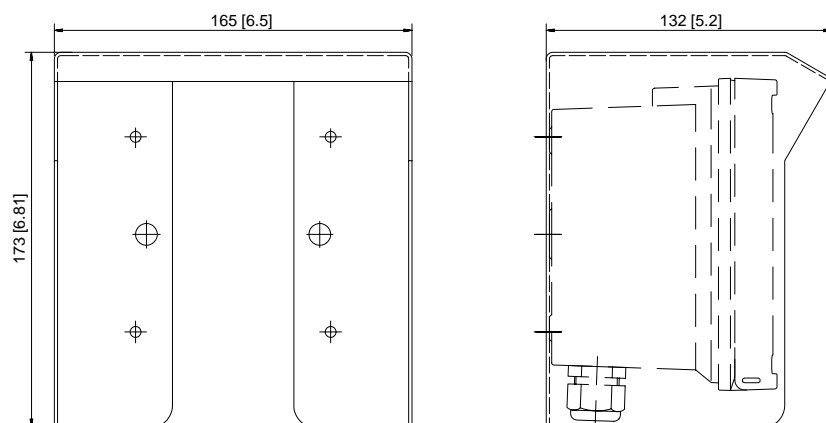


Fig. 4 Protective hood (Order No. 1008709) for wall and pipe mounting




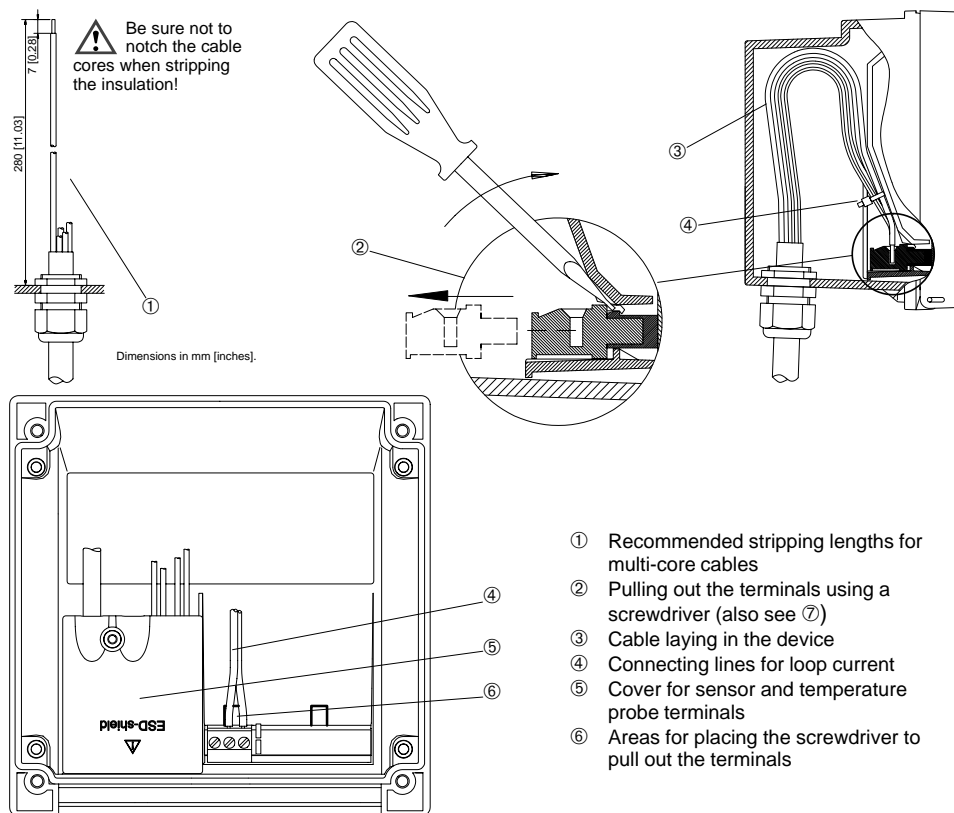


Fig. 5 Installation information DULCOMETER® 2201 X CondI

## 2 Installation, Connection and Commissioning

### Proper Use

DULCOMETER® 2201 X CondI is used for conductivity and temperature measurement in biotechnology, food processing, pharmaceutical, chemical and paper industry, as well as electroplating, water and waste-water treatment. It can either be mounted on site or in a control panel.



DULCOMETER® 2201 X CondI is approved for operation in hazardous locations.

### Overview of DULCOMETER® 2201 X CondI

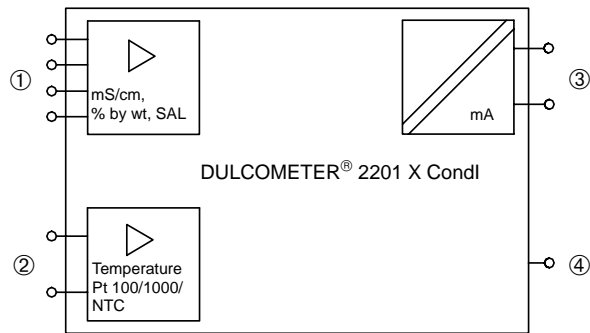


Fig. 6 System functions of DULCOMETER® 2201 X CondI

- ① Inputs for LF 654 X electrodeless conductivity sensor
- ② Input for temperature probe
- ③ Current loop 4 – 20 mA
- ④ Equipotential bonding

Terminal Assignment

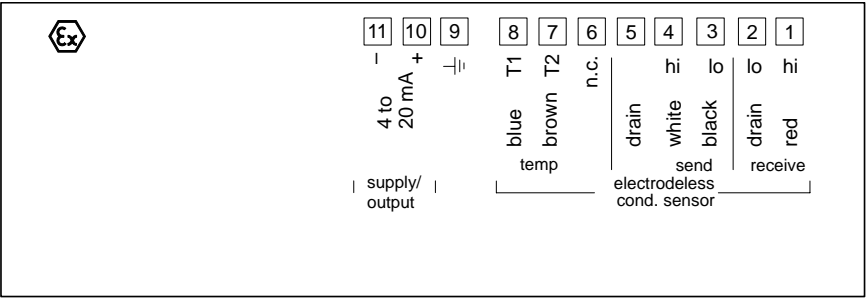






Fig. 7 Terminal assignment of DULCOMETER® 2201 X CondI


Installation and Commissioning

**Warning**  *Installation and commissioning of the DULCOMETER® 2201 X CondI may only be carried out in accordance with this instruction manual and per applicable local and national codes. Be sure to observe the technical specifications and input ratings.*

**Warning**  Do not use alternating current or mains power supply!

**Warning**  DULCOMETER® 2201 X CondI may only be connected to an explosion-proof power supply unit (for input ratings refer to schedule of Type Examination Certificate).


**Warning**  When commissioning, a complete configuration must be carried out.

 For easier installation, the terminal strips are of a plug-in design. The terminals are suitable for single wires and flexible leads up to 2.5 mm<sup>2</sup> (AWG 14) (see Pg. 9).  
A connection example is shown on Pg. 12.

Typical Wiring

Conductivity measurement with LF 654 X electrodeless conductivity sensor

The LF 654 X electrodeless conductivity sensor is used to measure low to highest conductivity values. It can be used for measurements in hazardous or safe areas.

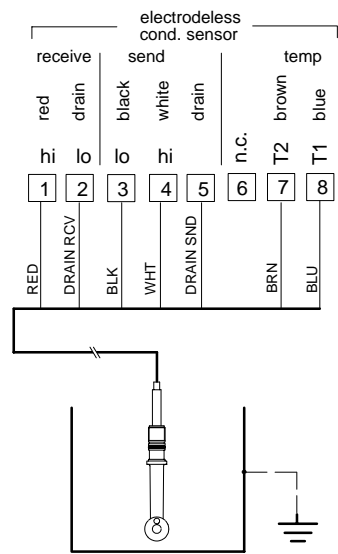

Settings for LF 654 X electrodeless sensor

	Menu		Setting
Temp probe	conf	1200	NTC 100
Cell factor	cal	1100	2.15

Fig. 8 Conductivity measurement with LF 654 X electrodeless conductivity sensor

### 3 Operation

#### User Interface

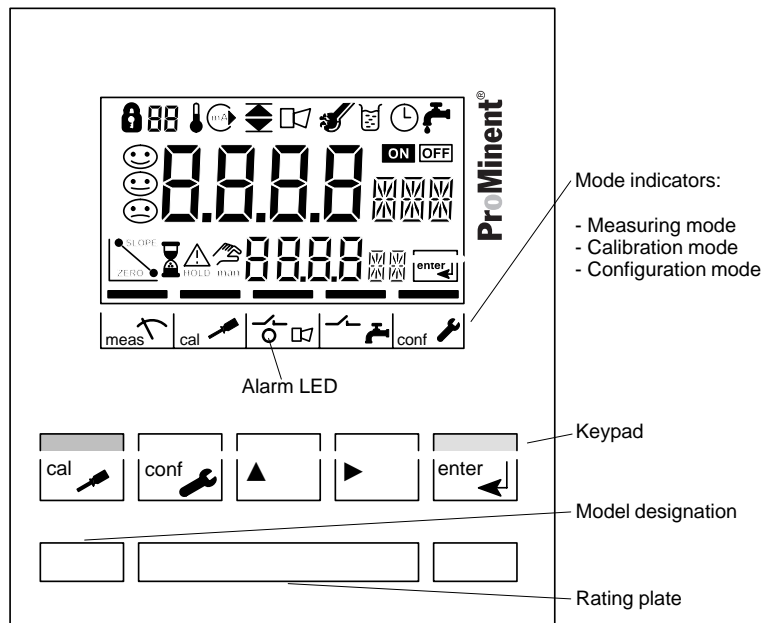


Fig. 9 Front view of DULCOMETER® 2201 X CondI

Display

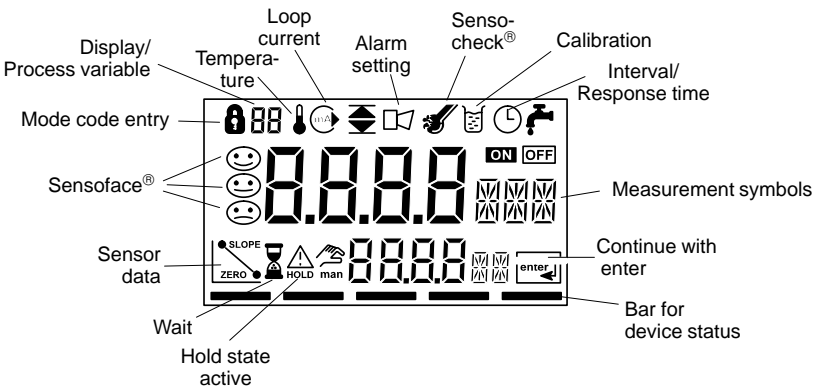


Fig. 10 Display of DULCOMETER® 2201 X CondI

Keypad

	Start, end calibration		<u>Prompt in display:</u> continue in program sequence, <u>Configuration:</u> Confirm entries, next configuration step, <u>Measuring mode:</u> Display loop cur- rent
	Start, end configuration		
	Select digit position (selected position flashes)	→	Cal info, display cell factor and zero point (see Pg. 23)
	Change digit	→	Error info, display last output error message (see Pg. 23)
		+	Start GainCheck® manual device self-test (see Pg. 15)

## Safety Functions

### Sensoface® sensor monitoring



**Sensoface®** provides information on the sensor condition. A sad “Smiley” indicates that there is a Sensocheck® message.



**Sensocheck®** signals a short circuit of the primary coil and its lines as well as an interruption at the secondary coil and its lines. Sensocheck® can be switched off. With Sensocheck® switched off, no friendly Smiley appears.

For more detailed information, see chapter “Diagnostic, Maintenance and Cleaning” (Pg. 24).

### GainCheck® manual device self-test



+



Simultaneously pressing ▲ and ► starts the manual device self-test.

A display test is carried out, the software version is displayed and the memory and measured value transmission are checked.

### Automatic device self-test

The automatic device self-test checks the memory and the measured-value transmission. It runs automatically in the background at fixed intervals.

---

## Outputs

### Current loop (4 to 20 mA)

The current is controlled by the process variable selected in the configuration.

The current characteristic can be configured as linear or logarithmic curve for conductivity and resistivity.

The current beginning and end can be set to represent any desired value.

If LIN (linear characteristic) is chosen, the minimum span is 5% of the selected process variable / measurement range. If LOG (logarithmic characteristic) is chosen, the minimum span is one decade within the chosen range.

To check connected peripherals (e.g. limit switches, controllers), the loop current can be manually specified (see Pg. 26).

### Alarm

During an error message the alarm LED flashes.  
Alarm response time is permanently set to 10 sec.

Error messages can also be signaled with a 22 mA signal via the loop current (see Configuration, Pg. 18).



## Configuration

The device arrives from the factory configured and ready to operate as a conductivity transmitter. This section provides detailed procedures for changing operation values for specific applications.



Activate with **conf**  
change parameter with ▲ and ►,  
confirm/continue with **enter**,  
end with **conf**.



Mode code "1200"



During configuration the device is in the Hold state, the loop current is frozen.













### Note



The configuration parameters are checked during the input. In the case of an incorrect input "ERR" is displayed for 3 sec. The parameters cannot be stored with **enter** until the input has been repeated.

### Configuration parameters

Picto-graph	Parameter	Choices	Factory setting
	Process variable / meas. range Selected process variable and measuring range control loop current, limit values and display. Complete configuration required after change.	00.00 mS / 000.0 mS / 0000 mS 000.0 % 000.0 SAL	<b>000.0 mS</b>
	Concentration (only with %)	-01- NaCl (0 – 28 % by wt) -02- HCl (0 – 17 % by wt) -03- NaOH (0 – 22 % by wt) -04- H <sub>2</sub> SO <sub>4</sub> (0 – 35 % by wt) -05- HNO <sub>3</sub> (0 – 28 % by wt) -06- H <sub>2</sub> SO <sub>4</sub> (95 – 99 % by wt)	<b>-01-</b>
	Temperature display	°C °F	<b>°C</b>

	Temperature probe	Pt 100 / Pt 1000 / NTC 30 kΩ / NTC 100 kΩ	<b>Pt 100</b>
 tc	Temperature compensation (not with % and SAL)	OFF LIN NLF (natural waters)	<b>OFF</b>
 tc	Temperature coefficient (only with tc LIN)	xx.xx %/K	<b>02.00 %/K</b>
 Out	Current characteristic (not with % and SAL)	LIN LOG	<b>LIN</b>
 4 mA	Current beginning (4 mA) (only with LIN)	mS / % / SAL	<b>000.0 mS</b>
 20 mA	Current end (20 mA) (only with LIN)	mS / % / SAL	<b>100.0 mS</b>
 4 mA	Current beginning (4 mA) (only with LOG)	mS *	<b>0.1 mS</b>
 20 mA	Current end (20 mA) (only with LOG)	mS *	<b>100 mS</b>
 Hold	Hold state	Last: Last current value Fix: Current specified	<b>Last</b>
 Fix	Hold value (only with Fix)	xx.xx mA	<b>21.00 mA</b>
 22 mA	22 mA signal for error message	ON / OFF	<b>OFF</b>
 CHECK	Sensocheck®	ON / OFF	<b>OFF</b>

\* 0.1 / 1 / 10 / 100 / 1000 mS

Configuration is cyclical. To stop, press **conf**.

## Calibration

In the calibration mode the cell factor can be modified in two ways. If the cell factor of the sensor in use is known under consideration of the installation conditions, it can be entered directly. Furthermore, the cell factor can be determined with a known calibration solution under consideration of the temperature.

### Warning



When using other Foxboro sensors, the transfer ratio of the sensor must be entered before starting calibration (see Pg. 21)



Activate with **cal**, confirm/continue with **enter**, abort with **cal → enter**



During calibration the device is in the Hold state. The loop current is frozen.


When the calibration mode is exited, the device remains in the Hold state for safety reasons. This prevents undesirable reactions of the connected peripherals (e.g. limit switches, controllers) due to incorrect settings. The measured value and *Hold* are displayed alternately. Now you can check whether the measured value is plausible and specifically end the Hold state with **enter** or repeat calibration with **cal**. When you end the Hold state, the device will return to measuring mode after 20 sec (measured value stabilization).

### Calibration by input of cell factor



Activate calibration by pressing the **cal** key.

Using the ▲, ► keys enter mode code "1100" and then press **enter**.

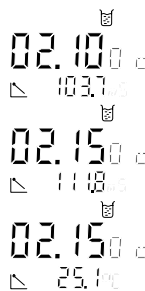

Using the ▲, ► keys enter the cell factor. The lower display shows the conductivity value.

A change in the cell factor also changes the conductivity value.

When there has not been an entry for approx. 6 sec, conductivity and temperature are displayed alternately.




Press **enter** to confirm the cell factor.



The device remains in the Hold state. You can end the Hold state with **enter**. After 20 sec (measured value stabilization) the device returns to measuring mode.

Calibration with calibration solution

Note 

Be sure to use known calibration solutions and the respective temperature-corrected table values (see Calibration Solutions, Pg. 37).



Activate calibration by pressing the **cal** key. Using the ▲, ► keys enter mode code "1100" and then press **enter**.



Immerse the sensor in the calibration solution.



After approx. 6 sec the lower display alternately shows the conductivity and temperature values. Read the conductivity value corresponding to the displayed temperature from the table of the used calibration solution (for tables see Pg. 37).



Using the ▲, ► keys change the cell factor until the display shows the conductivity value from the table.



Make sure that the temperature is stable during the calibration procedure.











Press **enter** to confirm the cell factor.









The device remains in the Hold state. You can end the Hold state with **enter**. After 20 sec (measured value stabilization) the device returns to measuring mode.

## Zero point calibration in air

- Note**  Zero point calibration is only required when very low conductivity values are to be measured.
- Note**  Before you start calibration, remove the sensor from the process, clean it and dry it up.
-  Activate calibration by pressing the **cal** key.
-  Using the **▲**, **▶** keys enter mode code "1001" and then press **enter**.
-  Using the **▲**, **▶** keys modify the zero point until the lower display reads 0  $\mu$ S. If required, change the sign of the zero point!
-  When there has not been an entry for approx. 6 sec, the lower display alternately shows the zero-corrected conductivity value and the temperature value.
-  Press **enter** to confirm the zero point.
-  The device remains in the Hold state. You can end the Hold state with **enter**. After 20 sec (measured value stabilization) the device returns to measuring mode.

## Input and adjustment of transfer ratio

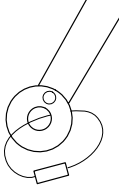- Note**  This function should only be used by experts. Incorrectly set parameters may go unnoticed, but change the measuring properties.
- The device comes with a preset transfer ratio of 48.36 for the Model LF 654 X sensor. Should you use another sensor, you must enter another transfer ratio or determine it using a comparison resistor. After that, you can calibrate the sensor (see Pg. 19).
- Note**  Resistance measurement in test mode can only show the correct value of the test resistor when the transfer ratio has been correctly determined.
-  Activate calibration by pressing the **cal** key.
-  Using the **▲**, **▶** keys enter mode code "1125" and then press **enter**.
-  Using the **▲**, **▶** keys enter the transfer ratio of the sensor in the main display.
-  If you do not know the transfer ratio, it can be determined using a comparison resistor (recommended resistance value: 100  $\Omega$ ). The transfer ratio must be adjusted until the corresponding resistance value is shown in the lower display.



Press **enter** to confirm the transfer ratio.

#### Adjustment of temperature probe

##### Note



This function should only be used by experts. Incorrectly set parameters may go unnoticed, but change the measuring properties. Especially for Pt 100 temperature probe, it is advisable to perform an adjustment.



Activate calibration by pressing the **cal** key.

Using the ▲, ► keys enter mode code "1015" and then press **enter**.



Measure the temperature of the process medium using an external thermometer.



Using the ▲, ► keys enter the determined temperature value in the main display. If you take over the temperature value shown in the lower display, the correction is without effect.



Press **enter** to confirm the temperature value.



The device remains in the Hold state. You can end the Hold state with **enter**. After 20 sec (measured value stabilization) the device returns to measuring mode.

## Measurement

### Measuring mode

In the measuring mode the main display shows the configured process variable and the lower display the temperature.

### Cal info

With **cal** and mode code "0000" you can activate the cal info. Cal info shows the current calibration data for approx. 20 sec. The 20 sec can be reduced by pressing **enter**. During cal info the device is not in Hold state.

### Error info

With **conf** and mode code "0000" you can activate the error info. Error info shows the most recent error message for approx. 20 sec. After that the message will be deleted. The 20 sec can be reduced by pressing **enter**. During error info the device is not in Hold state.

### Hold state

The device will enter the Hold state under the following conditions:



For calibration: Mode code 1001  
Mode code 1015  
Mode code 1100  
Mode code 1125  
Mode code 2222

configuration: Mode code 1200  
Mode code 5555

The loop current is frozen at *Last* or *Fix* (configuration Pg. 18).

If the calibration or configuration mode is exited, the device remains in the Hold state for safety reasons. This prevents undesirable reactions of the connected peripherals (e.g. limit switches, controllers) due to incorrect settings. The measured value and *Hold* are displayed alternately. Now you can check whether the measured value is plausible and specifically end the Hold state with **enter**. After 20 sec (for the measured value stabilization) the device returns to measuring mode.

### Note



During error conditions the Hold state will not be active.

## 4 Diagnostics, Maintenance and Cleaning

### Sensoface®, Sensocheck®



**Sensoface®** provides information on the sensor condition. A sad “Smiley” indicates that there is a Sensocheck® message.

**Sensocheck®** signals a short circuit of the primary coil and its lines as well as an interruption at the secondary coil and its lines. Sensocheck® can be switched off. With Sensocheck® switched off, no friendly Smiley appears.

### Error Messages

When one of the following error messages is output, the device can no longer correctly determine the process variable or output it via the loop current.

During an error message the alarm LED flashes. The alarm response time is permanently set to 10 sec.

Error messages can also be signaled with a 22 mA signal via the loop current (see Configuration, Pg. 18).





#### Error info



With **conf** and mode code “0000” you can activate the error info. Error info shows the most recent error message for approx. 20 sec. After that the message will be deleted. The 20 sec can be reduced by pressing **enter**. During error info the device is not in Hold state.

Error number	Display (flashing)	Problem	Possible causes
Err 01	1179 mV	Sensor	- Wrong cell factor - Measurement range exceeded - SAL > 45 ‰ - Sensor connection or cable defective
Err 02		Sensor	- Unsuitable sensor
Err 03	Thermometer icon	Temperature probe	- Outside temp range - Outside temp range for TC - Outside temp range for SAL - Outside temp range for concentration
Err 21	mA icon	Loop current	- Meas. value below configured current beginning - Wrong configuration for current beginning (see Pg. 18)



Error number	Display (flashing)	Problem	Possible causes
Err 22		Loop current	- Meas. value above configured current end - Wrong configuration for current end (see Pg. 18)
Err 23		Loop current	- Configured current span too small (Difference between current beginning and end)
Err 33		Sensocheck®	- Short circuit in primary coil - Short circuit of cable
Err 34		Sensocheck®	- Open circuit in secondary coil - Cable interrupted
Err 98	Conf	System error	- Configuration or calibration data defective; completely reconfigure and recalibrate the device - Measured value transmission defective - Memory error in device program (PROM defective)
Err 99	FAIL	Factory settings	- EEPROM or RAM defective - Error in factory settings  This error message normally should not occur, as the data are protected from loss by multiple safety functions. Should this error message nevertheless occur, there is no remedy. The device must be repaired and recalibrated at the factory.

---


## Diagnostics Functions

### Cal info

Pressing **cal** and entering mode code “0000” is going to activate the cal info. Cal info shows the current calibration data for approx. 20 sec. During cal info the device is not in Hold state.

### Test mode

Pressing **cal** and entering mode code “2222” is going to activate the test mode. In the test mode you can check the measuring equipment with a resistor. Sensoface® is disabled.

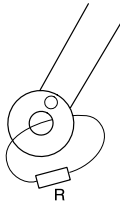

To do so, a comparison resistor is looped through the sensor. The comparison resistance value is indicated in the main display in kΩ. When the resistance value exceeds 2 kΩ, the display shows “— — —”.

R: e.g. 100 Ω

Pressing **enter** ends the test mode. The device goes to Hold state.

### Error info

Pressing **conf** and entering mode code “0000” is going to activate the error info. Error info shows the most recent error message for approx. 20 sec. After that the message will be deleted. During error info the device is not in Hold state.

### Display loop current

Pressing **enter** in measuring mode displays the loop current for a few seconds.

### Current source

To check the connected peripherals (e.g. limit switches, controllers), the loop current can be manually specified.

### Warning



In the current source mode the loop current no longer follows the measured value! It is manually specified. Therefore, it must be ensured that the connected devices (control room, controllers, indicators) do not interpret the current value as a measured value!

Pressing **conf** and entering mode code “5555” is going to activate the current source mode. Specify the loop current using ►, ▲ and **enter**. The actually flowing loop current is shown in the lower display. Pressing **conf** exits the current source mode again.

### GainCheck® manual device self-test

The manual device self-test is started by simultaneously pressing ▲ and ►.

A display test is carried out, the software version is displayed and the memory and measured-value transmission are checked.

**Automatic self-test**

The automatic self-test checks the memory and the measured-value transmission. It runs automatically in the background at fixed intervals.

**Maintenance and Cleaning****Maintenance**

The DULCOMETER® 2201 X CondI contains no user repairable components.

**Cleaning**

To remove dust, dirt and spots, the external surfaces of the device may be wiped with a damp, lint-free cloth. A mild household cleaner may also be used if necessary.

---

# 5 Appendix

## Product Line

Device	Ref. No.
DULCOMETER® 2201 X Condl for application in hazardous areas	1008705

## Mounting Accessories

	Ref. No.
Pipe-mount kit	1008707
Panel-mount kit	1008708
Protective hood	1008709

## Suggested Power Supplies

	Ref. No.
Repeater power supply	
90 - 253 Vac	1008721
24 Vac/dc	1008722

## Specifications

<b>Condl input</b>	Input for LF 654 X electrodeless conductivity sensor	<b>Temperature compensation<sup>1)</sup></b>	LIN NLF	00.00 to 19.99 %/K Natural waters to EN 27888 (0 to 36 °C)
Process variable/range <sup>1)</sup>	00.00 to 99.99 mS/cm 000.0 to 999.9 mS/cm 0000 to 1999 mS/cm	(Ref. temp 25 °C)		
Concentration	0.0 to 100.0 % by wt.	<b>Concentration determination</b>	-01- NaCl -02- HCl -03- NaOH -04- H <sub>2</sub> SO <sub>4</sub> -05- HNO <sub>3</sub> -06- H <sub>2</sub> SO <sub>4</sub>	0-26.3 % by wt (0 °C) ... 0-28.1 % by wt (100 °C) ... 0-17 % by wt (-20 °C) ... 0-17 % by wt (50 °C) ... 0-12 % by wt (0 °C) ... 0-22 % by wt (100 °C) ... 0-25 % by wt (-17 °C) ... 0-35 % by wt (110 °C) ... 0-28 % by wt (-20 °C) ... 0-28 % by wt (50 °C) ... 95-99 % by wt (-10 °C) ... 95-99 % by wt (110 °C) ...
Salinity	0.0 to 45.0 ‰ (0 to 35 °C)			
Accuracy <sup>2)</sup>	< 1 % of meas. value ± 0.02 mS/cm	<b>Display</b>	LC display, alarm LED	
<b>Sensor monitoring</b>	Sensocheck®: monitoring of primary and lines for short circuit and monitoring of secondary for open circuit (can be switched off)	<b>Loop current</b>	4 to 20 mA, floating	
<b>Sensor standardization<sup>3)</sup></b>	<ul style="list-style-type: none"> <li>Entry of cell factor with display of conductivity and temperature</li> <li>Zero point adjustment</li> <li>Temperature probe adjustment</li> <li>Input of transfer ratio</li> </ul>	EEx ib IIC	22 mA for error message*) supply voltage 14 to 30 V, I <sub>max</sub> = 100 mA, P <sub>max</sub> = 0.8 W	
Permissible cell factor	00.100 to 19.999	Characteristic <sup>1)</sup>	Linear or logarithmic	
Permissible transfer ratio	01.00 to 99.99	Current error	< 0.3 % of current value ± 0.05 mA	
Permissible offset	± 0.5 mS/cm	<b>Start/End of scale<sup>1)</sup></b>	As desired within ranges for mS, %, SAL	
<b>Temperature input</b>	Pt 100 / Pt 1000 / NTC 30 kΩ / NTC 100 kΩ	Min. span	LIN LOG	5 % of selected range 1 decade
Ranges	<ul style="list-style-type: none"> <li>NTC -20.0 to +130.0 °C -4 to +266 °F</li> <li>Pt -20.0 to +200.0 °C -4 to 392 °F</li> </ul>	Current source	3.8 mA to 22.00 mA	
Resolution	0.1 °C / 1 °F	<b>Explosion protection</b>	II 2(1) G EEx ib [ia] IIC T6 CE 0032 TÜV 01 ATEX 1690	
Accuracy	< 0.5 K <sup>3)</sup>			

---

<b>Data retention</b>	> 10 years (EEPROM)
<b>EMC</b>	Emitted interference: EN 61 326 Class B Immunity to interference: EN 61 326, EN 61 326/A1
<b>Temperature</b>	Operating/environmental temp -20 to +55 °C Transport and storage temp -20 to +70 °C
<b>Enclosure</b>	Material: thermoplastic polyester, re-inforced (polybutylene terephthalate) Protection: IP 65 Color: bluish gray RAL 7031
Cable glands	3 breakthroughs for included cable glands 2 breakthroughs for cable glands, NPT 1/2 " or Rigid Metallic Conduit
Dimensions	See Dimension drawings, Pg. 7 ff
<b>Weight</b>	approx. 1 kg

\*) user defined  
1) displayed with 3 1/2 digits  
2) ± 1 count  
3) with Pt 100 < 1 K, with NTC > 100 °C < 1 K

## EC-Type-Examination Certificate



**Translation**

**EC-TYPE EXAMINATION CERTIFICATE**

(1)

(2) Equipment or Protective System intended for use in potentially explosive atmospheres - **Directive 94/9/EC**

(3) EC-Type Examination Certificate Number



**TÜV 01 ATEX 1690**

(4) Equipment or Protective System: Transmitter type 22\*1 X Condi

(5) Manufacturer: ProMinent Dosiertechnik GmbH

(6) Address: D-69123 Heidelberg, Im Schuhmachergewann 5-11

(7) This equipment or protective system and any acceptable variation thereto is specified in the schedule to this certificate and the documents therein referred to.

(8) The TÜV Hannover/Sachsen-Anhalt e.V., TÜV Certification Body N° 0032 in accordance with Article 9 of the Council Directive 94/9/EC of March 23, 1994, certifies that this equipment or protective system has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of equipment and protective systems intended for use in potentially explosive atmospheres given in Annex II to the Directive.

The examination and test results are recorded in confidential report N° 01 PX 07010.

(9) Compliance with the Essential Health and Safety Requirements has been assured by compliance with:

**EN 50 014:1997                      EN 50 020:1994**

(10) If the sign "X" is placed after the certification number, it indicates that the equipment or protective system is subject to special conditions for safe use specified in the schedule to this certificate.

(11) This EC-TYPE EXAMINATION CERTIFICATE relates only to the design and construction of the specified equipment or protective system. If applicable, further requirements of this Directive apply to the manufacture and supply of this equipment or protective system.

(12) The marking of the equipment or protective system shall include the following:



Head of the Certification Body



**II 2 (1) G EEx Ib [Ic] IIC T6**

Hannover, 2001-03-14

TÜV Hannover/Sachsen-Anhalt e.V.  
TÜV CERT-Zertifizierungsgesellschaft  
Am TÜV 1  
D-30619 Hannover

This certificate may only be reproduced without any change, schedule included.  
Excerpts or changes shall be allowed by the TÜV Hannover/Sachsen-Anhalt e.V.

page 1/3



(14) **EC-TYPE EXAMINATION CERTIFICATE N° TÜV 01 ATEX 1690**

- (15) Description of equipment or protective system

The transmitter type 22\*1 X Cond is used for the recognition and processing of electrochemical quantities.

The maximum permissible ambient temperature is 55°C.

### Electrical data

Current loop ..... in type of protection "Intrinsic Safety" EEx Ib IIC  
(terminals 10, 11) only for the connection to a certified intrinsically safe circuit  
with the following maximum values:

with the following

$U_i$	=	30	V
$I_i$	=	100	mA
$P_i$	=	0,8	W

effective internal capacitance  $C_i = 20 \text{ nF}$   
effective internal inductance  $L_i = 0,2 \text{ mH}$

Conductivity measuring loop .....	in type of protection "Intrinsic Safety"	EEx ia IIC
(terminals 1, 2, 3, 4, 5)	Maximum values:	resp. EEx ib IIC

Maximum values: resp. EEx ib IIC  
 $U_0 = 7,5 \text{ V}$   
 $I_0 = 63 \text{ mA}$   
 $P_0 = 80 \text{ mW}$   
 $R_l = 80 \text{ } \Omega$

Characteristic: linear  
effective internal capacitance  $C_1 = 3 \text{ nF}$   
The effective internal inductance is negligibly small.

max. permissible external capacitance  $C_0 = 11,1 \mu F$   
max. permissible external inductance  $L_0 = 9 \text{ mH}$

or for the connection to the electrodeless conductivity sensor  
type SE654 X resp. type 871EC-SPO  
Maximum cable length: 30 m

Temperature measuring loop....in type of protection "Intrinsic Safety" EEx ia IIC  
(terminals 7, 8) Maximum values:

Maximum values:

$U_0 =$	5 V
$I_0 =$	3,5 mA
$P_0 =$	5 mW
$R_L =$	1590 $\Omega$

Characteristic: linear  
effective internal capacitance  $C_1 = 250 \text{ nF}$   
The effective internal inductance is negligibly small.



04.09

page 3/3

## Certificate of Conformity 34

We.

hereby declare that, on the basis of its functional concept and design and in the version brought into circulation by us, the product specified in the following complies with the relevant, fundamental safety and health stipulations laid down by EC directives.

Any modification to the product not approved by us will invalidate this declaration.

Product description : *Dulcometer transducer*

Product type : **2201 X Cond, 2201 X Condi**

Serial number : *see type identification plate on device*

Relevant EC regulations : *EC - EMC - regulation (89/336/EEC subsequently 92/31 EEC)*  
*EC directive for devices in hazardous areas 94/9/EC*

Harmonised standards used,  
in particular : **DIN EN 61326, DIN EN 50014, DIN EN 50020**

National standards and other technical specifications used, in particular :

Date/manufacturer's signature :

Chaim Lurie

June 12, 2001

The undersigned : *Dr. Rainer V. Dulger, Executive Vice President R&D and Production*

ATE\_Doku, EG-Konf\_Erklärung

KE 2201 X Cond e 01-06-12.xls

12.06.01 10:29

## Sensors

### LF 654 X

The LF 654 X electrodeless conductivity sensor is suitable for general measurements as well as for measurements in aggressive media.

The sensor material (PEEK) displays excellent chemical resistance to most aqueous solutions of acids, bases and salts. It is also excellent for organic solvents such as toluene, ethyl acetate, acetone, gasoline and carbon tetrachloride.

It is not recommended for sulfuric or nitric acid solutions above 70 %, nor is it recommended for Oleum applications.

The LF 654 X electrodeless conductivity sensor can be used in hazardous or safe areas.

#### Model LF 654 X (electrodeless sensor) by Foxboro

Cell factor <sup>1)</sup>	2.15	
Transfer ratio <sup>2)</sup>	48.36	
Measurement range	0 to 1,999 mS/cm	
Resolution	0.01 mS/cm	
Material	Sensor	PEEK, glass-filled
	O-rings	EPR
Process temp	-5 to +120 °C	
Process pressure <sup>3)</sup>	0 to 17.5 bar	
Temp probe	NTC 100 kΩ	
Explosion protection	Model 87 IEC-SPO KEMA No. Ex-96.D.0839 X EEX ia IIC T4 ... T6	
Installation	3/4" NPT thread	
Cable	Length	6 m
	Connection	wire end ferrules
Weight	Approx. 150 g	
Dimensions	See dimension drawing Fig. 11	

1) This value may differ for each individual sensor and depends on the installation conditions. The exact value must be determined with a calibration.

2) This typical value may differ for each individual sensor. The exact value must be determined with a calibration.

3) The combination of high pressure, high temperature and/or aggressive process medium reduces the sensor life span.

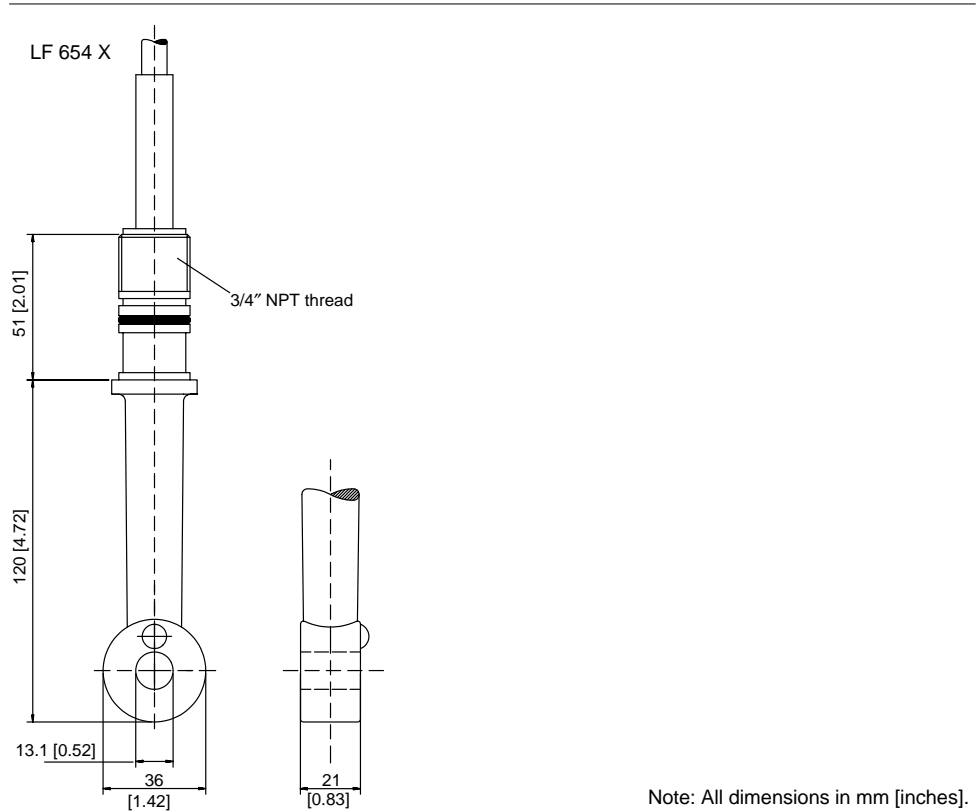


Fig. 11 Dimension drawing of Model LF 654 X electrodeless conductivity sensor

## Calibration Solutions

Potassium Chloride Solutions				Sodium Chloride Solutions			
Electrical Conductivity in mS/cm				Electrical Conductivity in mS/cm			
Temperature	Concentration			Temperature	Concentration		
[°C]	0.01 mol/l	0.1 mol/l	1 mol/l	[°C]	saturated*	0.1 mol/l**	0.01 mol/l**
0	0.776	7.15	65.41	0	134.5	5.786	0.631
5	0.896	8.22	74.14	1	138.6	5.965	0.651
10	1.020	9.33	83.19	2	142.7	6.145	0.671
15	1.147	10.48	92.52	3	146.9	6.327	0.692
16	1.173	10.72	94.41	4	151.2	6.510	0.712
17	1.199	10.95	96.31	5	155.5	6.695	0.733
18	1.225	11.19	98.22	6	159.9	6.881	0.754
19	1.251	11.43	100.14	7	164.3	7.068	0.775
20	1.278	11.67	102.07	8	168.8	7.257	0.796
21	1.305	11.91	104.00	9	173.4	7.447	0.818
22	1.332	12.15	105.94	10	177.9	7.638	0.839
23	1.359	12.39	107.89	11	182.6	7.831	0.861
24	1.386	12.64	109.84	12	187.2	8.025	0.883
25	1.413	12.88	111.80	13	191.9	8.221	0.905
26	1.441	13.13	113.77	14	196.7	8.418	0.927
27	1.468	13.37	115.74	15	201.5	8.617	0.950
28	1.496	13.62		16	206.3	8.816	0.972
29	1.524	13.87		17	211.2	9.018	0.995
30	1.552	14.12		18	216.1	9.221	1.018
31	1.581	14.37		19	221.0	9.425	1.041
32	1.609	14.62		20	226.0	9.631	1.064
33	1.638	14.88		21	231.0	9.838	1.087
34	1.667	15.13		22	236.1	10.047	1.111
35	1.696	15.39		23	241.1	10.258	1.135
36		15.64		24	246.2	10.469	1.159
				25	251.3	10.683	1.183
				26	256.5	10.898	1.207
				27	261.6	11.114	1.232
				28	266.9	11.332	1.256
				29	272.1	11.552	1.281
				30	277.4	11.773	1.306
				31	282.7	11.995	1.331
				32	288.0	12.220	1.357
				33	293.3	12.445	1.382
				34	298.7	12.673	1.408
				35	304.1	12.902	1.434
				36	309.5	13.132	1.460

Data source: K. H. Hellwege (Editor), H. Landolt, R. Börnstein: Zahlenwerte und Funktionen .... Volume 2, Part. Volume 6

Data source: \* K. H. Hellwege (Editor), H. Landolt, R. Börnstein: Zahlenwerte und Funktionen .... Volume 2, Part. Volume 6

\*\* Test solutions calculated according to IEC 746-3

Concentration Curves

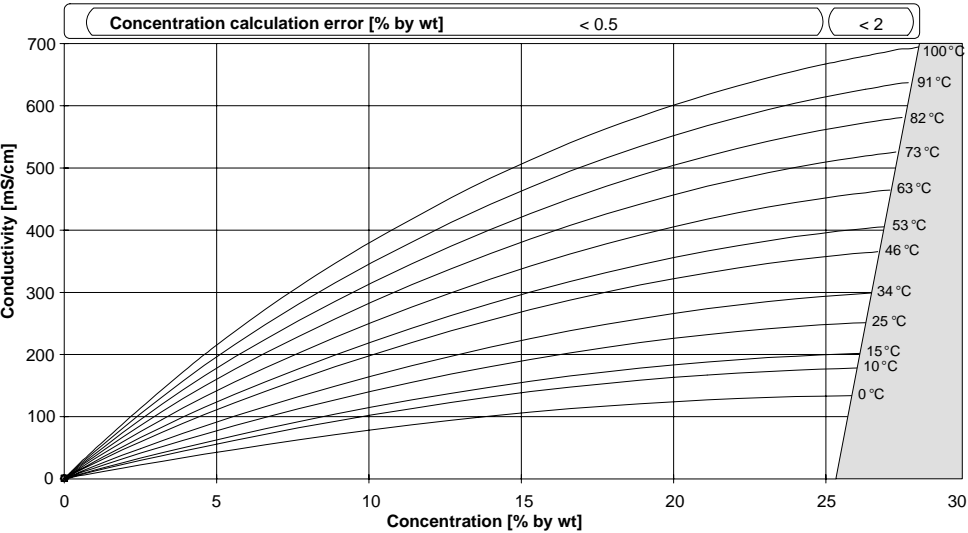


Fig. 12 Concentration curves NaCl (configuration: concentration -01-)

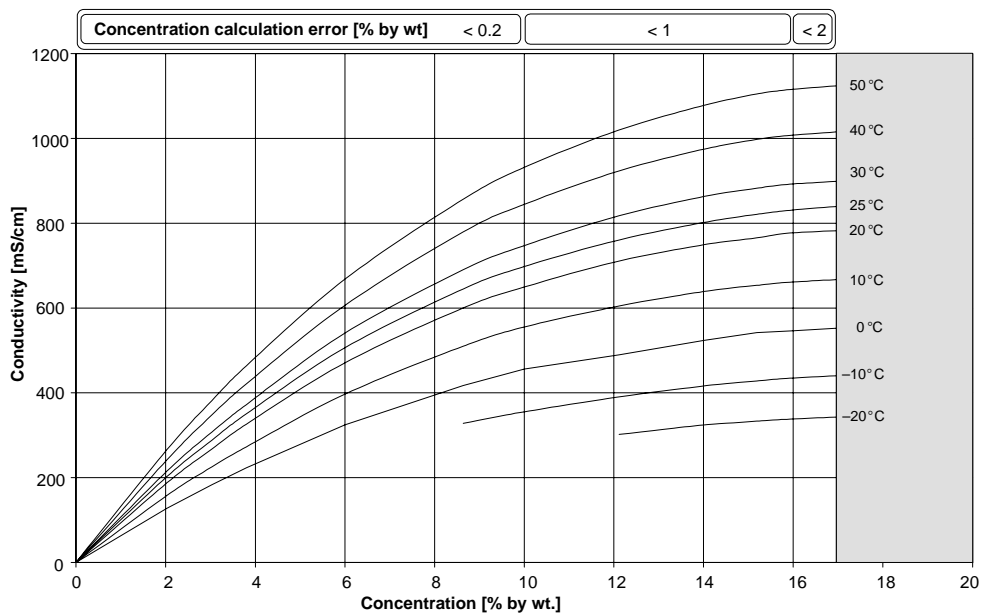


Fig. 13 Concentration curves HCl (configuration: concentration -02-)

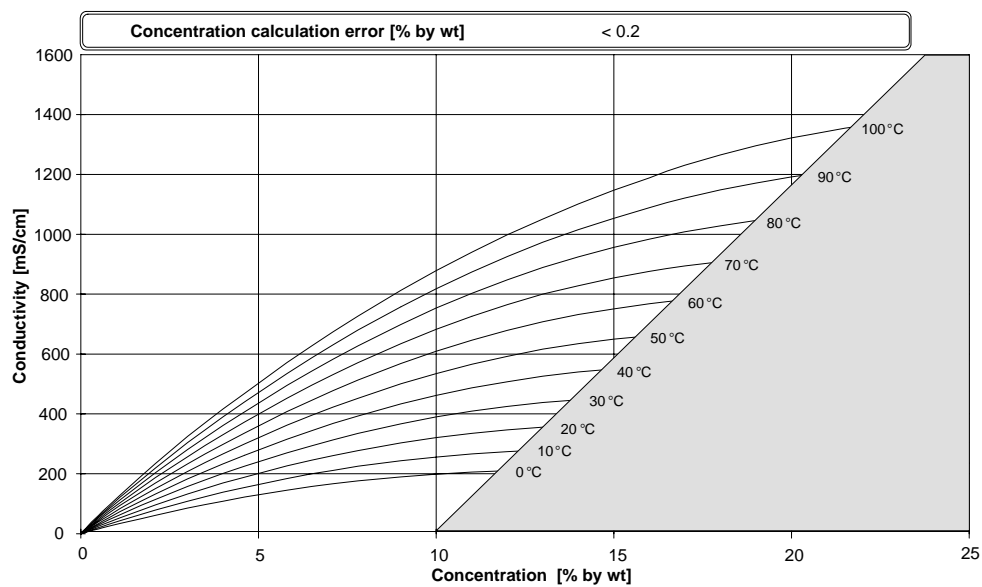


Fig. 14 Concentration curves NaOH (configuration: concentration -03-)



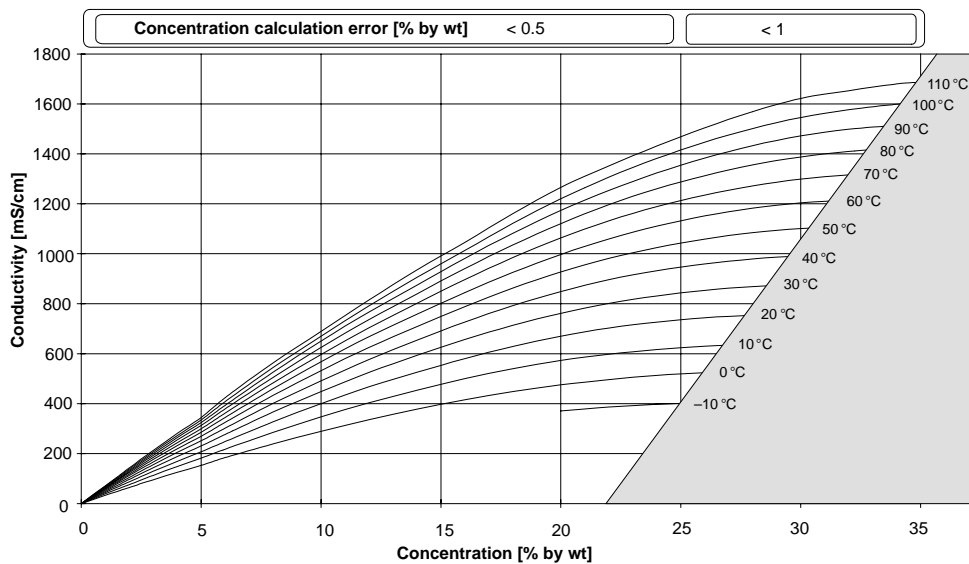


Fig. 15 Concentration curves  $\text{H}_2\text{SO}_4$  (configuration: concentration -04-)

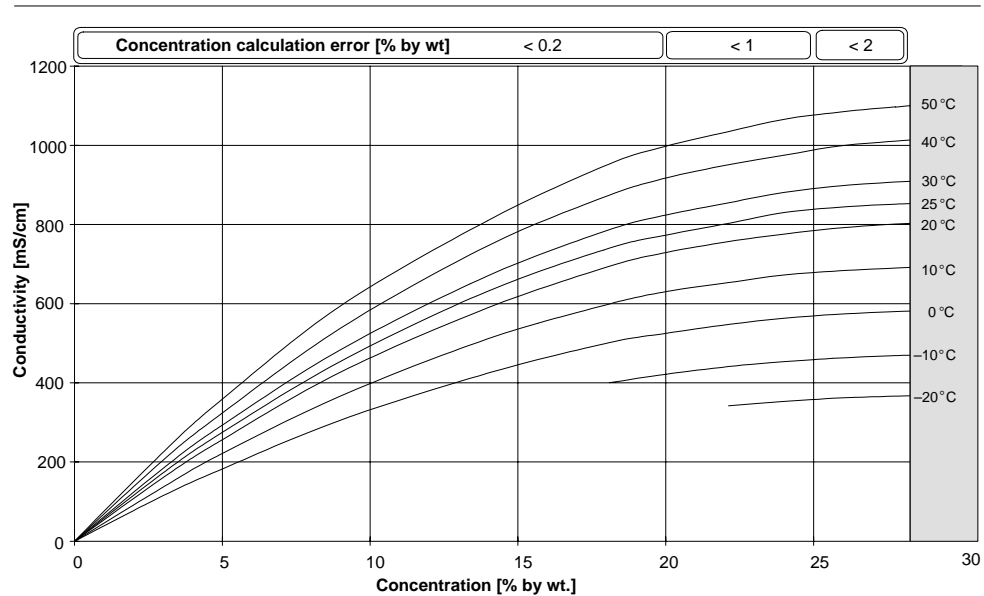


Fig. 16 Concentration curves HNO<sub>3</sub> (configuration: concentration -05-)

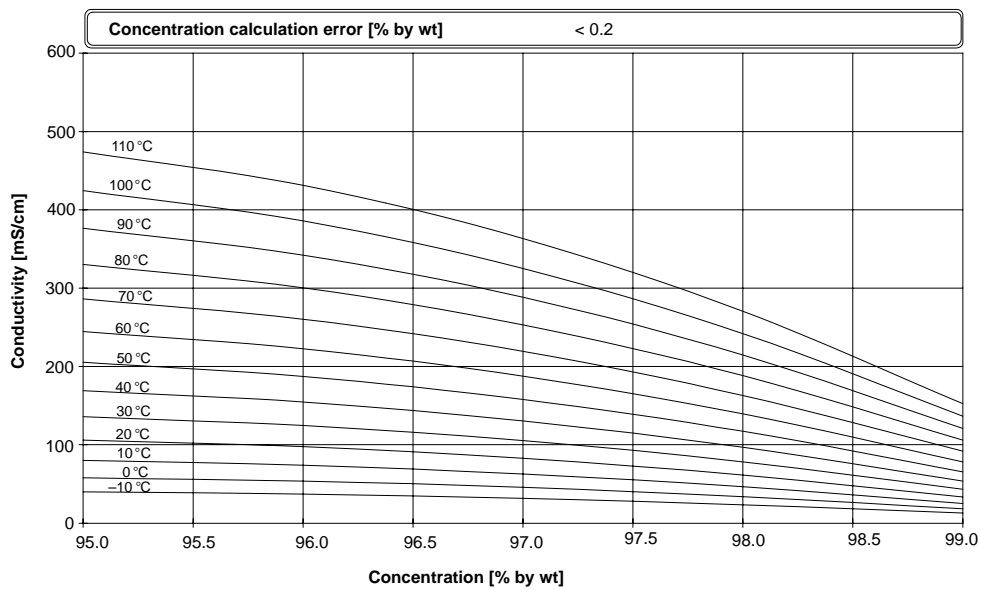


Fig. 17 Concentration curves  $\text{H}_2\text{SO}_4$  (range 95 to 99 % by wt), (configuration: concentration -06-)

# Index

☺ ☹, 24	Configuration, 17	Explosion protection
22 mA signal for alarm, 16, 24	Connecting, lines, 9	DULCOMETER
configuring, 18	Connecting cable, fixing, 9	2201 X CondI, 29
<b>A</b>	Current characteristic, configur-	LF 654 X, 35
Alarm, 16	ing, 18	<b>G</b>
response time, 24	Current loop	GainCheck, 15, 26
Alarm LED, 24	Hold state, 18	<b>H</b>
Alarm via loop current, 16, 24	Hold value, 18	Hold state, 23
configuring, 18	Current source, 26	<b>I</b>
Assembly, 6	<b>D</b>	Installation, 11
<b>C</b>	Declaration of Conformity, 34	<b>K</b>
Cal info, 23, 26	Diagnostics functions, 26	Keypad, 14
Calibration, 19	Dimension drawings, 7	<b>L</b>
input of cell factor, 19	Display, 14	Loop current, 16
temp probe adjustment, 22	<b>E</b>	display, instantaneous, 26
transfer ratio adjustment, 21	EC Type Examination Certificate,	frozen, 23
with calibration solution, 20	31	<b>M</b>
zero point, in air, 21	Error info, 23, 24, 26	Maintenance, 27
Calibration data, display, 26	Error message, last, 23, 24, 26	Measuring mode, 23
Calibration solutions, 37	Error message via loop current,	Messages, Sensoface, 24
Cell factor, calibration, 20	16, 24	Mode code, 4
Certificate of Conformity, 31	configuring, 18	Mounting diagram, 7
Cleaning, 27	Error messages, 24–27	<b>O</b>
Concentration curves, 38		Outputs, 16
Conductivity measurement, 23		

<b>P</b>	Sensocheck, on or off, 18	Stripping lengths, 9
Packing list, 6	Sensoface, 15, 24	<b>T</b>
Pipe mount kit, 8	diagnostics, 24	Terminals, pulling out, 9
Process variable, configuring, 17	messages, 24	Test mode, 26
Product line, 28	Sensor LF 654 X	Transfer ratio, adjustment, 21
Protective hood, 8	dimension drawing, 36	
	specifications, 35	<b>U</b>
<b>S</b>	Sensor monitoring, Sensoface, 24	User Interface, 13
Safety precautions, 3	Sensors, 35	
	monitoring, 15	<b>W</b>
Self-test	Smiley, 24	Wiring example, 12
automatic, 15, 27	Software version, display, 15, 26	
manual, 15, 26	Specifications, 29	

---



**Addresses and delivery information  
from the manufacturer:**

ProMinent Dosiertechnik GmbH  
Im Schuhmachergewann 5–11  
D-69123 Heidelberg

Postfach 10 17 60  
D-69007 Heidelberg – Germany

Phone: +49 (06221) 842-0  
Fax: +49 (06221) 842-419  
[info@prominent.de](mailto:info@prominent.de)  
[www.prominent.de](http://www.prominent.de)