


# Operating Instructions ProMinent® ProMix-M (Batch Controls) Polymer Blending System

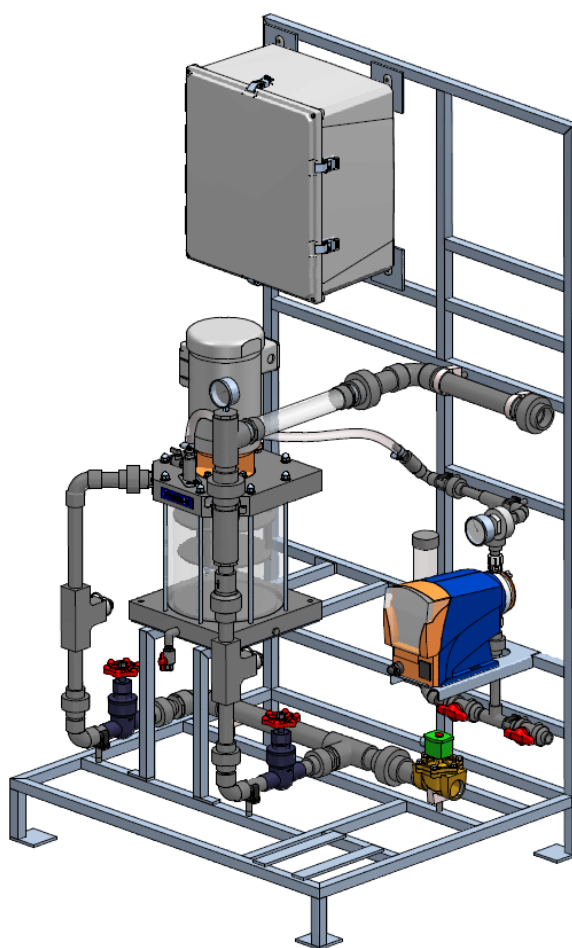

**Please completely read through these operating instructions first! Do not discard!**  
**The warranty shall be invalidated by damage caused by operating errors!**

ProMix\_MB\_IOM (02/17/14): – P/N: XXXXXX

**ProMinent Fluid Controls, Inc. (USA) 136 Industry Drive, Pittsburgh, PA 15275**  
**Tel: (412) 787-2484    [www.prominent.us](http://www.prominent.us)    Fax: (412) 787-0704**

## Table of Contents

i. Overview:	4
ii. ProMix Systems:	6
Diaphragm Pump Type DLTA (DB Series):	6
Progressive Cavity Pump Type (PB Series):	7
iii. Polymer Pumps used on M Models:	8
iv. Progressive Cavity Polymer Pumps used on M Models:	9
1.0 INSTALLATION & QUICK START GUIDE	10
1.1 Safety:	10
1.2 Delivery & Storage Checklist:	10
1.3 Installation Considerations:	10
1.4 Installation Guidelines:	11
1.5 Quick Start Guide	12
1.6 ProMix Mode and Polymer Settings	14
1.7 Servicing Guidelines:	19
2.0 CONTROLLER	20
2.1 Keypad Navigation	20
2.2 Main Menu	21
2.2 Main Menu (continued)	22
2.3 Adjust Setpoint	23
2.4 Modify Timing	24
2.5 Change Feed Mode and Polymer type	25
2.6 Browser Controls	26
2.6.1 The Site View	26
2.6.2 Diagnostic View	27
2.7 Operation Configuration	28
2.7.1 Setpoints	28
2.7.2 mA Outputs	28
2.7.3 Feed Verification	28
2.7.4 Pump Calibration	28
2.8 Feeder States	30
2.9 Enclosure Lights & Status	33
2.10 Status Message Summary	35

**ProMinent ProMix 'DA' & 'PA' Polymer Feeder**

2.11 Troubleshooting Guide..... 37

3.0 SPARE PARTS & PREVENTIVE MAINTENANCE ..... 40

3.1 DELTA (DLTA) Pump Spare Parts..... 40

3.2 SEEPEX Pump Spare Parts ..... 40

3.3 PVC Mixing Chamber Spare Parts..... 40

3.4 Piping Components Spare Parts..... 41

3.5 Control Panel Spare Parts ..... 41

3.6 Maintenance and Lubrication Schedule ..... 42

Appendix A – DB & PB Series Bill of Material ..... 46

Mechanical & Electrical List ..... 46

Appendix B – Control Panel “B Controls” ..... 52

B.1 Controller Board Layout..... 52

B.2 Controller Wiring (DB/PB Series)..... 55

Appendix C – Polymer Sizing / Dosage..... 65

Appendix D – Reference Documents ..... 66

Appendix E – Operation Modes & Controller Switch Settings ..... 67


## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### i. Overview:

The ProMix M Polymer Feeder is a skid system designed to control feed water and polymer and combine them to produce a high quality solution. The system is designed to receive liquid neat polymer while mixing it with feed water to produce and discharge a quality solution from the system.

Research in the science of polymer activation indicates that the activation energy must decrease as the polymeric chain is uncoiled to prevent rupture and hence decrease the performance of the product.

The mixing by the Polymer Feeder is accomplished mechanically with three distinct mixing zones separated by baffles. The first zone consists of a fast mixing blade that delivers high shear at the precise point of polymer injection, creating an immediate dispersion before agglomeration takes place. The second zone mixing blade induces a vortex and draws solution down through the center of the chamber from zone one and forces the solution outward to the sides and then down into zone 3. Finally, the third zone mixing blade gently agitates/blends the active polymer solution before it exits the chamber through the bottom of the discharge tube.

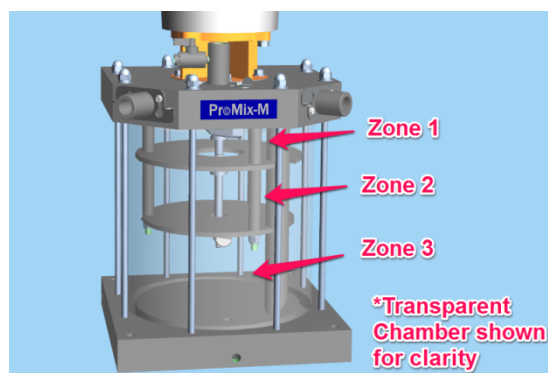

The ProMix M Polymer Feeder controller permits two main methods of operation. These modes and their respective configurations are selected using either the keypad or the Ethernet connection to a laptop. The first mode of operation is the 'Batch' mode which uses a % concentration setpoint defined as the ratio of polymer to dilution water by volume. The second basic operation mode is 'Inline' which requires the user to calculate and manually adjust the desired polymer pump rate based upon the process requirements. In either mode the type of polymer must be selected: emulsion or Mannich. On/off operation in either mode can be controlled remotely via a customer permissive contact.

In the 'Inline' mode the System Start switch on the front door of the controller can be placed in the ON position to immediately enable the controller or in the REMOTE position to require a remote dry contact as a start permissive. Placing this switch in the OFF position after having been in either of the other two positions will initiate a flush cycle before shutting down. The Polymer Pump switch on the controller front door has two positions to choose the source of the pump control signal. In the LOCAL position the controller uses the keypad entry for polymer pump rate. In the REMOTE position the user generated 4-20 mA signal represents 0 – 100% pump speed. The user must manually adjust the primary and post dilution valves for the desired dilution water flow rate. The pump rate must also be manually entered to achieve the desired polymer concentration.

In the 'Batch' mode the same operations apply for the two selectable switches on the front controller door. However instead of pump speed the ProMix Batch mode setpoint is % concentration. The user can manually adjust the incoming dilution water flow for the desired flow rates. Thereafter, the controller adjusts the polymer pump speed automatically to maintain the % setpoint concentration based on dilution water flow. The controller maximum input values are up to 1% concentration in the mixing chamber for emulsion polymers and up to 10% for Mannich polymers.

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

The ProMix M Polymer Feeder is equipped with all the necessary components for installation, reliable performance and safe operation. Two indicating lights on the front controller door provide operational status.

The design incorporates an electric solenoid valve (water inlet), primary and secondary flow meters, diaphragm and progressive cavity neat polymer pumps, microprocessor based controller, manual ball valves, pump calibration column, PVC piping and components and polymer mixing chamber mounted on a skid to facilitate proper mixing and delivery.

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### ii. ProMix Systems:

#### Diaphragm Pump Type DLTA (DB Series):

PART NUMBER	MODEL	PUMP TYPE	MAX CAPACITY
1048382	300X2-2.3DB	Delta 1020-120	2.30 GPH
1048383	600X2-3.8DB	Delta 1020-200	3.84 GPH
1048384	1500X2-6.2DB	Delta 0730-200	6.16 GPH
1048385	1500X2-10.3DB	Delta 0450-200	10.3 GPH

***\*\*Refer to Appendix C for proper sizing\*\****

Overall Skid Dimensions (w/Delta) ..... 72"H x 40"W x 34"D  
Overall Weight of Skid ..... 220 lbs. w/Delta  
Power Requirements ..... 120VAC, 60Hz, 1 Phase, 20 Amp  
Volume of Mixing Chamber ..... 3.2 Gallons  
Maximum Chamber Pressure ..... 150 PSIG  
Normal Operating Pressure ..... 58 PSIG to 100 PSIG (*Depends on Pump Selected*)  
Recommended Running Temperature ..... +50°F to 100°F  
Water Connection Size ..... 1-1/2" FNPT  
Solution Discharge Connection Size ..... 1-1/2" FNPT

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### Progressive Cavity Pump Type (PB Series):

PART NUMBER	MODEL	PUMP TYPE	MAX CAPACITY
1048386	1500X2-5.0PB	Seepex MD	5.0 GPH
1048387	1500X2-10.0PB	Seepex MD	10.0 GPH
1048388	1500X2-24.0PB	Seepex MD	24.0 GPH

*\*\*Refer to Appendix C for proper sizing\*\**

Overall Skid Dimensions (w/Delta) ..... 72"H x 40"W x 34"D  
Overall Weight of Skid ..... 250 lbs.  
Power Requirements ..... 220VAC, 60Hz, 1 Phase, 20 Amp  
Volume of Mixing Chamber ..... 3.2 Gallons  
Maximum Chamber Pressure ..... 150 PSIG  
Normal Operating Pressure ..... 100 PSIG  
Recommended Running Temperature ..... +50°F to 100°F  
Water Connection Size ..... 1-1/2" FNPT  
Solution Discharge Connection Size ..... 1-1/2" FNPT

### iii. Polymer Pumps used on M Models

Series	Identification Code	Factory Default Mode	SPM Max	Flowrate (GPH)		Pressure (PSIG)
				Min @ 100% Stroke	Max @ 100% Stroke	
DLTA	DLTA1020PVT4600UD4031EN0	HV2	120	0.019	2.3	145
DLTA	DLTA1020PVT4600UD4031EN0	Standard	200	0.019	3.84	145
DLTA	DLTA0730PVT4600UD4031EN0	Standard	200	0.031	6.16	102
DLTA	DLTA0450PVT4600UD4031EN0	Standard	200	0.11	10.32	58

**Notes:**

1. ProMinent - Delta Solenoid Driven Metering Pump
2. Original Pump GPH rating is derated 20% due to Polymer viscosity. The actual deration may vary depending on the polymer used
3. Control Modes Available \*
  - a. Standard – 200 spm: 0-50 cp
  - b. HV1 (slightly reduced discharge speed) – 180 spm: 50-200 cp
  - c. HV2 (moderately reduced discharge speed) – 120 spm: 200-500 cp
  - d. HV3 (maximum reduced discharge speed)– 80 spm: 500-1000 cp
4. Connections: ½" x 3/8" or DN10 Depending on Model Selected
5. Power Requirements: 115VAC, 60 Hz, Single Phase

\* Viscosity values are approximate and can vary widely per specific application. Use these values as a guideline only and consult the factory for specific application capabilities



### iv. Progressive Cavity Polymer Pumps used on M Models:

Series	Identification Code	SPM Max	Flowrate (GPH)		Pressure (PSIG)
			Min	Max	
MD	MD 003-12 / A6-A7-A7-H0-GA-X			2.3	100
MD	MD 006-12 / A6-A7-A7-H0-GA-X			3.84	100
MD	MD 012-12 / A6-A7-A7-H0-GA-X			6.16	100

Notes:

1. Seepex Progressive Cavity Metering Pump
2. Original Pump GPH rating is derated due to Polymer viscosity. The actual deration may vary depending on the polymer used
3. Power Requirements: 220VAC, 60 Hz, Single Phase

\* Viscosity values are approximate and can vary widely per specific application. Use these values as a guideline only and consult the factory for specific application capabilities

## 1.0 INSTALLATION & QUICK START GUIDE

### 1.1 Safety:

Utilize appropriate protective safety gear when operating or maintaining this equipment. Recommended safety gear is as follows:

#### *Personal Protective Equipment (PPE):*

- Hard Hats (Where overhead hazards exist)
- Safety Glasses with side shields
- PVC Apron
- PVC Gloves
- Safety-Toed Work Boots

### 1.2 Delivery & Storage Checklist:

1. Check packing list for completeness and note any missing items immediately.
2. Inspect equipment and shipping container for damages before accepting delivery. Make note of the carrier's bill-of-lading the extent of the damage, if any, and notify the carrier.
3. Store the equipment on firm level surface in original packing container. Do not store the equipment where it may be exposed to extreme temperatures, precipitation, humidity, or dust. Avoid direct sunlight that could overheat and damage equipment.

Ambient Conditions for storage and transport:

Temperature: 14°F to 120°F

Air Humidity: ≤ 92% relative humidity, non-condensing

### 1.3 Installation Considerations:

- Required Polymer System Voltage
- Available Water Pressure
- Injection Point Pressure
- Number of Injection Points
- Polymer Solution Discharge (For example - Length of Piping Run or Pipe Size)
- Neat Polymer Suction: Flooded or Lift
- Type of Application / Dewatering Device
- Type of Polymer: Emulsion, Dispersion, Solution

### 1.4 Installation Guidelines:

1. Unpack and position equipment on sturdy level surface. Fasten to prevent movement.
2. Do not install equipment in areas of extreme heat, cold, dust or humidity. Avoid areas where objects or fluids can drop from overhead.
3. Units are to be installed as close to the point of application as possible.
4. Inlet pressure is not to exceed 100 psig working pressure.
5. System pressure at the discharge is not to exceed 80% of inlet pressure.
6. Piping Internal to the System:
  - a. Inspect the piping for breakage. The system may have been jarred during shipping.
  - b. Check the tightness on all unions. Hand tighten only – no tools. Unions incorporate an o-ring seal. Ensure that the o-ring is seated properly prior to tightening.
7. Piping External to the System:
  - a. Install piping so that connections properly meet system termination points. Do not “stretch” field installed piping to meet system termination points. Stressed piping will fail!
  - b. Piping should be at a minimum  $\frac{3}{4}$ ” to and from the piping on the system. 1” or larger piping is recommended. Larger piping sizes would be required for runs over 100 feet in length if utilizing  $\frac{3}{4}$ ” pipe.
  - c. Avoid getting dirt and debris inside the piping during installation. Plug ends of piping with rags if construction activities are underway. All debris must be flushed from piping before system start-up.
  - d. Connect to outlet piping 1-1/2” FNPT from static mixer to associated customer application point.
  - e. Connect to make-up water inlet piping 1-1/2” FNPT (25 GPM maximum and 100 psig maximum).
  - f. Connect to Neat Polymer pump inlet piping  $\frac{1}{2}$ ” FNPT (DLTA Models) & 1” FNPT (Seepex Models). Flooded Suction ONLY for Seepex PC pump.
  - g. Install 1-1/2” pressure regulator and 1-1/2” y-strainer / basket strainer on the clean make-up water line if equipment is currently not installed. (Recommended). Sizing depends on inlet/outlet piping.

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder


- h. Allow provisions for draining the system piping. Skid components will require maintenance. Ensure that chemicals can be evacuated from the skid piping and components for servicing.
- 8. Electrical Supply Needed for the System:
  - a. Note: Review local Electrical Code and follow accordingly.
  - b. Connect incoming power to skid mounted control panel (*120VAC, Single Phase, 20 Amp, 60 Hz*). Ensure panel is properly grounded.
  - c. Check electrical connections to be sure proper voltage is supplied to the system.
  - d. Power the unit using a dedicated, separate breaker in the local lighting distribution panel.
  - e. Do not route the AC power in common conduit with variable frequency pump drives.
  - f. Do not put conduit entries in the top of the control panel. Resulting conduit condensation and failure to seal may damage controller circuit boards.
- 9. The Overload relay should be set to the Motor Nameplate Full Load Amps. Setting this to a higher value will result in possible damage to the motor and associated wiring. Overload conditions should be investigated and possible process changes may need to be made to prevent overload conditions.
- 10. Connect Digital Remote Start Functions (see wiring diagram in Appendix) for polymer tank level and remote start permissive. Default jumpers should remain in place for any input not available.
- 11. Refer to the Delta or Seepex pump manual (Reference Document) for pump operation.

### 1.5 Quick Start Guide

- 1. Review installation guidelines (Section 1.4) of the manual.
- 2. Open ball valve on the suction of the pump to allow chemical to flow into the system by gravity. If the application is suction lift (Delta Series only) then ensure liquid in pump suction.
- 3. Verify DLTA pump/Seepex pump is set with correct settings in the panel, if applicable, according to drawing. Ensure Delta pump settings match the pump selection in the controller.

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

4. Start up pumps at 100% stroke length and frequency to purge all air and prime the system.  
On Seepex pump models ensure that the pump is pre-primed prior to turning the pump on.  
Otherwise damage to the mechanical seal could occur.
5. Verify motor rotation on Mixing Chamber motor and Seepex pump motor, if applicable.  
Normal rotation is CCW.
6. Do not run the mixing chamber motor dry. Damage to the mechanical seal could occur.
7. Set backpressure and pressure relief valves on pump discharge line (if applicable).  
Pressure Relief Valve should not exceed 100 PSIG.
8. Verify that the polymer injection pump pressure is set higher than the system pressure.  
Review pump maximum pressure capacity to verify setting can be obtained.
9. Perform DLTA/Seepex pump calibration using drawdown calibration cylinder (see section 2.7.4)
10. Check flow calibration and be sure pump meets or exceeds the rated flow capacity. Check flows at 100% stroke frequency and stroke length set at 100%.
11. In "Inline" mode the neat polymer pump speed is then adjusted manually according to the switch positions in section 1.6. The pump flow rate and primary and post dilution water flow rates determine the polymer concentration exiting the ProMix system.
12. In "Batch" mode the controller automatically adjusts pump speed to maintain the setpoint concentration based on dilution water flow. Refer to switch positions in section 1.6.  
Emulsion and Mannich polymers have maximum limitations of 1% and 10% concentration, respectively.
13. Manually adjust flow control valves for the primary and post dilution water.
14. Confirm proper operation of all instrumentation.
15. Input functions checked and simulated (remote start/stop, 4-20mA, etc.).
16. Output functions checked.
17. Check 4-20mA outputs for pump speed (if used).

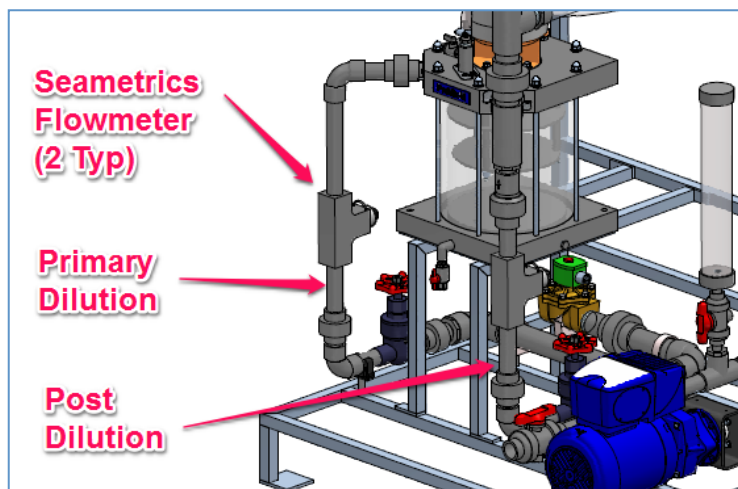

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

18. Test the operation of all remaining circuits.
19. Observe system to assure that nothing looks or sounds abnormal.

### 1.6 ProMix Mode and Polymer Settings

***Begin by first selecting mode of operation (Batch or Inline) and type of polymer (Emulsion or Mannich) see section 2.5.***

<b>Batch or Inline</b>	The user must choose the mode of operation from a keypad menu selection. Default is Batch mode and the setpoint is % concentration. The polymer pump is automatically adjusted to maintain the desired % concentration regardless of fluctuations of the dilution water flow. Inline mode requires the user to calculate the percent concentration desired and then manually adjust the pump speed based upon the measured dilution water flow rate.
<b>Emulsion or Mannich</b>	The type of polymer being used by the ProMix feeder is selected. If emulsion then a maximum of 1.0% concentration is permitted in the mixing chamber. If Mannich is selected then the maximum is 10.0% concentration. Batch mode will automatically limit the polymer feed to maintain these concentrations.

***After setting operation mode and polymer type, manually adjust the two door switches, 'System Start' and 'Polymer Pump' for the desired operating conditions:***

#### **System Start door switch**

Permits use of remote contact to enable system operation in REMOTE position.

#### **Polymer Pump door switch**

Determines the setpoint for pump control action which can be from the keypad entry in LOCAL or from a 4-20 mA signal in REMOTE.

### Batch / Emulsion door switch options

<b>System Start</b> <b>ON-OFF-REMOTE</b> controller door switch	<b>Polymer Pump</b> <b>LOCAL-REMOTE</b> controller door switch	<b>PROMIX OPERATION</b>
ON	LOCAL	Remote Start Contact: N/A Keypad Local Setpoint: 0 – 1.0% concentration Remote Setpoint: N/A Max. chamber concentration: 1.0%
ON	REMOTE	Remote Start Contact: N/A Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0–1.0% concentration Max. chamber concentration: 1.0%
REMOTE	LOCAL	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: 0 – 1.0% concentration Remote Setpoint: N/A Max. chamber concentration: 1.0%
REMOTE	REMOTE	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0-1.0% concentration Max. chamber concentration: 1.0%

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### Batch / Mannich door switch options

System Start <b>ON-OFF-REMOTE</b> controller door switch	Polymer Pump <b>LOCAL-REMOTE</b> controller door switch	<b>PROMIX OPERATION</b>
ON	LOCAL	Remote Start Contact: N/A Keypad Local Setpoint: 0 – 10.0% concentration Remote Setpoint: N/A Max. chamber concentration: 10.0%
ON	REMOTE	Remote Start Contact: N/A Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0-10.0% concentration Max. chamber concentration: 10.0%
REMOTE	LOCAL	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: 0 – 10.0% concentration Remote Setpoint: N/A Max. chamber concentration: 10.0%
REMOTE	REMOTE	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0-10.0% concentration Max. chamber concentration: 10.0%



## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### Inline / Emulsion door switch options

System Start <b>ON-OFF-REMOTE</b> controller door switch	Polymer Pump <b>LOCAL-REMOTE</b> controller door switch	<b>PROMIX OPERATION</b>
ON	LOCAL	Remote Start Contact: N/A Keypad Local Setpoint: 0 – 100% pump speed Remote Setpoint: N/A Max. chamber concentration: 1.0%
ON	REMOTE	Remote Start Contact: N/A Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0 – 100% pump speed Max. chamber concentration: 1.0%
REMOTE	LOCAL	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: 0 – 100% pump speed Remote Setpoint: N/A Max. chamber concentration: 1.0%
REMOTE	REMOTE	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0–100% pump speed Max. chamber concentration: 1.0%

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### Inline / Mannich door switch options

System Start <b>ON-OFF-REMOTE</b> controller door switch	Polymer Pump <b>LOCAL-REMOTE</b> controller door switch	<b>PROMIX OPERATION</b>
ON	LOCAL	Remote Start Contact: N/A Keypad Local Setpoint: 0 – 100% pump speed Remote Setpoint: N/A Max. chamber concentration: 10.0%
ON	REMOTE	Remote Start Contact: N/A Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0–100% pump speed Max. chamber concentration: 10.0%
REMOTE	LOCAL	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: 0 – 100% pump speed Remote Setpoint: N/A Max. chamber concentration: 10.0%
REMOTE	REMOTE	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: N/A Remote Setpoint: 4-20mA = 0–100% pump speed Max. chamber concentration: 10.0%

### 1.7 Servicing Guidelines:

- Disconnect electrical power to the equipment prior to servicing.
- Relieve all pressure from the unit prior to servicing.
- Close all suction and discharge valves.
- Verify dilution water is closed.
- Drain chemical/water from unit prior to disassembly.
- Maintain protective covers over all moving parts.
- Keep body parts, hair and foreign objects from contact with moving parts.
- Do not allow grease or oil to be used or stored around the feed equipment or chemicals.
- Review the Material Safety Data Sheets of the Polymer utilized and observe appropriate safety measures.
- Mineral Oil can be utilized to aid in the polymer cleaning process.

Ensure that all operating and maintenance personnel are fully instructed regarding the contents of this manual.

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### 2.0 CONTROLLER

#### 2.1 Keypad Navigation

The ProMinent ProMix MB Polymer Feeder uses a fixed configuration to deliver the operation required to operate the feeder. The main board and top board are not interchangeable with other ProMinent controller hardware.

The top line of the main menu displays the current feeder state.

Press **EXIT** during any main menu display

& you'll return to the top of the menu & the current feeder state.

**UP** & **DOWN** to view options  
or to EDIT numbers



Move **RIGHT** to select next  
field when EDITing



**ENTER** to select an option  
& to execute EDITing



**EXIT** to escape option,  
info display or EDITing  
**EXIT** goes to top of **Main Menu**



The other main menu displays show information you'll need to set & adjust feed rate and to verify tank level, water flow rates, external control permissives & control levels.....



## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### 2.2 Main Menu

Top of Main Menu. Displays current feeder state.

Key **ENTER** @ to view & adjust System settings

You can always key **EXIT** until you get to this screen

Key **ENTER** @ **Alarms** to reset alarms & view the cause of alarm & its date-time stamp. You may need to acknowledge and clear certain alarms to continue operation.

Key **ENTER** @ **PolymerFeed** to view-adjust the Local Setpoint and view-modify Wait-for-Flow, Mixer Fill and Flush timing. Displays polymer feed %.

**Primary Flow** is the water flowing into the polymer mixer. The volume measured by the mixer inlet meter is converted to a flow rate in Gallons/Minute.

**Post Flow** is the water blended into the mixer outlet flow, which affects the delivered polymer %.  
**Post Flow** may be zero GPM.  
Zero **Primary Flow STOP**s the feeder.

**Total Flow** is the sum of **Primary Flow** and **Post Flow** and is displayed to help you balance flow with feed rate. The % concentration setpoint is based upon total flow.

**Remote Contact** must be **ON** to operate the **PolymerFeed** pump if the System Start switch is in the REMOTE position. If the **Remote Contact** opens, the feeder **STOP**s

**Solenoid** displays **ON** when water inlet solenoid valve is open. The **Solenoid** is always **ON** when the mixer is filling, running & flushing.

Batch 0.37%	←↕
Local RUN	
↓	↑
Alarms	←↕
none	
↓	↑
PolymerFeed	←9
Feed @: 0.75%	
↓	↑
Primary Flow	↕
3.46 GPM	
↓	↑
Post Flow	↕
1.25 GPM	
↓	↑
Total Flow	↕
4.71 GPM	
↓	↑
Remote Contact	↕
ON 1.36hrs	
↓	↑
Solenoid	↕
ON 1.42hrs	
↓	↑

continued

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### 2.2 Main Menu (continued)

**Mixer** displays **ON** when the mixer motor is running.

Alternates with "**ENTER = Flush**" for mix chamber flushing when manually selected.\*

If the **Feed Verify** option is selected **Feed Verify** ensures that polymer is flowing into the mixer. The mixer **STOPs** if **Feed Verify** faults. Displays polymer volume fed from midnight.

**RemoteSetpoint** displays the % concentration as a function of the remote 4-20 mA signal & controls the **PolymerFeed** pump when **Remote** is selected. A **RemoteSetpoint** less than 0%, typically an open current loop, **STOPs** the feeder.

Press **ENTER** to span the current loop.

**Pump Speed** displays the 4-20mA output which tracks the percentage **PolymerFeed** pump rate .

Typically spanned 0-100% pump speed = 4-20mA.

Press **ENTER** to view-adjust the current loop.

**Customer Analog** can be selected to display pump speed or pump GPH (scalable)

Top of Main Menu.

You can always key **EXIT** until you get to this screen

\*If the System Start switch is placed in OFF position or if the switch is in the REMOTE position and the remote start contact is opened for longer than 2 seconds, the controller will initiate a flush cycle.

Mixer	1.34hrs	← 5
ON		
↓	↑	
Feed Verify	2745 mL	↕
ON		
↓	↑	
RemoteSetpoint	0.37%	← G
↓	↑	
Pump Speed	8.42mA	← C
	27.6%	
↓	↑	
Customer Analog	8.42mA	← D
	27.6%	
↓	↑	
Polymer	0.37%	← ↕
Remote	RUN	

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### 2.3 Adjust Setpoint

Key down to **PolymerFeed** and Key **ENTER**. **Local Setpoint** controls the feed when the enclosure door switch is in the **Local** position. Displays current setpoint.

Key **ENTER** to adjust.

Key **RIGHT** to move the cursor &

**UP** or **DOWN** to change the digit.

Key **EXIT** to abandon or **ENTER** to execute.

Displays current, revised setpoint.

If enclosure door switch is in the **Local** position,

feed rate will change immediately.

**Local Setpoint** limits are 0.05 to 1.00% for emulsion polymer and 0.05 to 10.0% for Mannich.. If entries are made outside of these limit ranges the configured setpoint will default to either the maximum or minimum limit.

However, these values must be accepted by pushing the Enter key which also turns off the alarm.

Key **ENTER** to return to main menu.

#### Adjust Setpoint

PolymerFeed ←9  
Feed @ 8.74%



LocalSetpoint ←9  
0.33%



Editing, ←or Exit  
0.42% →↕



then



LocalSetpoint ←↕  
0.42%

#### Fault response

LocalSetpoint  
Out of Range ←



PolymerFeed ←9  
Feed @ 8.74%

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### 2.4 Modify Timing

Key **ENTER** @ **PolymerFeed**.

**Local Setpoint** controls the feed when the enclosure door switch is in the **Local** position.

**Wait for Flow** is the time that the feeder waits to measure a valid **Primary Flow** before filling the feeder. Key **ENTER** to modify.

**Fill Time** is the time that the feeder waits to fill the feeder prior to turning on the **PolymerFeed** pump. This protects the mechanical seal of the mixer motor shaft by keeping it wet. Minimum time is 30 seconds for the first fill only. Thereafter this step is skipped if operation pauses unless electrical power to the controller is cycled. Key **ENTER** to modify.

**Flush Time** is the time water flows after initiation of a Flush Cycle. This is a maintenance feature and can be manually initiated by (1) placing the controller door System Start Switch in the OFF position for more than 2 seconds or (2) by opening the remote start contact for longer than 2 seconds or (3) by using the keypad menu. Key **ENTER** to modify time.

The times shown on this page are the factory defaults.

**Wait for Flow** may be adjusted between 5 & 60 seconds

**Fill Time** may be adjusted between 30 & 120 seconds.

**Flush Time** may be adjusted between 5 & 60 seconds.

**Pump Settings GPH** is the maximum pump gallons per hour output possible at the currently selected stroke length and 100% frequency. This value will need to be updated if the pump stroke length is changed.

PolymerFeed ↵9  
ON: 1.314 G  
↵

LocalSetpoint ↵9  
0.33%  
↓ ↑ or ↵

wait for flow ↵9  
30 sec  
↓ ↑ or ↵

Fill time ↵9  
60 sec  
↓ ↑ or ↵

Flush time ↵9  
30 sec  
↓ ↑ or ↵

Pump Settings ↵9  
GPH 200  
↵



## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### 2.5 Change Feed Mode and Polymer type

Top of Main Menu. Displays current feeder state.

Key **ENTER** @ to view & adjust System settings

You can always key **EXIT** until you get to this screen

Key **ENTER** @ **Configure** and use **DOWN** key to access  
**Feed Mode**.


Key **ENTER** @ **Feed Mode** to view-adjust the

Feed Mode to either **Batch** or **Inline**.

**Batch mode** automatically adjusts the pump rate to changes in dilution flow to maintain the percent setpoint and **Inline** requires manual adjustment of the polymer pump.

Key **ENTER** when the desired feed mode is displayed.

Key **DOWN** to **Batch Type** and Key **ENTER**. View-adjust the **Batch Type** to either **Emulsion** or **Mannich**. Key **ENTER** when the desired polymer type is displayed.

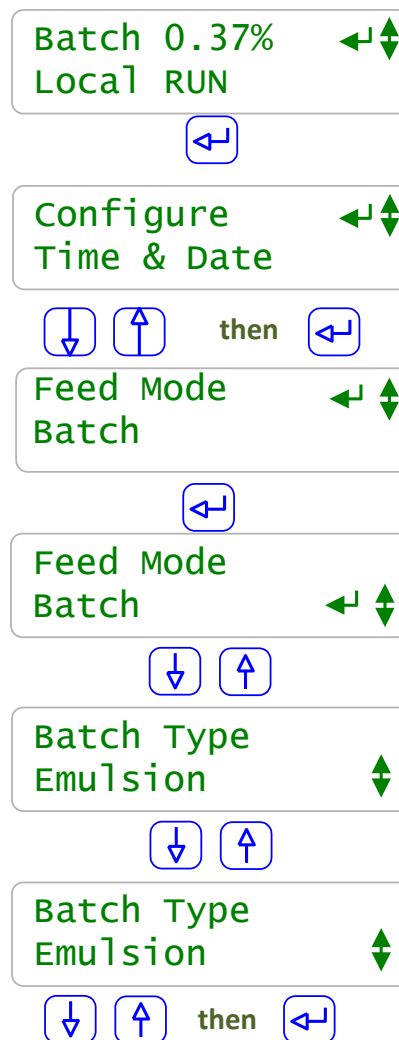

# ProMinent ProMix 'DA' & 'PA' Polymer Feeder

## 2.6 Browser Controls


### 2.6.1 The Site View

Ethernet connect to the controller with a PC, notebook, netbook or via the site LAN.

Refer to the separate Browser manual (Reference Documents) if you have not previously browsed a ProMix type controller. Browse the feeder with Internet Explorer or Mozilla. The reference manual will assist with browser setup of the controls.

Click on links within the View & the right side of the display will update with corresponding diagnostics & configuration menus.

Your application may require inputs/outputs that are only available in the Diagnostic View, which is accessible from the Site View. The browser includes tools to switch view icons within the Site View. This is an advanced option and should be attempted only by experienced browser users.

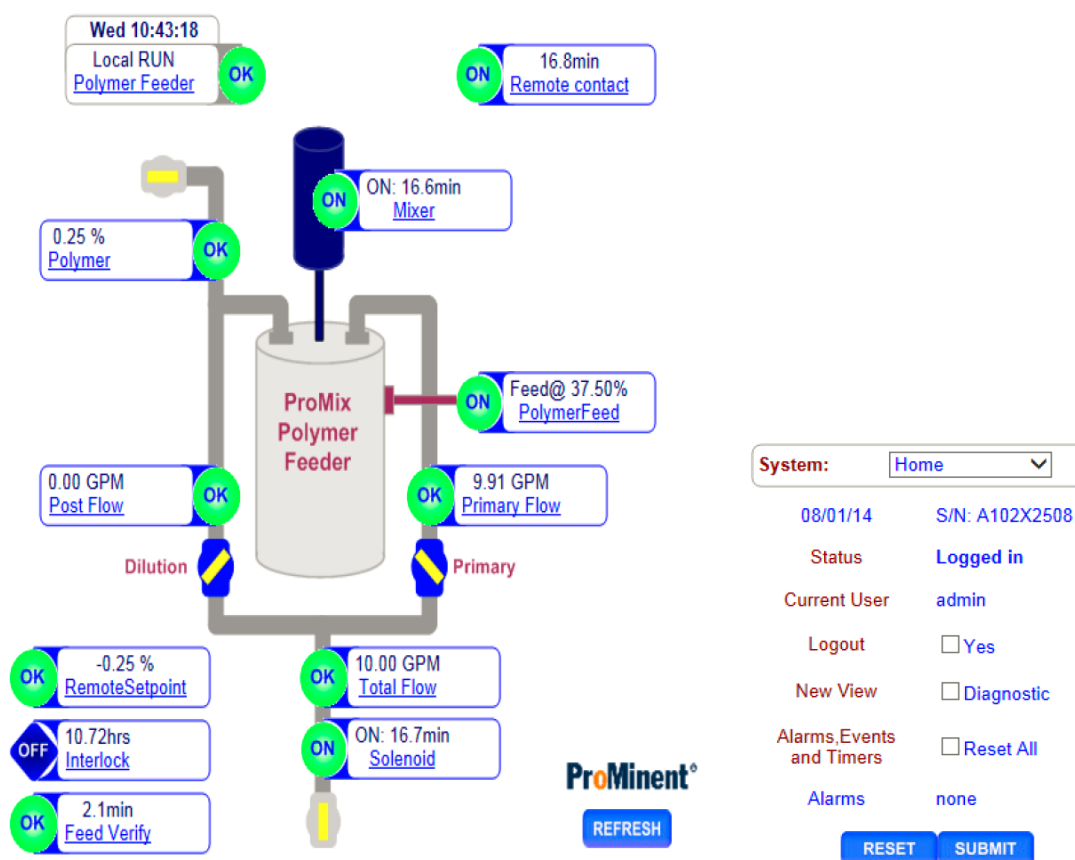

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### 2.6.2 Diagnostic View

100 % Solenoid_A	OK	10.73hrs Interlock	OFF	Wed 10:44:01	Local RUN Polymer Feeder	OK
0 % AlarmLED_B	OK	0.0 G Dilution Meter	OK	REFRESH		
38.0 % Pump speed	OK	238.5 G Primary Meter	OK	ON: 17.4min Solenoid	ON	
38.0 % CustomerAnalog	OK	2.8min Feed Verify	OK	ON: 17.3min Running	ON	
4.4 --- Unused E	OK	10.73hrs Motor Thermal	ON	Setpoints AlarmOut	OFF	
4.4 --- Unused F	OK	17.5min Remote contact	ON	ON: 17.4min Pump Enable	ON	
-0.25 % RemoteSetpoint	OK	17.9min Remote start	ON	ON: 17.4min Mixer	ON	
0.25 % Polymer	OK	17.9min Local start	OFF	Setpoints Auto LED	OFF	
10.00 GPM Primary Flow	OK	24.5min WaterLock_W	ON	Feed@ 50.00% Run LED	ON	
0.00 GPM Post Flow	OK	17.4min MixLock_X	ON	Setpoints Alarm LED	OFF	
9.90 GPM Total Flow	OK	17.4min FeedLock_Y	ON	Feed@ 37.85% PolymerFeed	ON	
0 % AutoSelected	OK	10.73hrs Pump fail	OFF			
100 % RunControl	OK					
0 % FlowControl	OK					

System:

08/01/14 S/N: A102X2508

Status Logged in

Current User admin

Logout ☐ Yes

New View ☐ Site view

Alarms, Events  
and Timers ☐ Reset All

Alarms none

RESET SUBMIT

### 2.7 Operation Configuration

#### 2.7.1 Setpoints

Control of the neat polymer feed pump is set by the **System Start** and **Polymer Pump** switches located on the ProMix control panel door. The type of polymer, either **emulsion** or **Mannich**, and the operation, either **Inline** or **Batch**, are selected via the controller keypad or browser interface. Refer to the ProMix Mode and Polymer charts in section 1.6.

NOTE: In Batch mode the ProMix feeder adjusts the pump speed as the measured Primary & Post dilution flow rates vary to maintain the setpoint polymer concentration.

#### 2.7.2 mA Outputs

The polymer feeder includes two DC isolated 4-20mA controller outputs. Typically, **Customer Analog:D** would be used for monitoring the pump control signal and is sent to a customer device as max pump speed or partial speed if signal is scaled. **PolymerPump:C** is used as the actual 4-20 mA feed control signal to the polymer pump.

#### 2.7.3 Feed Verification

Feed verification ensures that the polymer pump is actually delivering polymer by monitoring the output of the pump. A thermal flow switch is employed for this purpose as an optional feature for 'other' type pumps selection. The Delta pump utilizes an integral relay for feed verification.

#### 2.7.4 Pump Calibration

Before placing the ProMix system in operation the polymer pump should be calibrated at maximum dosing and the resultant gph rate entered into the configuration menu for pump size (see pump setting in section 2.4). A calibration cylinder is provided on most ProMix systems to assist in the calibration of the polymer pump. The following procedure should be followed to calibrate a Delta type pump, assuming all installation requirements are met:

1. Configure pump for manual operation, set desired suction viscosity spm, and set stroke length to 100%.
2. Fill calibration cylinder to top mark by manipulating valves & pump to allow neat polymer into the cylinder. Manually fill the calibration cylinder if it is not possible to use the pump output.
3. Keep ProMix feeder connected to the actual system so that maximum application back pressure is realized.
4. Open primary dilution water valve so that the mix chamber fills when system is started.
5. Manipulate pump valves so that pump suction is connected to the calibration cylinder only.


## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

6. Manually run pump at maximum rated strokes per minute and time the calibration column drawdown for at least 30 seconds taking note of beginning and end marks. Calculate the gph pump rate from the volume and time.
7. Using the controller keypad, enter the calculated pump rate in gph (see section 2.4 pump settings)
8. Place the pump back into the analog mode.


Follow the same procedure for a Seepex pump but do not use water for testing and/or calibration. Connect suction side of the Seepex pump to neat polymer or mineral oil only. Also use 'other' for the type of pump selected in the controller menu in section 2.4.


# ProMinent ProMix 'DA' & 'PA' Polymer Feeder

## 2.8 Feeder States

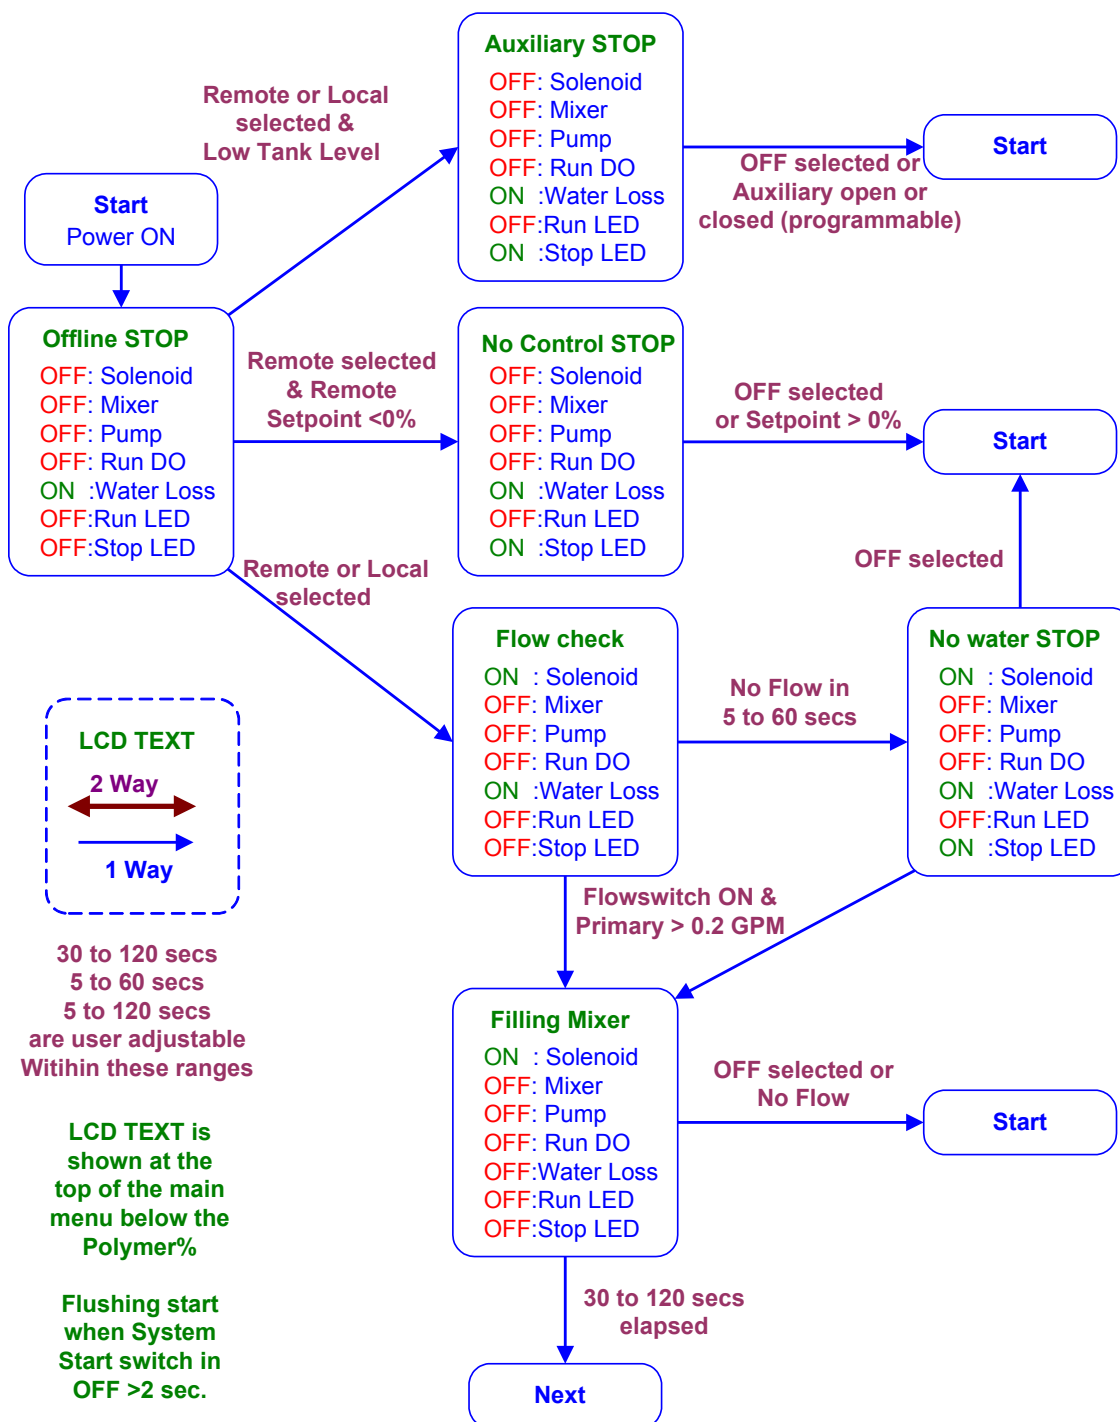

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

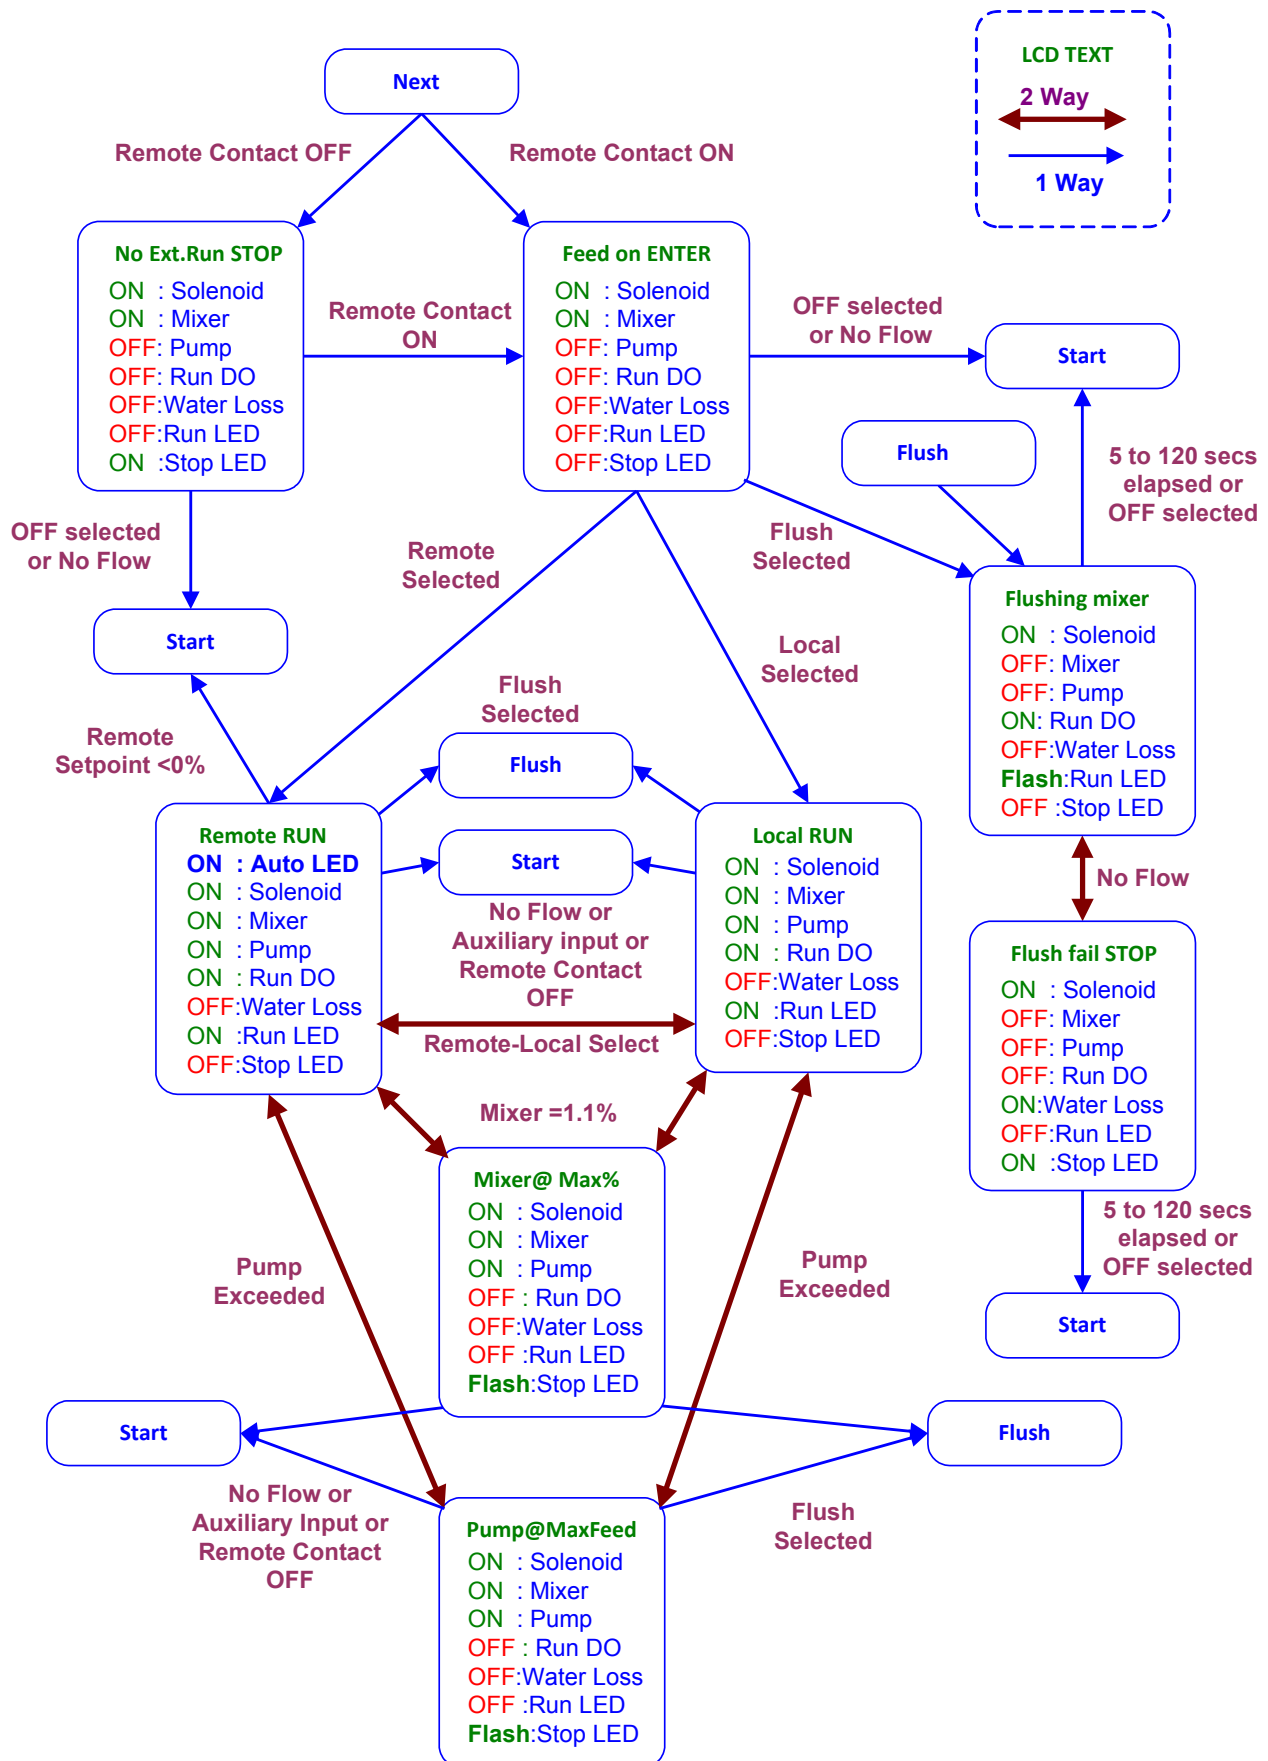

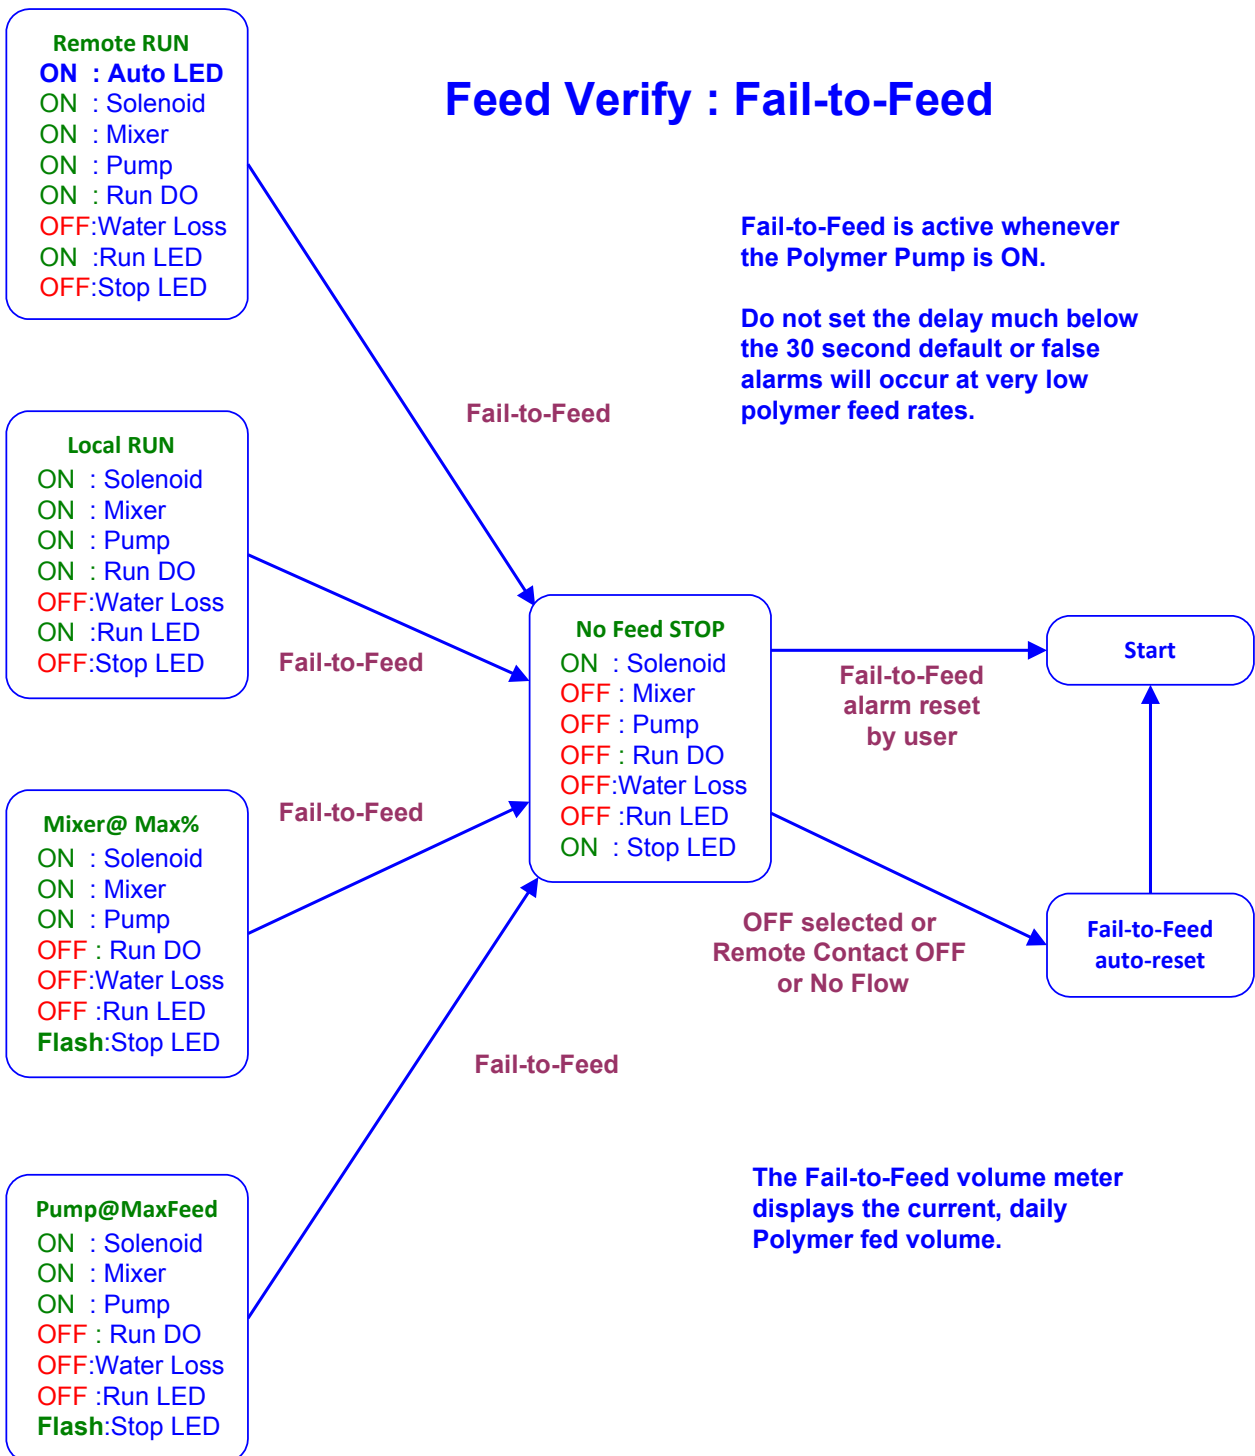



ProMinent ProMix 'DA' & 'PA' Polymer Feeder


2.9 Enclosure Lights & Status



The enclosure door lights complement the LCD state display messages & understandably can be seen from a greater distance than the LCD display.

The flashing **STOP** light is useful when adjusting the Primary flow rate to prevent the mixer from exceeding the 1.0% (emulsion) or 10.0% (Mannich) maximum mixer concentration.

Polymer Feed requires:

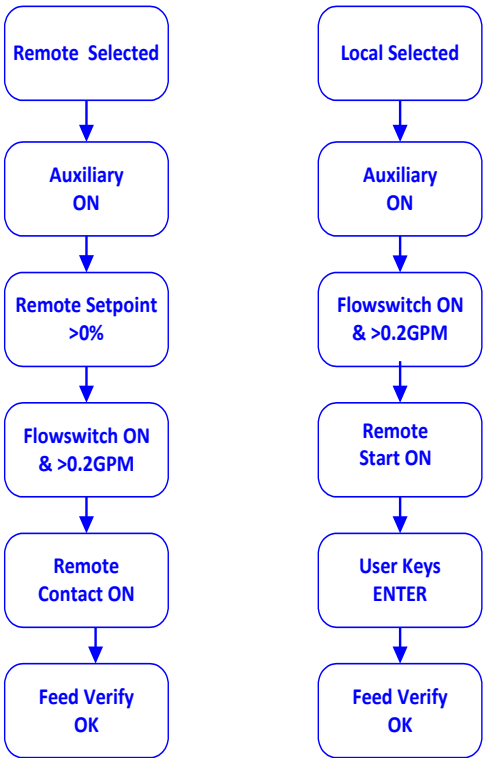

The **AUTO** light allows quick confirmation of the switch from **AUTO** to **MANUAL**

The parts of previous state diagrams that enable polymer feed are summarized in this graphic.

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

There has to be polymer in the tank and both the flow switch has to be closed and the Primary flow rate greater than 0.2GPM for the feeder to operate.

Note that in either Remote or Local mode the user can transition between modes by changing the System Start door switch from one position to the other without pausing at OFF.

In both Local and Remote modes, the mixer may be filled but the polymer pump will not start unless the System Start switch is in the ON or Remote position.

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### 2.10 Status Message Summary

LCD & Browser Status	Feeder State
<b>System Off</b>	ON-OFF-REMOTE switch at OFF
<b>Auxiliary STOP</b>	Can be programmed for any interlock purpose. Alarm in open or close programmable, e.g. tank level
<b>No Control STOP</b>	LOCAL-REMOTE switch at REMOTE and 4-20mA control level less than 0%. Exits on 4-20mA>0% or ON-OFF-REMOTE = OFF
<b>Flow Check</b>	Opens solenoid & waits user set seconds for Flowswitch contact closed AND Primary flow > 0.2 GPM. Exits on flow measured or ON-OFF-REMOTE = OFF
<b>No Water STOP</b>	Exits on flow measured or ON-OFF-REMOTE = OFF
<b>Filling Mixer</b>	Solenoid open & mixer OFF. Waits user set seconds to fill mixer. Exits on no flow measured or ON-OFF-REMOTE = OFF
<b>No Ext.Run STOP</b>	Polymer feed OFF, Mixer and Solenoid ON Exits on Remote Start contacts closed or ON-OFF-REMOTE = OFF
<b>Feed on ENTER</b>	LOCAL-REMOTE=LOCAL. Mixer & Solenoid ON.Exits on user keying ENTER, flush or ON-OFF-REMOTE = OFF
<b>Flushing Mixer</b>	Solenoid ON. Polymer feed & Mixer OFF. Exits on flush time expired or No flow or ON-OFF-REMOTE = OFF
<b>Flush Fail STOP</b>	No Flow measured while flushing. Exits on flush time expired or flow measured or ON-OFF-REMOTE = OFF

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

<b>Polymer Pump Remote</b>	<p>Polymer feed @ 4-20mA input controlled setpoint.</p> <p>Exits on no flow, auxiliary contact, control&lt;0%, flush, feed verify fail, Remote Start open, mixer @ &gt;1% or 10%, pump at max SPM or ON-OFF-REMOTE = OFF.</p>
<b>Polymer Pump Local</b>	<p>Polymer feed @ user setpoint.</p> <p>Exits on no flow, auxiliary contact, flush, feed verify fail, Remote Start open, mixer @ &gt;1% or 10%, pump at max SPM or ON-OFF-REMOTE = OFF.</p>
<b>No Feed STOP</b>	<p>Feed Verify fails to measure polymer feed.</p> <p>Exits on user reset of alarm, no flow, Remote Start open, ON-OFF-REMOTE = OFF</p>
<b>Mixer @ Max%</b>	<p>Controls so that mixer is at 1% polymer</p> <p>Exits on no flow, auxiliary contact, flush, feed verify fail, Remote Start open, pump at max SPM, &lt;1% or 10% Polymer or ON-OFF-REMOTE = OFF.</p>
<b>Pump @ MaxFeed</b>	<p>Controls so that pump is at 100%.</p> <p>Exits on no flow, auxiliary contact, flush, feed verify fail, Remote Start open, pump at max speed, or ON-OFF-REMOTE = OFF</p>

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### 2.11 Troubleshooting Guide

Adjustment and bypass fixes to operational problems.

LCD & Browser Status	Operational Problem
<b>Auxiliary STOP</b>	If you have a level switch fault, jumper controller input terminal 'O' to the adjacent Ground symbol, $\perp$ terminal & fix the level switch.
<b>No Control STOP</b>	Switch the LOCAL-REMOTE to LOCAL while you figure out the problem with the 4-20mA current loop connected to controller input terminals 'G' '+' & Ground $\perp$ terminal.
<b>No Water STOP</b>	<p><b>Motor Overload</b></p> <p>If a motor thermal overload problem, jumper controller input terminal 'S' to the adjacent Ground symbol <math>\perp</math> terminal.</p> <p><b>Solenoid</b></p> <p>Verify that the solenoid has been actuated during the <b>Flow Check</b> state by cracking a downstream union.</p> <p>Remove the shock shield from the lower controller circuit board &amp; check for 120VAC between <b>Solenoid L&amp;N</b> terminals during the <b>Flow Check</b> state.</p> <p>If no AC solenoid power, verify solenoid wiring &amp; coil not shorted &amp; replace the solenoid fuse.</p> <p>It's the brown 1A fuse in the white socket above the blue RUN light. <a href="http://www.digikey.com">www.digikey.com</a> Part# 7500412</p> <p><b>Primary Water Meter</b></p> <p>Verify 3 wires of mixer inlet meter firmly connected to controller terminals <b>+DC Power</b>, 'Q' &amp; Ground <math>\perp</math> terminal.</p> <p>Pull the meter &amp; spin the rotor for 30-60 seconds &amp; verify that Primary Flow shows GPM.</p> <p>There's no easy way to bypass this meter.</p>
<b>No Ext.Run STOP</b>	If a Remote Start problem, jumper controller input terminal 'T' to any adjacent Ground symbol $\perp$ terminal.

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

<p><b>No Feed STOP</b></p>	<p>This fault occurs because the feeder isn't getting confirming pulses from the pump or the flow measuring device on the pump outlet.</p> <p>Verify the wiring is tightly connected to controller input terminal 'R' to and an adjacent Ground symbol <math>\perp</math> terminal.</p> <p>Some devices may also require <b>+DC Power</b>.</p> <p>You can bypass by disconnecting 'R' &amp; then jumpering 'R' terminal to 'Q', stealing pulses from the primary water meter. 'R' won't display correct fed polymer volume, but you'll be feeding polymer.</p>
<p><b>Mixer @ Max%</b></p>	<p>Reduce the Dilution flow GPM.</p> <p>OR Increase the Primary flow GPM.</p> <p>Either change lowers the mixer polymer concentration.</p> <p>You can also reduce the Local or Remote setpoint, although that's usually a less desirable fix.</p>
<p><b>Pump @ MaxFeed</b></p>	<p>Decreasing the Primary flow GPM and or the Dilution flow GPM will reduce the pump feed rate.</p> <p>Verify that the actual pump matches the pump set in the feeder and that the maximum pump capacity is set correctly both in the pump and within the feeder.</p> <p>As in <b>Mixer @ Max%</b>, you can also reduce the Local or Remote setpoint, although that's usually a less desirable fix.</p> <p>If you need more polymer than the feeder can deliver, consider a pump upgrade.</p>
<p><b>Open Loop Alarms</b></p>	<p>The 4-20mA current output loops will immediately alarm if the loops are not powered and terminated.</p> <p>These alarms have no effect on the operation of the feeder.</p> <p>If you wish to terminate the loops, connect <b>+DC Power</b> to either or both current output '+' terminal(s) and connect the '-' terminal(s) to any Ground symbol <math>\perp</math> terminal</p>

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

<b>Feeder Alarms</b>	<p>All of the feeder inputs and outputs can have alarms set on value, volume, time...</p> <p>These alarms will not prevent polymer feed but may be used to flag operational, setpoint, usage or maintenance problems.</p>
<b>Exceeding 1% or 10%</b>	<p>For Inline mode if the pump speed % or 4-20 mA input G causes high concentration it will display Exceeding 1% for emulsion polymer and 10% for Mannich. Enter a lower percent speed or decrease the 4-20 mA input.</p>

### 3.0 SPARE PARTS & PREVENTIVE MAINTENANCE

#### 3.1 DELTA (DLTA) Pump Spare Parts

P/N:      Description:

1027082 DLTA1020 Spare Parts Kit\*\*  
1000249 DLTA1020 Diaphragm  
1017393 DLTA1020 Liquid End

1027083 DLTA0730 Spare Parts Kit\*\*  
1000250 DLTA0730 Diaphragm  
1017404 DLTA0730 Liquid End

1027084 DLTA0450 Spare Parts Kit\*\*  
1000251 DLTA0450 Diaphragm  
1025138 DLTA0450 Liquid End

\*\*Spare Parts Kit above includes the following:

- (1) Diaphragm
- (1) Suction Valve Set
- (1) Discharge Valve Set
- (2) Ball Valves (Check)
- (1) Set of O-rings
- (1) Connector Set

#### 3.2 SEEPEX Pump Spare Parts

Consult Factory

#### 3.3 PVC Mixing Chamber Spare Parts

P/N:      Description:

7746474 Seal, Mech, Shaft, 1/2", ProMix-U  
7747244 Injection Valve, SG, ProMix  
7746491 O-Ring, Chamber, Viton, ProMix-M  
7500346 PVDF Insert - 1/16 NPT x 3/16 Hose Barb (*Seal Failure Fitting*)  
7037004 Tubing PVC 3/16" x 1/4" (*Seal Failure Tubing*)



## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### 3.4 Piping Components Spare Parts

P/N:      Description:

1019883 1/2" PVC Back Pressure/Pressure Relief Valve SOC pfc  
7745788 0-160PSI, Gauge, SS, 2-1/2, Bottom MTD  
7746152 0-160PSI 316SS Back gauge & CPVC/PTFE Isolator  
7744091 1/2" ID PVC Nylobraid Hose  
7741354 1/2" SS Hose Clamp  
7740541 1/2" PVC Hose Barb Adapter H x MNPT

### 3.5 Control Panel Spare Parts

P/N:      Description:

7747276 C3C Overload 10-16 Amps Adjustable  
7746223 CBI UL 489 Circuit Breaker 20 Amp  
7500413 Littlefuse 2.5A 250V for Circuit Board  
7746094 GLD2 Time Delay Fuse

### 3.6 Maintenance and Lubrication Schedule

MAINTENANCE		
Description / Task	Remarks	Frequency
Visual inspection of unit		Weekly
Check dosing line fittings and valves for tightness		Every 3 Months (Approx 30% continuous operation.)
Verify equipment is operating properly	No leaks or abnormal noises	Weekly
Check the electrical connections for integrity		Quarterly
Check tubing for wear or cuts		Weekly
Check Mixing Chamber Motor amperage. Check fan cover for obstruction or Dirt		Monthly
Check dosing diaphragm for damage (Delta Pump)		Every 3 Months (Approx 30% continuous operation.)
Check the liquid end for tightness (Delta Pump)	Torque Settings for screws 40 - 44 in/lb	Every 3 Months (Approx 30% continuous operation.)
Check leakage rate and tighten/loosen packing to allow 1-6 drops per minute (Seepex Pump)	Adjust tightening nuts only 1/2 turn per minute until stabilized	Weekly
Check flow pump rate at rated pressure (Seepex Pump)	Replace Rotor/stator as required	Weekly
Check Bearing End play and Temperature. Change Grease (Seepex Pump)	See Lubrication Chart	Monthly (3,000 Operation Hours)

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

MAINTENANCE		
Description / Task	Remarks	Frequency
Check Universal Joint Seal, Bushing and joint integrity. Replace Grease (Seepex Pump)	See Lubrication Chart	Upon rotor/stator replacement
Check Motor RPM/amperage. Drain. Check fan cover for obstruction or Dirt (Seepex Pump)		Monthly
Check Gear reducer temperature and oil level (Seepex Pump)	See Lubrication Chart	Monthly
Change Gear reducer oil (Seepex Pump)	See Lubrication Chart	3 Years
Short Term – Flushing of Piping & Chamber	24 Hour Shut Down	Run 60 Second Flush
Long Term – Flushing of Piping & Chamber	24 Hour + or if large amount of polymer is dosed into chamber w/o water running	Run Water until piping is visibly clear in static mixer

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

LUBRICATION		
Description / Task	Lubrication	Frequency
Mixing Chamber Motor 3/4 Hp (See Chart Below)	Ball Bearing Grease	5,000 Hours of Service per Year
Check Gear Reducer Oil Level (Seepex Pump)	210cSt @ 40°C (Gulf EP Lube-S 100 or equal)	Weekly
Change Gear Reducer Oil Level (Seepex Pump)	210cSt @ 40°C (Gulf EP Lube-S 100 or equal)	3 Years
Repack Motor Bearing w/Grease	Gulf EP No. 2 or equal	3 Years
Repack Pump Bearing	Shell Alvania EP 2 or equal	3,000 Operating Hours
Repack Pump Universal Joints	Seepex Grease Type 30321 "ONLY"	Rotor Replacement or 10,000 operating hours whichever is first

### Mixing Chamber Motor Details:

#### Lubrication

This is a ball bearing motor. The bearings have been lubricated at the factory. Motors that do not have regrease capability are factory lubricated for the normal life of the bearings.

#### Relubrication Intervals (For motors with regrease capability)

New motors that have been stored for a year or more should be relubricated. Lubrication is also recommended at these intervals:

#### Relubrication Intervals

NEMA (IEC) Frame Size	Rated Speed (RPM)			
	3600	1800	1200	900
Up to 210 incl. (132)	5500Hrs.	12000Hrs.	18000Hrs.	22000Hrs.
Over 210 to 280 incl. (180)	3600Hrs.	9500Hrs.	15000Hrs.	18000Hrs.
Over 280 to 360 incl. (225)	*2200Hrs.	7400Hrs.	12000Hrs.	15000Hrs.
Over 360 to 5000 incl.(300)	*2200Hrs.	3500Hrs.	7400Hrs.	10500Hrs.

\* Lubrication interval for 6313 or 6314 bearings that are used in 360 through 5000 frame, 2 pole motors. If roller bearings are used, bearings must be lubricated more frequently, divide the interval by 2.

#### Lubricant

Baldor motors are pregreased, normally with Polyrex EM (Exxon Mobil). If other greases are preferred, check with a local Baldor Service Center for recommendations.

#### Procedure

Clean the grease fitting (or area around grease hole, if equipped with slotted grease screws). If motor has a purge plug, remove it. Motors can be regreased while stopped (at less than 80°C) or running.

Apply grease gun to fitting (or grease hole). Too much grease or injecting grease too quickly can cause premature bearing failure. Slowly apply the recommended amount of grease, taking 1 minute or so to apply. Operate motor for 20 minutes, then reinstall purge plug if previously removed.

Caution: Keep grease clean. Mixing dissimilar grease is not recommended.


#### Amount of Grease to Add

Frame Size NEMA (IEC)	Weight of grease to add ounce (gram)	Volume of grease to add	
		inches <sup>3</sup>	teaspoon
Up to 210 incl. (132)	0.30 (8.4)	0.6	2.0
Over 210 to 280 incl. (180)	0.61 (17.4)	1.2	3.9
Over 280 to 360 incl. (225)	0.81 (23.1)	1.5	5.2
Over 360 to 5000 incl.(300)	2.12 (60.0)	4.1	13.4

## Appendix A – DB & PB Series Bill of Material

### Mechanical & Electrical List

General Mechanical Layout  
ProMix M DB

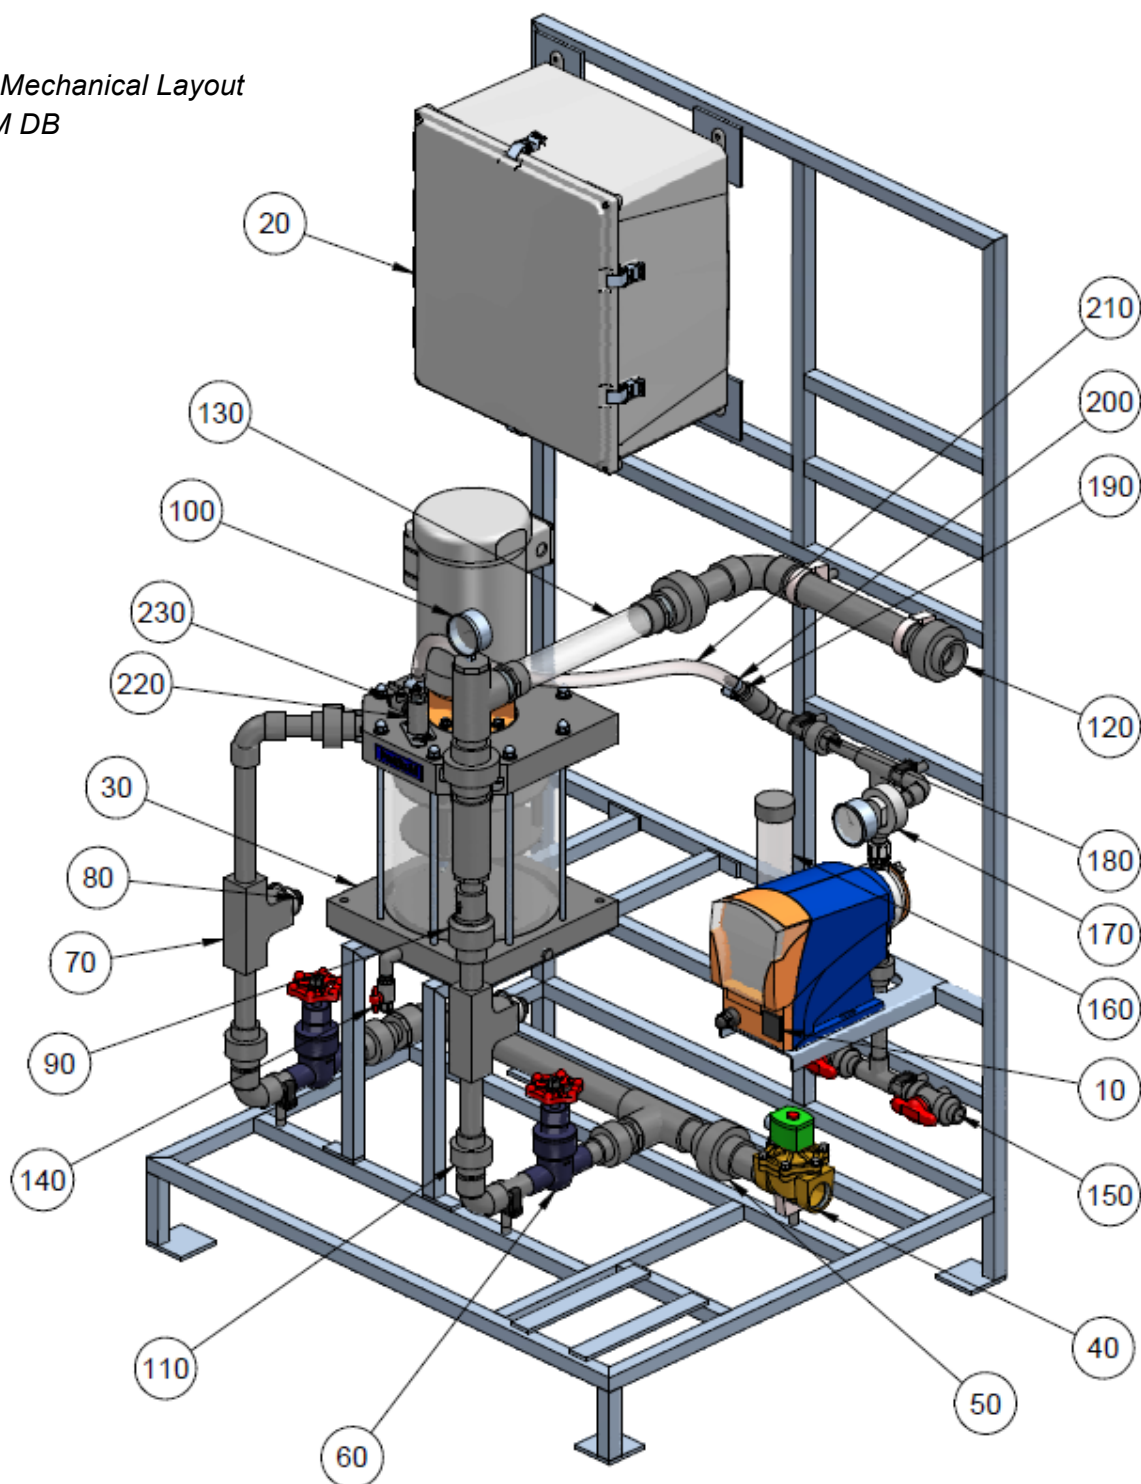

PROMIX M DB


## PROMIX M (DB SERIES) BILL OF MATERIAL

			1048382	1048383	1048384	1048385
ITEM	PART DESCRIPTION	PART NO.				
10	DELTA 1020 SERIES PUMP ON HV2 SETTING	DLTA1020PVT4600UD4031EN0	X			
	DELTA 1020 SERIES PUMP	DLTA1020PVT4600UD4031EN0		X		
	DELTA 0730 SERIES PUMP	DLTA0730PVT4600UD4031EN0			X	
	DELTA 0450 SERIES PUMP	DLTA0450PVT3600UD4031EN0				X
20	CONTROL PANEL	1048418	X	X	X	X
30	PROMIX M MIXING CHAMBER	7747253	X	X	X	X
40	SOLENOID VALVE, 1-1/2", FNPT, BRASS	7746526	X	X	X	X
50	UNION, 1-1/2", SOCKET, PVC/VITON, SCH. 80	7744564	X	X	X	X
60	GLOBE VALVE, 1", SOCKET, PVC/EPDM	1048407	X	X	X	X
70	TEE, FLOW SENSOR, 1" SKT, PVC	1048506	X	X	X	X
80	FLOW SENSOR, 3/4"	7746524	X	X	X	X
90	CHECK VALVE, 1", SKT, PVC	1048408	X	X	X	X
100	PRESSURE GAUGE, 316 SST, 0-100PSI	7741084				X
	PRESSURE GAUGE, 316 SST, 0-160PSI	7745788	X	X	X	
110	UNION, 1", SOCKET, PVC/VITON, SCH. 80	7744563	X	X	X	X
120	UNION, 1-1/2", FNPT, PVC/VITON, SCH. 80	7744559	X	X	X	X
130	STATIC MIXER, 1-1/2", MNPT, CLEAR PVC, SCH. 40, 6 ELE	7746529	X	X	X	X
140	LAB COCK, 1/4", FNPT, PVC/VITON	7746331	X	X	X	X
150	BALL VALVE, 1/2", PVC/VITON, SCH. 80, TYPE 21	7000309	X	X	X	X
160	CALIBRATION COLUMN, PVC, 500mL	7500139	X	X	X	X
170	PRESSURE GAUGE, 316SST, CPVC/PTFE ISOLATOR, 0-100PSI	7746151				X
	PRESSURE GAUGE, 316SST, CPVC/PTFE ISOLATOR, 0-160PSI	7746152	X	X	X	
180	UNION, 1/2", SOCKET, PVC/VITON, SCH. 80	7744562	X	X	X	X
190	HOSE BARB ADAPTER, 1/2" ID TUBING X MNPT, PVC	7740541	X	X	X	X
200	HOSE CLAMP, 1/2", SST	7741354	X	X	X	X
210	TUBING, 1/2" ID, PVC, NYLOBRAID	7744091	X	X	X	X
220	INJECTION VALVE	7747244	X	X	X	X
230	BLEED VALVE, 1/8", PVC/VITON	7747237	X	X	X	X



## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

General Mechanical Layout  
ProMix M PB

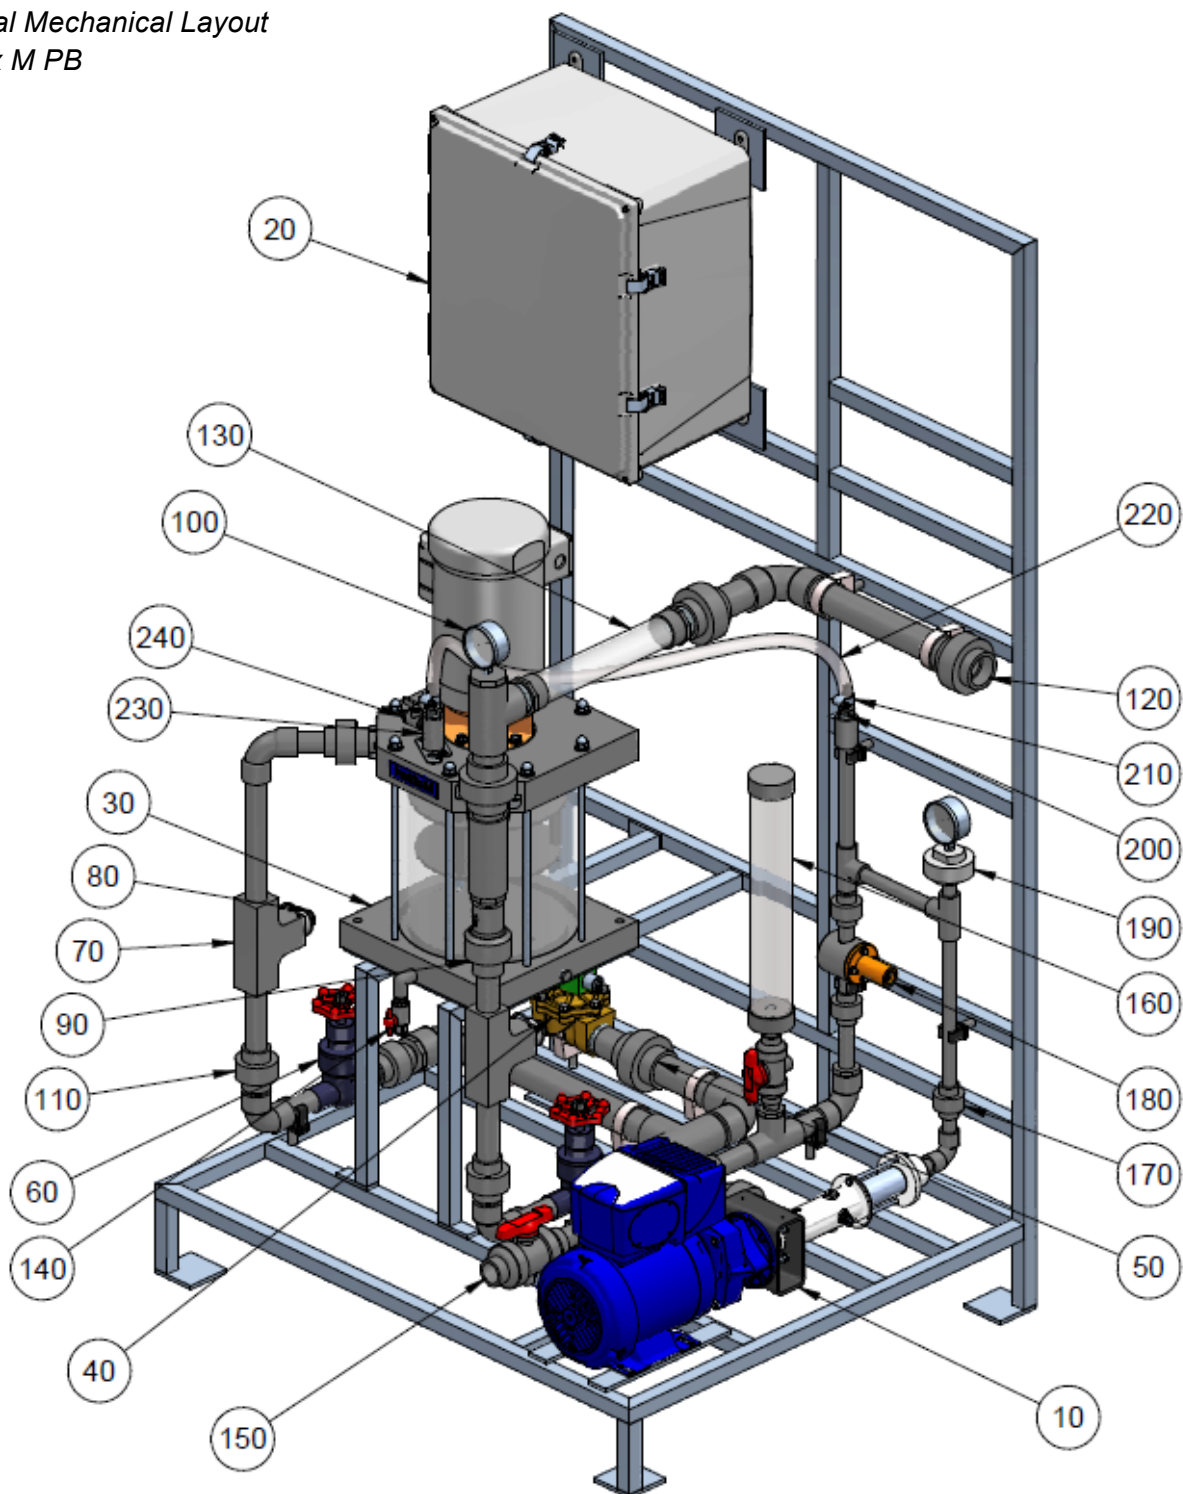

PROMIX M PB




## PROMIX M (PA SERIES) BILL OF MATERIAL

ITEM	PART DESCRIPTION	PART NO.	<div>1048386</div> <div>1048387</div> <div>1048388</div>		
10	PUMP, 5 GPH, SEEPEX MODEL MD-003-012	1048415	X		
	PUMP, 10 GPH, SEEPEX MODEL MD-006-012	1048416		X	
	PUMP, 24 GPH, SEEPEX MODEL MD-012-012	1048417			X
20	CONTROL PANEL	1048419	X	X	X
30	PROMIX M MIXING CHAMBER	7747253	X	X	X
40	SOLENOID VALVE, 1-1/2", FNPT, BRASS	7746526	X	X	X
50	UNION, 1-1/2", SOCKET, PVC/VITON, SCH. 80	7744564	X	X	X
60	GLOBE VALVE, 1", SOCKET, PVC/EPDM	1048407	X	X	X
70	TEE, FLOW SENSOR, 1" SKT, PVC	1048506	X	X	X
80	FLOW SENSOR, 3/4"	7746524	X	X	X
90	CHECK VALVE, 1", SKT, PVC	1048408	X	X	X
100	PRESSURE GAUGE, 316 SST, 0-160PSI	7745788	X	X	X
110	UNION, 1", SOCKET, PVC/VITON, SCH. 80	7744563	X	X	X
120	UNION, 1-1/2", FNPT, PVC/VITON, SCH. 80	7744559	X	X	X
130	STATIC MIXER, 1-1/2", MNPT, CLEAR PVC, SCH. 40, 6 ELE	7746529	X	X	X
140	LAB COCK, 1/4", FNPT, PVC/VITON	7746331	X	X	X
150	BALL VALVE, 1", PVC/VITON, SCH. 80, TYPE 21	7741335	X	X	X
160	CALIBRATION COLUMN, PVC, 500mL	7500139	X	X	
	CALIBRATION COLUMN, PVC, 1000mL	7500130			X
170	UNION, 1/2", SOCKET, PVC/VITON, SCH. 80	7744562	X	X	X
180	BACK PRESSURE VALVE, 1/2", SOCKET, PVC, 0-150 PSI	1019883	X	X	X
190	PRESSURE GAUGE, 316SST, CPVC/PTFE ISOLATOR, 0-160PSI	7745318	X	X	X
200	HOSE BARB ADAPTER, 1/2" ID TUBING X MNPT, PVC	7740541	X	X	X
210	HOSE CLAMP, 1/2", SST	7741354	X	X	X
220	TUBING, 1/2" ID, PVC, NYLOBRAID	7744091	X	X	X
230	INJECTION VALVE	7747244	X	X	X
240	BLEED VALVE, 1/8", PVC/VITON	7747237	X	X	X

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

P/N: 7747253 Mixing Chamber Components

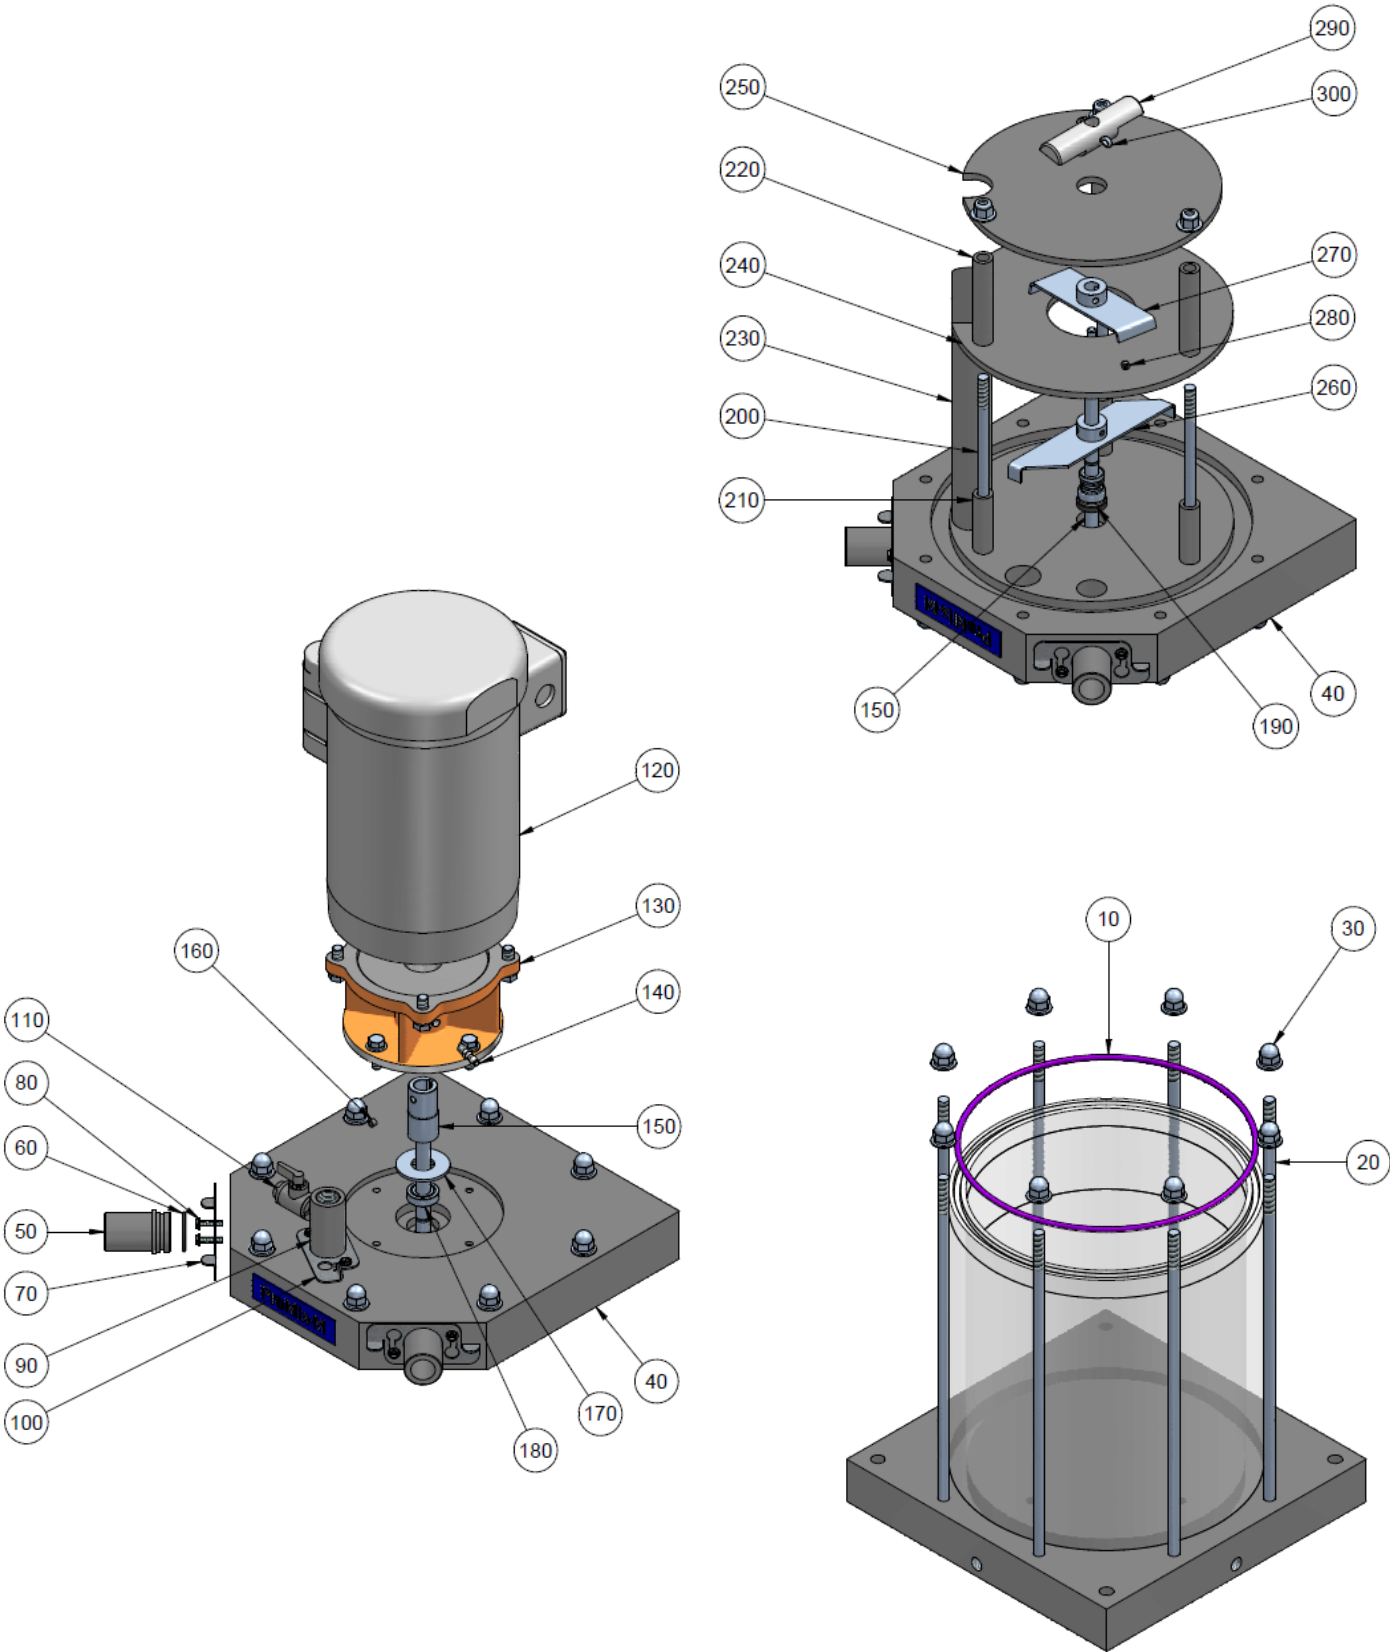

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

### PROMIX M - MIXING CHAMBER BILL OF MATERIALS P/N: 7747253

ITEM #	USA PIN	QTY.	DESCRIPTION
10	7746491	1	O-RING, CHAMBER, VITON, PROMIX-M
20	7747246	8	ROD, 316SS, 3/8-16 X 14.75, PROMIX-U
30	7746492	8	NUT, ACORN, 3/8-16, 18-8 SST
40	7747252	1	PLATE, TOP, PVC, 1.75, PROMIX-M, SG
50	7747270	2	INSERT, MALE, 1", PVC, PROMIX-M
60	7747288	2	O-RING, VITON, 1.174 ID X .103 CS, AS568B-123
70	7747272	2	RETAINER, MALE INSERT, 1", 316 SST, PROMIX-M
80	7747238	6	SCREW, 10-24X3/4", 18-8, HEX HEAD WITH WASHER
90	7747244	1	INJECTION VALVE, SG, PROMIX
100	7747239	1	RETAINER, INJECTION VALVE, 316 SST
110	7747237	1	VALVE, BALL, 1/8", MNPT X FNPT, PVC, VITON
120	7747245	1	MOTOR, 1 HP, TEFC, 115/230 VAC, 1 PH, 56C, BALDOR VWDL3510
130	7746478	1	FLANGE, MOTOR, C56/135, PROMIX-M
140	7500346	1	HOSE BARB, 1/16" MNPT X 3/16" ID, PVDF
150	7746484	1	SHAFT, MIXER, 303SS, PROMIX-M
160	851405	1	SCREW, SET, 316SS, 1/4-28 PROMIX-U
170	7746473	1	WASHER, 316SS, 1.88X.81X.09, PROMIX-M
180	7746472	1	BEARING, 440SS, 1.125X.5X.31, PROMIX-M
190	7746474	1	SEAL, MECH, SHAFT, 304SS, 1/2", PROMIX-U
200	7746497	3	ROD, 316SS, 3/8-16 X 8, PROMIX-M
210	7747249	3	SPACER, TOP BAFFLE, PROMIX-M
220	7747248	3	SPACER, BOTTOM BAFFLE, PROMIX-M
230	7747247	1	PIPE, DISCHARGE, PVC, 3/4", PROMIX-U
240	7747251	1	BAFFLE, TOP, PVC, .25, PROMIX-S
250	7747250	1	BAFFLE, BOTTOM, PVC, .25, PROMIX-S
260	7746482	1	BLADE, PRIMARY, 316SS, PROMIX-M
270	7746483	1	BLADE, SECONDARY, 316SS, PROMIX-M
280	7746476	4	SCREW, SET, 316SS, 1/4-28 PROMIX-U
290	7746481	1	PROP, AGITATOR, CPVC, PROMIX-M
300	7746475	1	PIN, COTTER, 316 SST, 3/16 D X 1-1/4 L, MCMaster 98355A235


Appendix B – Control Panel “B Controls”

B.1 Controller Board Layout

The controller consists of three circuit boards, a front **Measure** circuit board, a back **Power** board, and an auxiliary digital input board.

The front, **Measure** circuit board supports 7 sensor inputs & 8 digital Inputs.

It includes a 2 line x 16 character LCD display, USB Type 'B' jack and a microcontroller module.

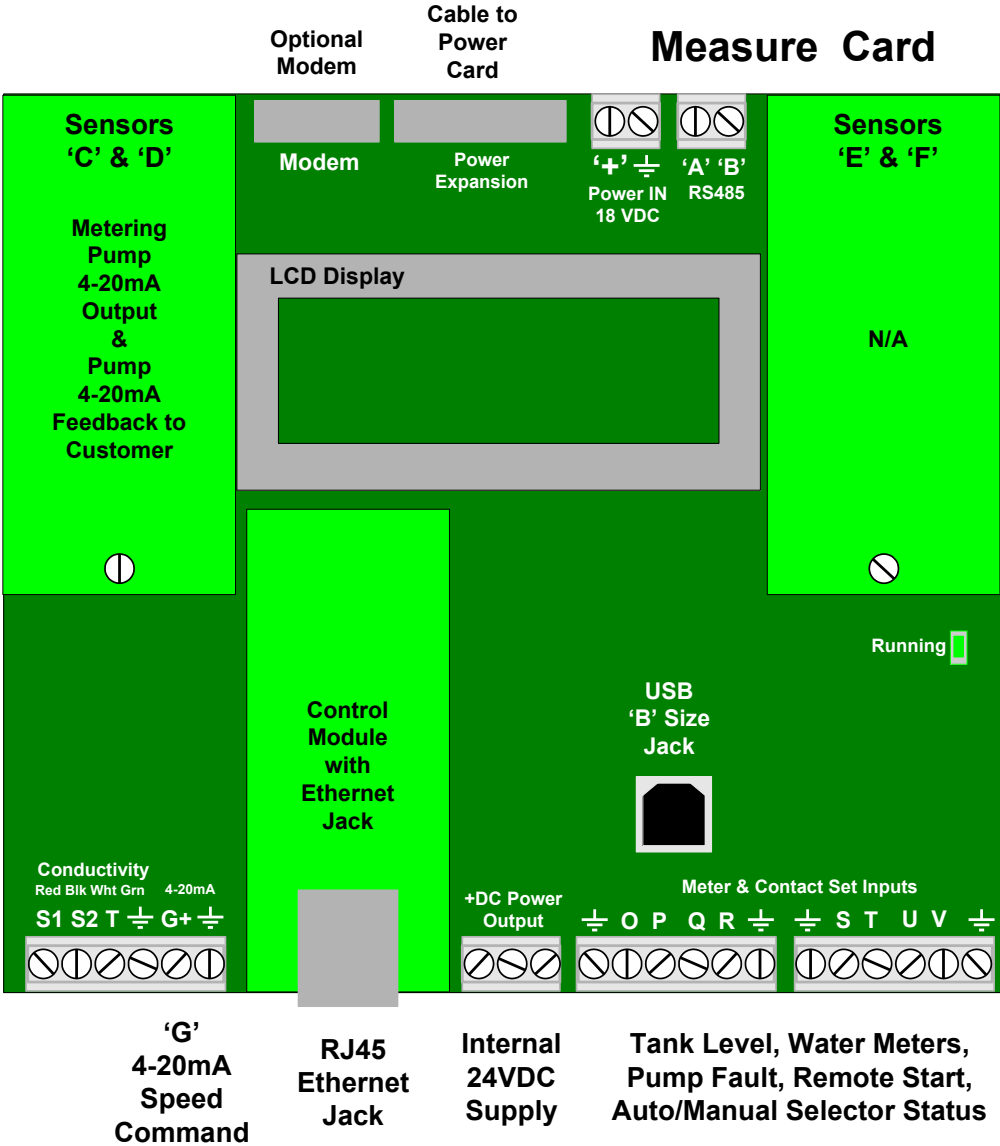


*\*\*Ethernet CAT5 LAN cabling is limited to a maximum of 300ft / 100m from controller to access hub. Do not exceed this limit.\*\**

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

Terminals 'O' through 'V' and a ground terminal. 5VDC limited by 10K puts 1/2mA through a closed contact set.


Hall effect Turbines and Paddlewheel water meters are powered by the 15-22VDC controller supply, thermally fused at 100mA.

The back, **Power** circuit board has 5 ON/OFF Power Relays, 4 Signal Frequency Feed outputs and the controller power supply.

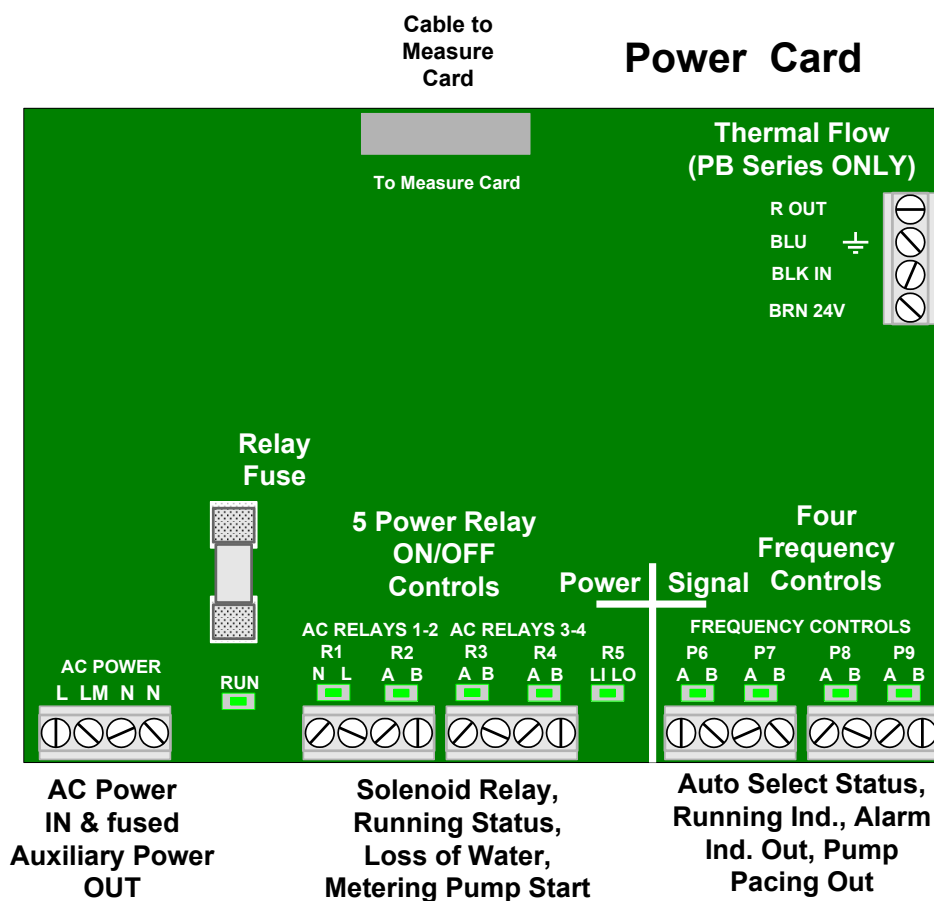

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

Auxiliary digital input card – only PTF and S2 required for Batch or Inline control. Connect cable from Digital card J1 to Measure Card J2.



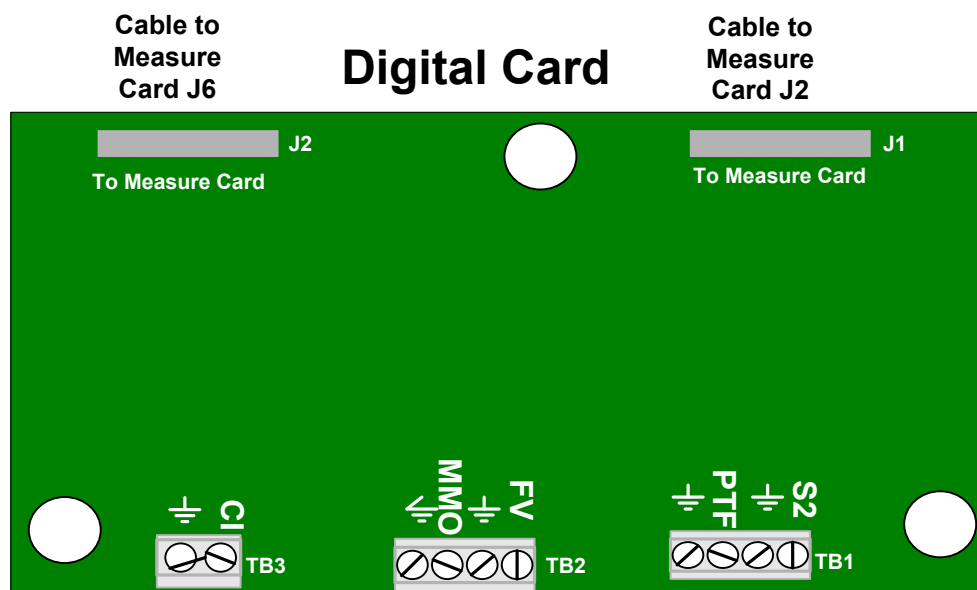


**CI** -  
configurable  
input  
(sometimes  
used for tank  
level)

**MMO** – mixer motor  
overload  
**FV** – feed  
verification


**PTF** - pump failure  
**S2** - interface to  
Polymer Pump door  
switch

## B.2 Controller Wiring (DB/PB Series)

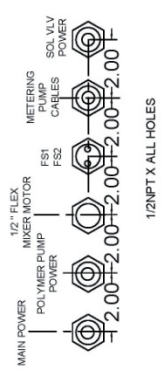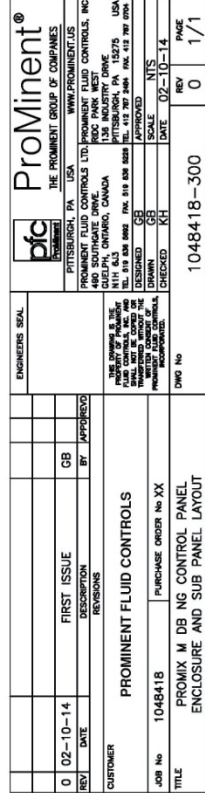




DWG No	1048418-301	REV	0
--------	-------------	-----	---

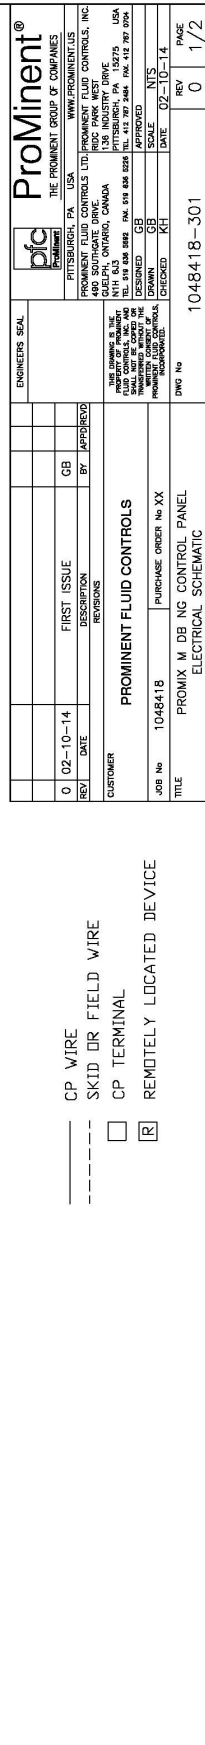



## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

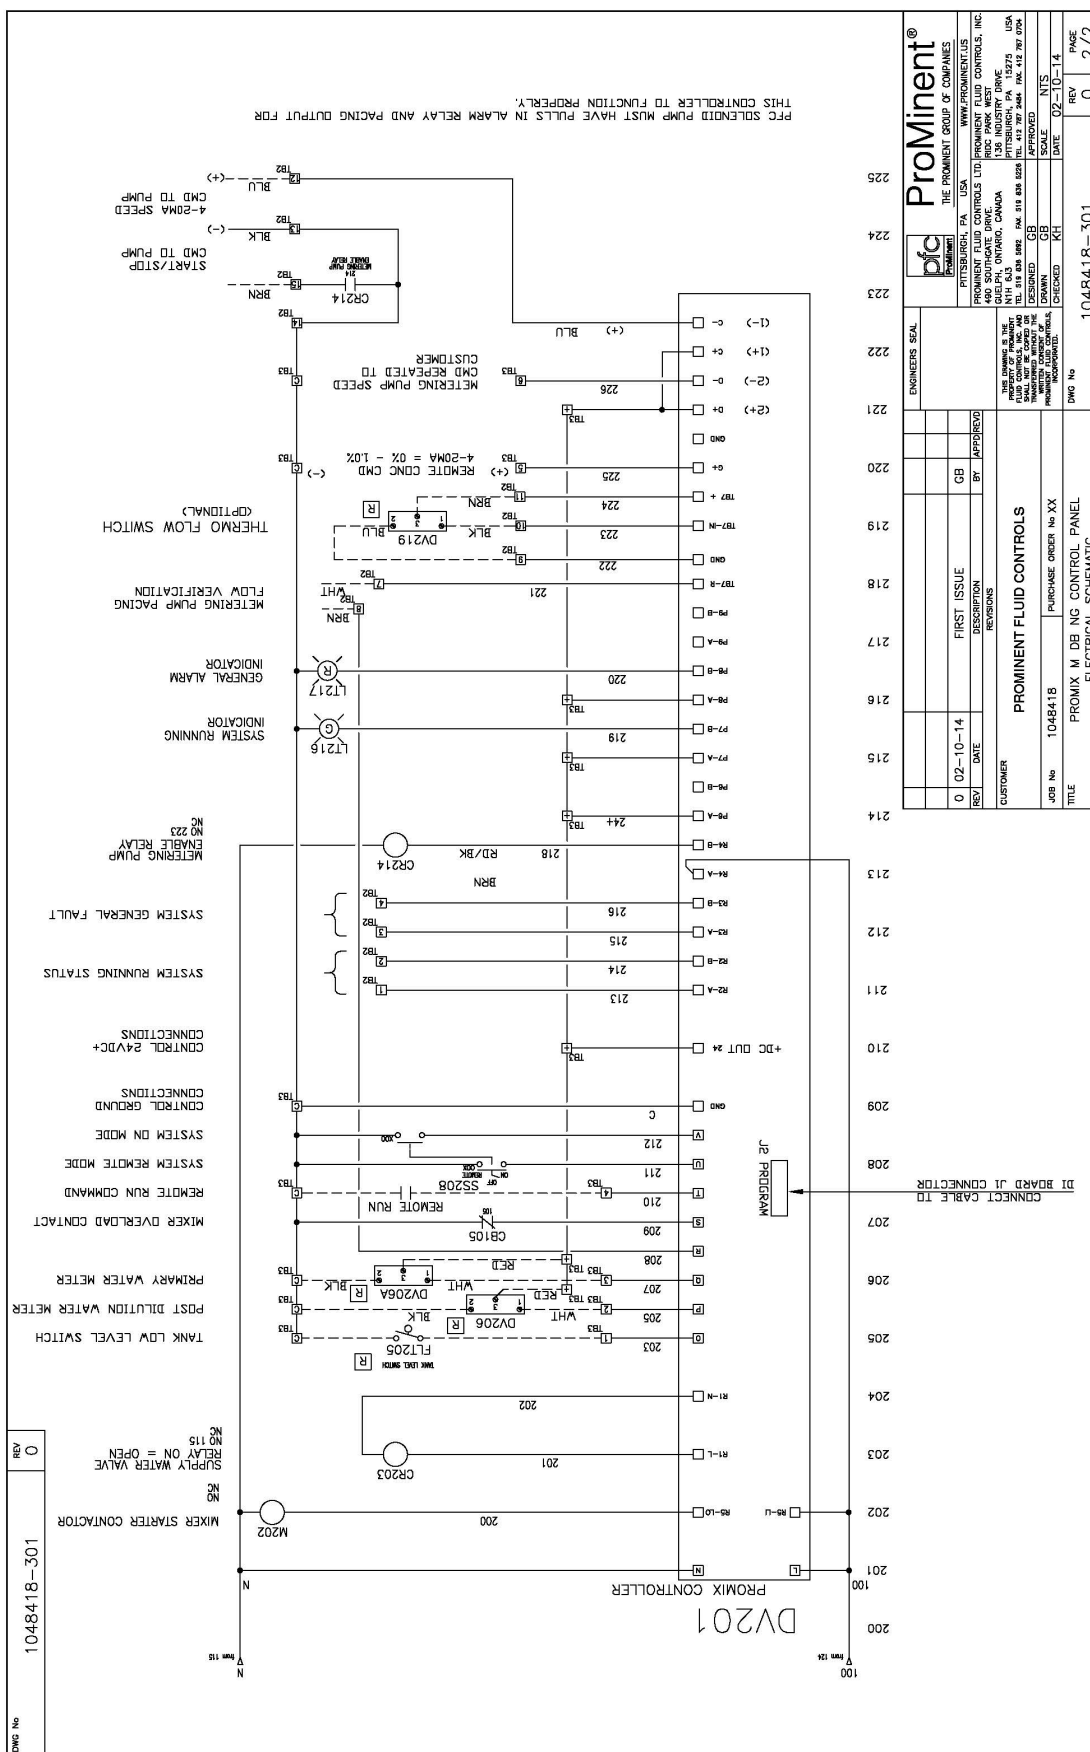


DWG No	REV
1048418-302	0



[illegible]

DWG No	1048418-303	REV	0
--------	-------------	-----	---


[illegible]

	<b>ProMinent®</b> THE PROMINENT FOUNT OF COMMERCE		ATTENTION: PA, USA WWW.PROMINENT.US	
	PROMINENT FLUID CONTROLS LTD. PROMINENT FLUID CONTROLS, INC. 480 SOUTHDALE DRIVE RICO PARK WEST GUELPH, ONTARIO, CANADA L3B 1H9 INDUSTRY DRIVE 2725 USA TEL: 519 836 0888 FAX: 519 836 0889 TEL: 417 767 2464 FAX: 417 767 2074			
DESIGNED	GB	APPROVED	NTS	
DRAWN	GB	SCALE	DATE	
CHECKED	KH		02-10-14	
REV			0	PAGE 1


DWG No	1048419-300	REV	0
--------	-------------	-----	---

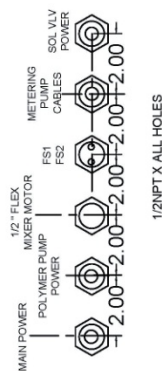


LABEL LEGEND


[illegible]

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

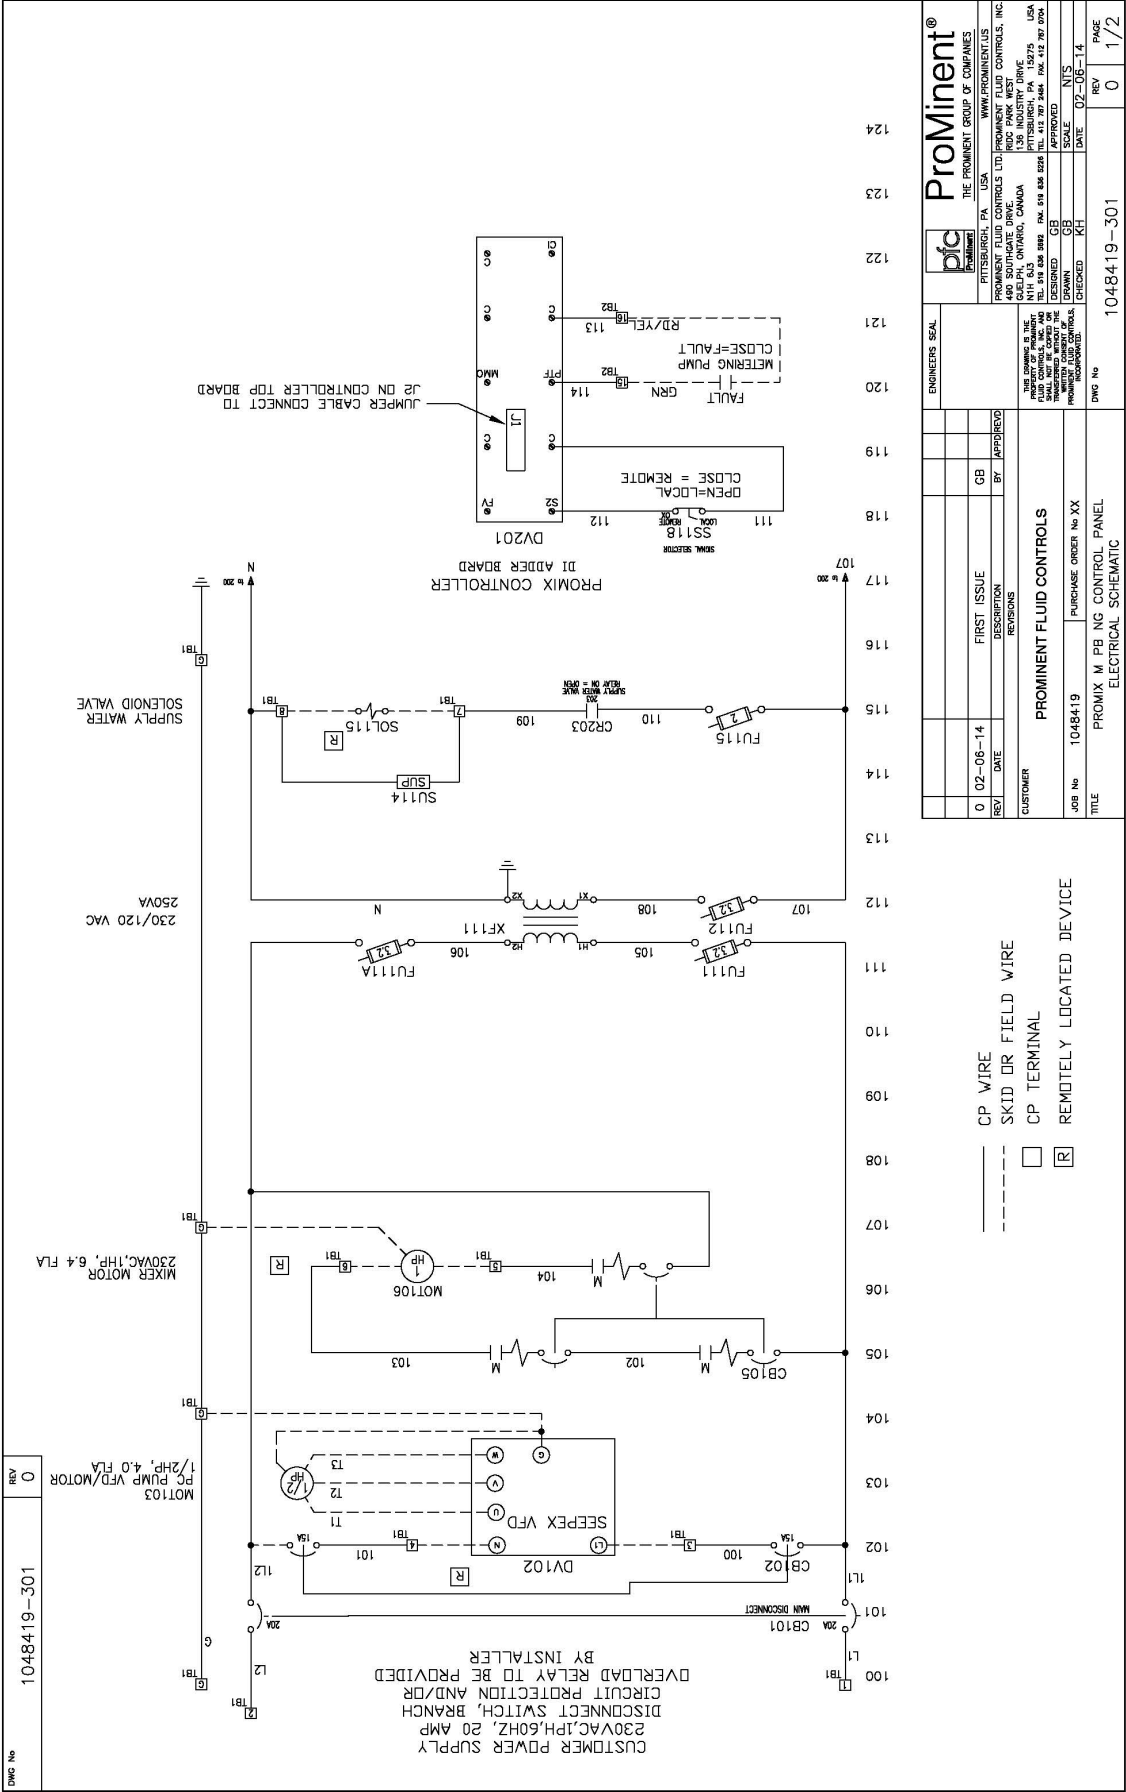

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

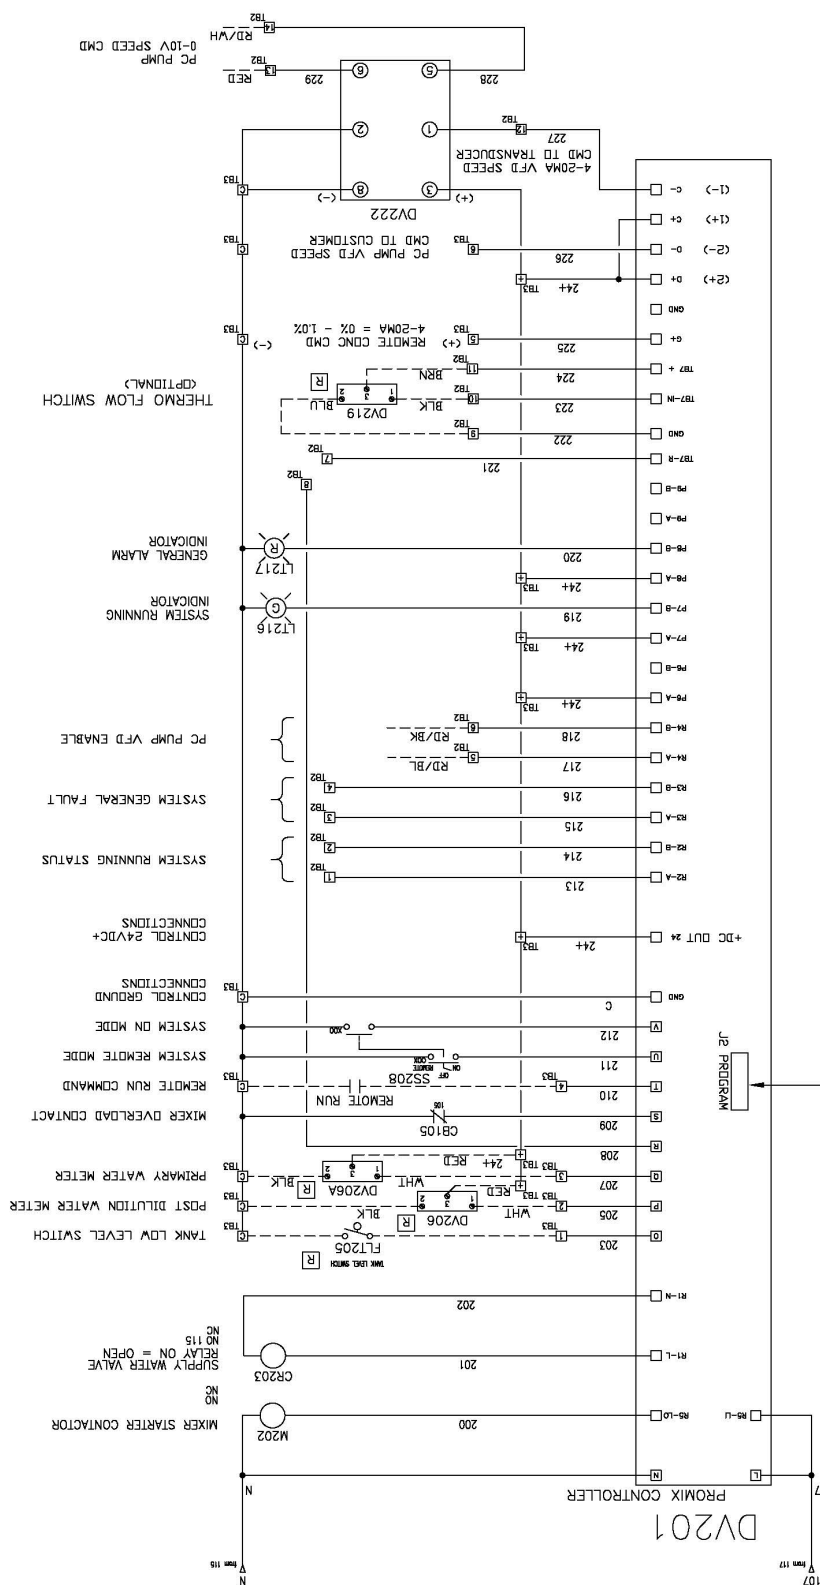


ENGINEERS SEAL				PITTSBURGH, PA		USA	www.prominent.us	
02-06-14		REV	DATE	FIRST ISSUE	GB	BY	APPROVED	
DESCRIPTION RNDG								
CUSTOMER								
PROMINENT FLUID CONTROLS LTD 138 INDUSTRY DRIVE GUELPH, ONTARIO, CANADA N1H 6M6 TEL: 519 836 5862 FAX: 519 836 5205 TOLL FREE: 1-800-387-2644 FAX: 1-877-797-2704								
THIS DRAWING IS THE PROPERTY OF PROMINENT FLUID CONTROLS, INC. AND IS NOT TO BE REPRODUCED WITHOUT THE WRITTEN PERMISSION OF PROMINENT FLUID CONTROLS, INC.								
JOB No 1048419				PURCHASE ORDER No XX		APPROVED		
TITLE				PROMIX M PB NC CONTROL PANEL ELECTRIC SCHEMATIC		DESIGNED GB DRAWN GB CHECKED KET		DATE 02-06-14
DMD No 1048419-301				REV 0		PAGE 2/2		

CONNECT CABLE TO  
DI BOARD J1 CONNECTOR



1048419-302	REV 0
-------------	----------

[illegible]

ProMinent ProMix 'DA' & 'PA' Polymer Feeder

DWG No 1048419-303 REV 0

QTY	SUB	CATALOG	MFG	DESCRIPTION
1		7747278	INTEGRA	POLYCARBONATE ENCLOSURE CUSTOM MFG
1		7747193	INTEGRA	PAINTED CARBON STEEL SUB PANEL
1		7747276	C3 CONTROLS	TYPE E DIRECT ON LINE STARTER COMPLETE
1		7745286	SOD	CIRCUIT BREAKER - MINATURE 2-POLE CIRCUIT BREAKER 20AMPS, 10KAIR UL LISTED
1		7745285	SOD	CIRCUIT BREAKER - MINATURE 2-POLE CIRCUIT BREAKER 15AMPS, 10KAIR UL LISTED
1		7746411	AB	HL TYPE TERMINAL BLOCK RELAY 110-125VAC/VDC 2 FORM C, 10A, DPDT, ELECTROMECHANICAL RELAY
1		7745052	AUTO DIRECT	FUSE TERMINAL BLOCK 1/4" X 1/4" GLASS 30AMPS, 600V UL APPROVED
1		7746094	FERRAZ/SHAWMUTT	TIME DELAY GLASS FUSE 1/4" X 1/4" 250 VAC, 2 AMP @ 250 VAC 7746094
1		7746766	PHOENIX CONTACT	2813538 MCR-C-U/-4-DC SIGNAL CONVERTER PS 24VDC INPUT:4-20MA OUTPUT:0-10VDC 3 WAY ISOLATION
1		7746395	SOD	GREEN PILOT LIGHT - STANDARD, NEMA 4/4X/13 30.5mm, 24VAC/VDC FULL VOLT PLASTIC PRESNEL LENS, CORROSION RESISTANT
1		7746394	SOD	RED PILOT LIGHT - STANDARD, NEMA 4/4X/13 30.5mm, 24-28VAC/VDC FULL VOLT PLASTIC PRESNEL LENS, CORROSION RESISTANT
1		7745921	SOD	SELECTOR SW - 2 POS MAINT 30.5mm TYPE, TYPE 4.4X.13 BLACK KNOB, 1 NO 1 NC, 30.5mm TYPE, TYPE 4.4X.13
1		7745915	SOD	SELECTOR SW - 3 POS MAINT, NEMA 4.4X.13 30.5mm, BLACK KNOB, 2 NO 2 NC, CAM TYPE C, CONTACT POSITION: 1-KA1, 2-KA1
1	SU114	7745305	LITTELFUSE	SURGE SUPPRESSOR 115 VAC RMS, CLAMP 300V METAL OXIDE VARISTOR
1		7746744	PHOENIX CONTACT	21LEVEL TERMINAL BLOCK - UK 5 MULTI-LEVEL, 32AMPS GRAY, 0.2-4MM <sup>2</sup> , 26-10 AWG DP-UKK 3/5 - UKKS SPACER
1		7746746	PHOENIX CONTACT	0-UKK 3/5 - UKKS END PLATE MULTI-LEVEL
24	TB2	7746748	PHOENIX CONTACT	UNIVERSAL TERMINAL BLOCK - UK 5 N FEED-THROUGH, 41AMPS GRAY, 0.2-4MM <sup>2</sup> , 30-10 AWG
4	TB1	7746750	PHOENIX CONTACT	UNIVERSAL GROUND TERMINAL BLOCK - USLKG 5 FEED-THROUGH GROUND GREEN-YELLOW, 0.2-4MM <sup>2</sup> , 26-10 AWG
4		7746751	PHOENIX CONTACT	END BRACKET - E/N 35 N GRAY, FOR THE NS 35 DIN RAIL 9.5MM WIDTH
4		7500386	BRADY	PRINTED PLASTIC LABELS 5/8" X 2-1/4" DEVICE LABEL WHITE WITH BLACK LETTERS
1		7746534	PROXIM TYPE B CONTROLLER	PROXIM TYPE B CONTROLLER
1		7745377	PFC	1TB STA-KON SPADE CONNECTORS
1		774273	PFC	22" DISPLAY CABLE
1		774538	PFC	LCD HEADER FOR DISPLAY
7		7760548	PFC	3/8" NYLON HEX #6 THREAD SPACERS
4		7760544	PFC	SCREW 2-56 FLAT PHILLIPS 3/4" LENGTH
3		7760545	PFC	LOCKNUT #2-56 NYLON INSERT
3		7760556	PFC	SCREW #6-32 FLAT HEAD, PLATED 3/4" LENGTH
3		7760575	PFC	LOCKNUT #6-32 NYLON INSERT
3		7760546	PFC	NYLON FLAT WASHER #6
1		7746533	PFC	KEYPAD OVERLAY
6		7745763	PFC	SKINTOP CABLE GLAND 1/2" NPT, UL LISTED
1		911371	PFC	SKIN TOP 1/2" NPT LOCK NUT
AR		53613250	PFC	SKINTOP CABLE GLAND INSERT 2 HOLE
1		7745053	PFC	35MM DIN RAIL
2		7745763	PFC	1/2" NPT SWIVEL CONNECTOR FOR LIQUID TITE
2FT		7745762	PFC	1/2" BLACK LIQUID TITE
1		7747289	PFC	PROMIX DIGITAL INPUT ADD-ON BOARD
1		9070TF250D1	SQD	240-120 TRANSFORMER 250VA

<b>ProMinent®</b>		<b>THE PROMINENT GROUP OF COMPANIES</b>	
<b>ProMinent</b>		<b>ProMinent</b>	
17000000, PA, USA		17000000, PA, USA	
PROMINENT FLUID CONTROLS LTD. PROMINENT CONTROLS, INC.		PROMINENT FLUID CONTROLS LTD. PROMINENT CONTROLS, INC.	
480 SOUTHGATE DRIVE, MIDC PARK WEST		480 SOUTHGATE DRIVE, MIDC PARK WEST	
QUEBEC, ONTARIO, CANADA		QUEBEC, ONTARIO, CANADA	
TEL: 918 838 5882 FAX: 918 838 5286		TEL: 918 838 5882 FAX: 918 838 5286	
TEL: 412 397 2466 FAX: 412 397 2094		TEL: 412 397 2466 FAX: 412 397 2094	
DESIGNED BY		DESIGNED BY	
DRAWN BY		DRAWN BY	
CHECKED BY		CHECKED BY	
DATE		DATE	
SCALE		SCALE	
NTS		NTS	
REV		REV	
PAGE		PAGE	
0		1/1	
1048419-303		1048419-303	
PROMIX M PB NG CONTROL PANEL		PROMIX M PB NG CONTROL PANEL	
BILL OF MATERIAL		BILL OF MATERIAL	



### Appendix C – Polymer Sizing / Dosage

The ProMix M Polymer Pump switch on the controller door enables the user to select either LOCAL or REMOTE operation. In 'LOCAL', the polymer concentration setpoint is selectable from 0 - 1% for emulsion polymer and 0 – 10% for Mannich by using the controller keypad. In 'REMOTE', the polymer concentration is set proportionally by a remote 4-20 mA signal representing 0- 1% for emulsion polymer and 10% for Mannich. It is assumed the pump stroke length is maintained at 100%.

The desired polymer dosage must be considered prior to selecting the ProMix M model and pump speed. Typically the user will know how much polymer is required. This information is from jar tests or from prior experience. Otherwise the dosage can be derived from an initial manual calculation which must be adjusted based upon actual operation.

*Below are typical guidelines to estimate polymer feed dosage:*

1. For a Clarifier / Filter application:

A = MGD Plant Flow

B = ppm active polymer

C = desired solution concentration (%)

$$(A*B)/24 = \text{GPH active polymer}$$

$$\text{GPH active polymer}/C = \text{Required dilution range}$$

2. For a Sludge Dewatering application:

User must have the following information to estimate GPH neat polymer:

A = GPM sludge

B = % solids (concentration)

C = lbs polymer per dry ton

D = percent active polymer

E = desired solution concentration (%)

$$(((A*8.34)*B)*60)/2000 = \text{Tons/Hr dry sludge}$$

$$(((\text{Tons/Hr dry sludge}*C)/8.34)/D)/E = \text{Required dilution range}$$

The polymer concentration from the ProMix M Polymer feeder is based upon the neat polymer pump rate divided by the total water flow through the primary and secondary flow-meters. For example, if the neat polymer feed rate is 1.5 gph and the flow through the primary flow-meter is 15 gpm and the flow through the secondary flow-meter is 10 gpm then the polymer concentration is:

$$((1.5 \text{ gph} / 60) / (15 \text{ gpm} + 10 \text{ gpm})) = 0.001 = 0.1\%$$

Further post dilution is possible with equipment by others.

### Appendix D – Reference Documents

#### Mechanical General Arrangement Drawings:

1048382 -200	ProMix M SG 300X2-2.3DB System
1048383 -200	ProMix M SG 600X2-3.8DB System
1048384 -200	ProMix M SG 1500X2-6.2DB System
1048385 -200	ProMix M SG 1500X2-10.3DB System
1048386 -200	ProMix M SG 1500X2-5.0PB System
1048387 -200	ProMix M SG 1500X2-10.0PB System
1048388 -200	ProMix M SG 1500X2-24.0PB System

#### Electrical Schematic Drawings:

1048418-300	PROMIX M DB NG CONTROL PANEL
1048419-300	PROMIX M PB NG CONTROL PANEL
	Aegis Browser Manual

#### Pump Manuals:

DLTA QSG	Delta Pump Quick Start Guide
986691	Delta Pump Operating Manual
	Seepex Pump Operating Manual

(Provided upon request)

*\*\*Documents noted in this section are not in this manual\*\**

## Appendix E – Operation Modes & Controller Switch Settings

<b>System Start</b> <b>ON-OFF-REMOTE</b> controller door switch	<b>Polymer Pump</b> <b>LOCAL-REMOTE</b> controller door switch	<b>Inline/ Batch</b> mode	<b>Emulsion/ Mannich</b> polymer	<b>PROMIX OPERATION</b>
ON	LOCAL	Inline	Emulsion	Remote Start Contact: N/A Keypad Local Setpoint: 0 – 100% pump speed Remote Setpoint: N/A Max. chamber concentration: 1.0%
ON	LOCAL	Inline	Mannich	Remote Start Contact: N/A Keypad Local Setpoint: 0 – 100% pump speed Remote Setpoint: N/A Max. chamber concentration: 10.0%
ON	LOCAL	Batch	Emulsion	Remote Start Contact: N/A Keypad Local Setpoint: 0 – 1.0% concentration Remote Setpoint: N/A Max. chamber concentration: 1.0%
ON	LOCAL	Batch	Mannich	Remote Start Contact: N/A Keypad Local Setpoint: 0 – 10.0% concentration Remote Setpoint: N/A Max. chamber concentration: 10.0%
ON	REMOTE	Inline	Emulsion	Remote Start Contact: N/A Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0 – 100% pump speed Max. chamber concentration: 1.0%
ON	REMOTE	Inline	Mannich	Remote Start Contact: N/A Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0 – 100% pump speed Max. chamber concentration: 10.0%
ON	REMOTE	Batch	Emulsion	Remote Start Contact: N/A Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0 – 1.0% concentration Max. chamber concentration: 1.0%

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

System Start ON-OFF-REMOTE controller door switch	Polymer Pump LOCAL-REMOTE controller door switch	Inline/ Batch mode	Emulsion/ Mannich polymer	PROMIX OPERATION
ON	REMOTE	Batch	Mannich	Remote Start Contact: N/A Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0-10.0% concentration Max. chamber concentration: 10.0%
REMOTE	LOCAL	Inline	Emulsion	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: 0 – 100% pump speed Remote Setpoint: N/A Max. chamber concentration: 1.0%
REMOTE	LOCAL	Inline	Mannich	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: 0 – 100% pump speed Remote Setpoint: N/A Max. chamber concentration: 10.0%
REMOTE	LOCAL	Batch	Emulsion	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: 0 – 1.0% concentration Remote Setpoint: N/A Max. chamber concentration: 1.0%
REMOTE	LOCAL	Batch	Mannich	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: 0 – 10.0% concentration Remote Setpoint: N/A Max. chamber concentration: 10.0%
REMOTE	REMOTE	Inline	Emulsion	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0–100% pump speed Max. chamber concentration: 1.0%
REMOTE	REMOTE	Inline	Mannich	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: N/A Remote Setpoint: 4-20mA = 0–100% pump speed Max. chamber concentration: 10.0%

## ProMinent ProMix 'DA' & 'PA' Polymer Feeder

<b>System Start</b> <b>ON-OFF-REMOTE</b> controller door switch	<b>Polymer Pump</b> <b>LOCAL-REMOTE</b> controller door switch	<b>Inline/ Batch</b> mode	<b>Emulsion/ Mannich</b> polymer	<b>PROMIX OPERATION</b>
REMOTE	REMOTE	Batch	Emulsion	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0-1.0% concentration Max. chamber concentration: 1.0%
REMOTE	REMOTE	Batch	Mannich	Remote Start Contact: Close=start, open=stop Keypad Local Setpoint: N/A Remote Setpoint: 4-20 mA = 0-10.0% concentration Max. chamber concentration: 10.0%

### System Start

Controller door 3 position selector switch. Determines if controller is enabled locally (ON) or is enabled remotely (REMOTE) by a dry contact to start or stop control action. The middle switch position OFF disables the controller and initiates a flush cycle if this switch is left in this position >2 seconds after first operating in either ON or REMOTE.

### Polymer Pump

Controller door 2 position selector switch. Determines the setpoint for pump control action which can either be pump speed or % concentration. If set to the LOCAL position the setpoint is based on the keypad entry and if set to REMOTE then the setpoint input is from a remote 4-20 mA signal.

### Inline / Batch

The user must choose the mode of operation from a keypad menu selection. Default is Batch mode and the setpoint is % concentration. The polymer pump is automatically adjusted to maintain the desired % concentration regardless of fluctuations of the dilution water flow. Inline mode requires the user to calculate the percent concentration desired and then manually adjust the pump speed based upon the measured dilution water flow rate.

### Emulsion / Mannich

The user must choose the type of polymer being used by the ProMix feeder. If emulsion then a maximum of 1.0% concentration is permitted in the mixing chamber. If Mannich is selected then the maximum is 10.0% concentration. Batch mode will automatically limit the polymer feed to maintain these concentrations.